 



vtech®

Parent's Guide

SWITCH & GO® DiNOS *Chaser the Therizinosaurus*

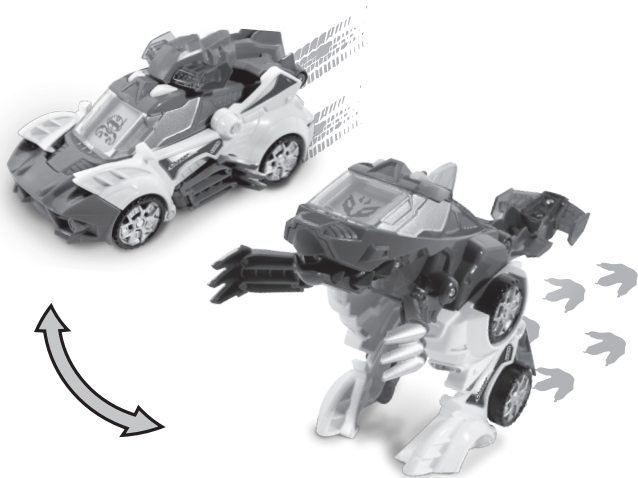

91-003395-005 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **VTech® Switch & Go Dinos® Chaser the Therizinosaurus!** With a few steps, **Chaser the Therizinosaurus** can switch into a police car and back again! Press the Action Button to see Chaser move its claws. By interacting with Chaser, your child can learn fun dinosaur facts as they play!

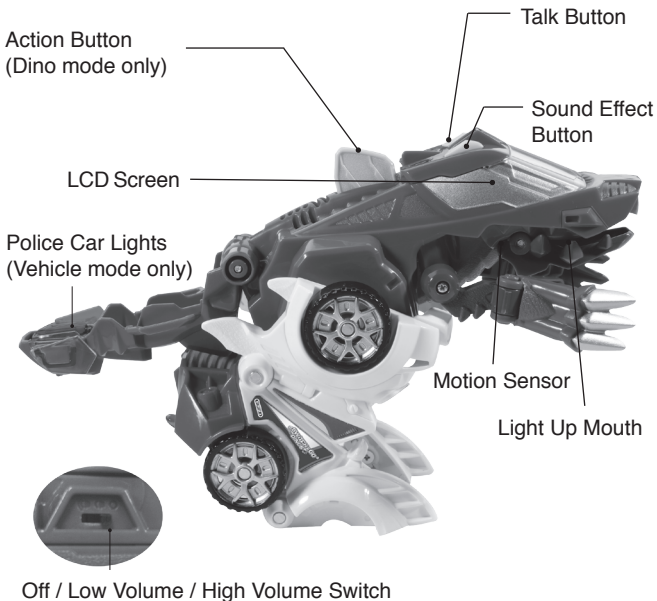

INCLUDED IN THIS PACKAGE

- One VTech® Switch & Go Dinos® Chaser the Therizinosaurus
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it as it contains important information.

 
ATTENTION:

For your child's safety, only use **Chaser the Therizinosaurus** on hard, flat surfaces. Do not put **Chaser the Therizinosaurus** in either configuration on your clothing, body or hair.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure Chaser is turned OFF.
2. Locate the battery cover on the bottom of the panel.
3. Use a screwdriver to open the cover.
4. Install 2 AAA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

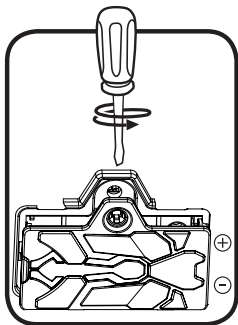

NOTE: If there is no response when Chaser the Therizinosaurus is switched on, please insert new batteries and try switching it on again.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.



 
For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. OFF / LOW VOLUME / HIGH VOLUME SWITCH

Slide the **OFF / LOW VOLUME / HIGH VOLUME SWITCH** to the **LOW VOLUME** () or the **HIGH VOLUME** () position to turn Chaser **ON**. To turn Chaser **OFF**, slide the switch to the **OFF** () position.



2. TALK BUTTON

Press the **TALK BUTTON** to hear fun phrases and cool dinosaur facts.



3. SOUND EFFECT BUTTON

Press the **SOUND EFFECT BUTTON** to hear cool dinosaur and police car sound effects!



4. ACTION BUTTON (DINO MODE ONLY)

Press the **ACTION BUTTON** to see Chaser's claws move and mouth light up.



5. LCD SCREEN

The **LCD SCREEN** will display dinosaur eyes and driver animations.

6. AUTOMATIC SHUT-OFF

To preserve battery life, **Chaser the Therizinosaurus** will shut off automatically after several minutes without input. **Chaser the Therizinosaurus** can be turned on again by pressing any button.



Note: If **Chaser the Therizinosaurus** repeatedly shuts off, or has abnormal responses when switched on, please install brand new batteries and try switching it on again.

ACTIVITIES

 
1. Dino Mode

In dino mode, pressing the **TALK BUTTON** will play fun phrases and cool dinosaur facts. Pressing the **SOUND EFFECT BUTTON** or moving Chaser will trigger dinosaur sound effects. Press the **ACTION BUTTON** to see Chaser's claws move and mouth light up.


2. Vehicle Mode

In vehicle mode, Chaser will say fun and encouraging phrases when the **TALK BUTTON** is pressed. Pressing the **SOUND EFFECT BUTTON** or moving Chaser will trigger police car sound effects.


TRANSFORMATION

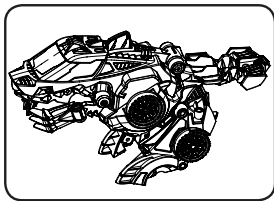

 
1. Dino mode.

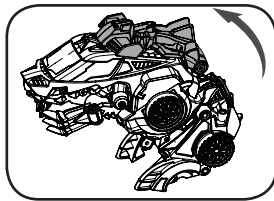

 
2. Close the tail.

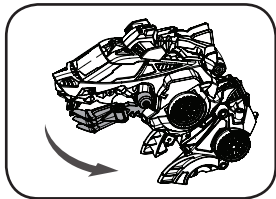

 
3. Fold in the front claws.

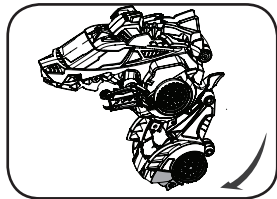

 4. Fold down the wheel section of the two hind legs.

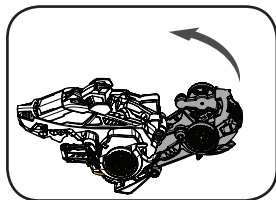

 5. Fold the wheel section back towards the front of the police car.

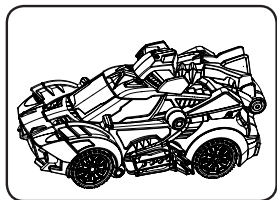

6. Vehicle mode.

Note:

To switch Chaser back into a dinosaur, follow the above steps in reverse order.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the unit still does not work, insert a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CLASS 1
LED PRODUCT



CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au



NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



**Visit our website for more
information about our products,
downloads, resources and more.**



www.vtech.co.uk
www.vtech.com.au



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003395-005 

