

# **Instruction Manual**

# SWITCHEGO "

Brutser the Corlle



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

# Pre-School

Interactive toys to develop their imagination and encourage language development

# l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

# Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

# I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

vtech Bally

stimulate their interest

in different textures, sounds and colours

...responding to colours,

...understanding cause

grasp, sit-up, crawl and

...learning to touch, reach,

sounds and textures

Toys that will

lam...

and effect

toddle





# INTRODUCTION

Switch into fun with **Bruiser the Gorilla**! Switch this wild Gorilla into a fast Vehicle and back again in just a few simple steps! Chest beating action, an animated LCD screen and fun facts bring Bruiser to life in your very own Switch & Go universe!



# INCLUDED IN THE PACKAGE

- Switch & Go® Bruiser the Gorilla
- Instruction Manual

WARNING: All packing materials such as tape, plastic sheets,

packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and

should be discarded for your child's safety.


NOTE: Please keep this Instruction Manual as it contains

important information.

# **GETTING STARTED**

#### **BATTERY REMOVAL AND INSTALLATION**

- 1. Make sure the unit is turned Off.
- 2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw, then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- Install 2 new AAA (LR03/AM-4)
   batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

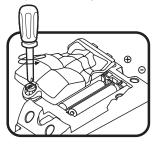

#### WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

#### IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

#### **RECHARGEABLE BATTERIES:**

- · Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

#### VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

#### In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

#### In Australia & New Zealand:

Check with your local council for kerbside collections.

# **PRODUCT FEATURES**

## 1. Off/Low/High Volume Switch

To turn the unit **On**, or to adjust the volume, slide the switch to the **Low** 1) or **High** 1) **Volume** position. To turn the unit **Off**, slide the switch to the **Off O** position.



# 2. Talk Button

Press the **Talk Button** to hear fun phrases and cool gorilla sounds in Gorilla mode. In Vehicle mode, press the **Talk Button** to hear fun phrases and great vehicle sounds.



### 3. Action Button

Press the **Action Button** to see Bruiser beat his chest, one arm at a time.



#### 4. LCD Screen

 
The **LCD Screen** shows gorilla eye animations in Gorilla mode and shows driver animations in Vehicle mode.




#### 5. Automatic Shut-Off

To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. The unit can be woken up again by pressing the **Talk Button** or by switching between Gorilla and Vehicle modes. The unit will also automatically turn off when battery power is very low.


# **SWITCHING MODES**



 
1. Gorilla mode.



 
2. Move the head up.



 
3. Straighten the arms.



 4. Flip up the arms.



  $5. \ Push \ the \ arms \ inward \ together.$ 



6. Rotate the feet up. The unit is now in Vehicle mode.

## **NOTE**

To switch the vehicle back into a gorilla, follow the above steps in reverse order.

# **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play with again.
- 5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# **CONSUMER SERVICES**

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

#### Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

#### **NZ Customers:**

Phone: 0800 400 785

Website: support.vtech.com.au

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

#### **UK Customers:**

Read our complete warranty policy online at vtech.co.uk/warranty.

#### Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

# Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

