

# **User's Manual**

### **Crawl & Learn Bright Lights Ball**



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

### l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

### l need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10years

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

#### l am...

...responding to colours, sounds and textures

...understanding cause and effect


...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36months

To learn more about this and other VTech® products, visit www.vtechuk.com

## INTRODUCTION

Thank you for purchasing the VTech® Crawl & Learn Bright Lights Ball! Move and crawl with the animal friends! Full of fun things to press, twist, spin and feel, the Crawl & Learn Bright Lights Ball introduces shapes, numbers, animals and animal sounds. Equipped with a sensor, the Crawl & Learn Bright Lights Ball wobbles and wiggles with baby's every giggle!

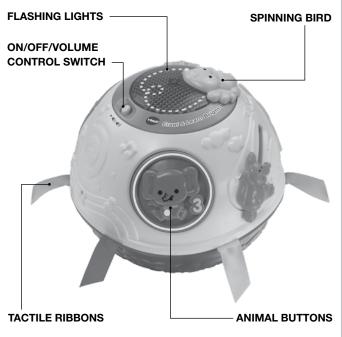

# INCLUDED IN THIS PACKAGE

- One VTech<sup>®</sup> Crawl& Learn Bright Lights Ball
- One user's manual
- WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.
- NOTE: Please keep this instruction manual as it contains important information.
- WARNING: The cord is not part of this toy. Please cut and discard the cord for your child's safety.

# **GETTING STARTED**

### **BATTERY INSTALLATION**

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the ball. Use a screwdriver to loosen the screw.
- Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

### **BATTERY NOTICE**

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.







- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

### Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit: www.recycle-more.co.uk www.recyclenow.com

# PRODUCT FEATURES

#### 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/ VOLUME CONTROL SWITCH** to the low volume ( $(\P)$ ) or high volume ( $(\P)$ )) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** ( $(\bullet)$ ) position.



### 2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Crawl & Learn Bright Lights Ball** will automatically power-down after approximately one minute without input. The unit can be turned on again by pressing any button.

## ACTIVITIES

- Slide the on/off/volume control switch to turn the unit on. You will hear a song, a phrase and a fun sound. The lights will flash and the ball will wobble with the sound.
- Press the animal buttons to learn about animal names, animal sounds, shapes and numbers and hear playful music. The lights will flash and the ball will wobble with the sound.
- 3. If there is no input after approximately 8 seconds, you will be asked to find a specific animal or shape. Use the animal buttons to answer. After another 8 seconds without input, you will hear a phrase and a sing-along song. If there continues to be no input, you will hear a short tune before the unit automatically powers down.





#### MELODY LIST

- 1. My Bonnie Lies Over the Ocean
- 2. This Old Man
- 3. Twinkle, Twinkle, Little Star
- 4. Did You Ever See a Lassie
- 5. Ring Around the Rosy
- 6. London Bridge
- 7. Here We Go Round the Mulberry Bush
- 8. Skip to My Lou
- 9. Aiken Drum
- 10. Daisy Bell
- 11. Yankee Doodle
- 12. Hickory Dickory Dock
- 13. Old Macdonald Had a Farm
- 14. The Bear Went Over the Mountain
- 15. Animal Fair

### SING-ALONG SONG LYRICS

#### SONG 1

Roll, roll, roll the ball,

The animals want to play!

Press the shapes to learn their names,

Colours and numbers too.

#### SONG 2

Animals, animals all around, Can you name all the animals? Zebra, kangaroo and a bird, Lion, monkey, elephant.

## **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

 
If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

#### IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.





## vtech<sup>®</sup> PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
  Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

