

BLUEY



Instruction Manual

SING-ALONG KEYBOARD



BBC
STUDIOS

BLUEY TM and BLUEY character
logos TM & © Ludo Studio Pty Ltd
2018. Licensed by BBC Studios.
BBC logo TM & © BBC 1996

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Put on a show with Bluey! Hear popular songs from the show and create your own masterpieces with piano, trumpet, xylophone, guitar and Chattermax sounds. Sing along with the attached microphone and follow the sounds in a fun memory game.

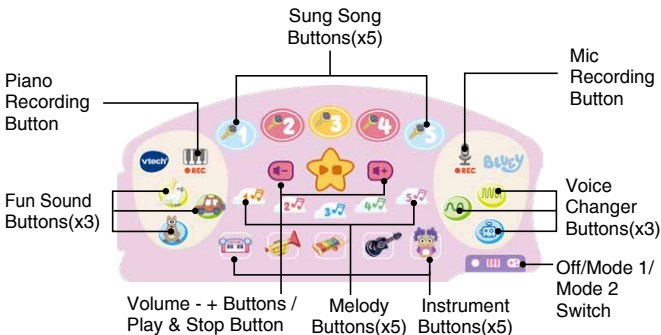

INCLUDED IN THIS PACKAGE

- One **Sing-Along Keyboard**
- Two Legs
- One Microphone Stand
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE:

Please save this Instruction Manual as it contains important information.

CAUTION:

Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Unlock the packaging locks and exit Try-Me Mode:

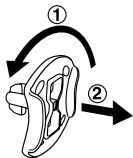

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

NOTE: The unit is in Try-Me Mode while it is in the box. Try-Me Mode will exit automatically after the packaging locks are removed and the unit is taken out of the box. The microphone recording feature will then be available in normal mode.



If the keyboard does not exit Try-Me Mode automatically, please follow the steps below:

Move the Off/Mode 1/Mode 2 Switch to OFF.


Press the 1st, 2nd, and 5th piano keys (C, D, and G) from the left at the same time.

While holding the keys, move the switch to Mode 2.

Three piano keys will flash, indicating the unit has reset to normal mode.

Taking Out the Microphone:

1. Open the gift box.
2. Carefully cut the paper string on the back of the inner card. Do not cut the cord connecting the microphone to the base unit.
3. Pull out the string and take off the microphone.

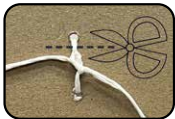


INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.

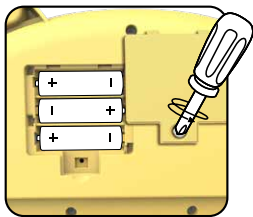

4. Install 3 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle


www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.


ASSEMBLY INSTRUCTIONS

NOTE: Adult assembly required.

1. Insert the 2 legs into the back of the Bluey Sing-Along Keyboard as illustrated on the right.

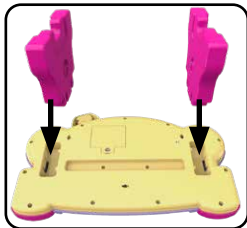

2. Insert the microphone stand into the hole on the top right of the Bluey Sing-Along Keyboard, as illustrated below.

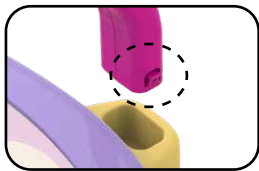

PRODUCT FEATURES

1. Off/Mode 1/Mode 2 Switch

Move the selector to **Mode 1** Music Time (🎵) or **Mode 2** Play Time (🎮) to power on the unit and select a mode to play (See pages 11-12 for description of modes). Slide the switch to **Off** (🔌) to turn the unit **OFF**.



2. Volume – and Volume + Buttons

Press the **Volume Buttons** to change the volume.

3. Instrument Buttons

Press the **Instrument Buttons** to choose Piano, Trumpet, Xylophone, Guitar or Chattermax sounds to play when using the piano keys in Mode 1. In Mode 2, press the instruments to select the instrument that will be heard for the piano keys in the sequences.



4. Piano Keys

Press the white light-up **Piano Keys** and black piano keys to create your masterpieces in Mode 1. In Mode 2, press the white light up **Piano Keys** to repeat the sequence.



5. Bingo Scratch Disc

Turn the **Bingo Scratch Disc** to add scratch sounds to your masterpieces in Mode 1 or to repeat the sequence in Mode 2. Two different colours will light up when scratching the disc.



6. Muffin Drum Pad

Press the **Muffin Drum Pad** to add drum sounds to your masterpieces in Mode 1 or to repeat the sequence in Mode 2. The drum will light up when pressed.



7. Fun Sound Buttons

Press the **Fun Sound Buttons** to add funny sounds to your masterpieces.



8. Piano Recording Button

Press the **Piano Recording Button** to start recording your masterpieces created by pressing the **Piano Keys**, the **Fun Sound Buttons**, **Muffin Drum Pad** or by turning the **Bingo Scratch Disc**.

9. Play & Stop Button

Press the **Play & Stop Button** to listen to the masterpiece created by **Piano Recording**. It is also used to stop the Piano and Mic recording.

10. Microphone On/Off Switch

Slide the **Microphone Switch** to **ON** to sing or to make a recording through the Microphone. Slide it to **OFF** to turn off the Microphone.

NOTE: Do not put the microphone too close to the speaker or it may cause unexpected noise. Turning it **OFF** can help reduce the noise output from the speaker if you're not using the microphone. Speak within 4 inches of the Microphone to get the best performance.



11. Mic Recording Button

Turn the **Microphone Switch** to **ON** before you start the recording. Press the **Mic Recording Button** to record your voice for up to 5 seconds.

12. Voice Changer Buttons

Press the **Voice Changer Buttons** to listen to funny distorted versions of the voice you recorded using the **Mic Recording Button**.



13. Sung Song Buttons

Press the **Sung Song Buttons** to listen to popular songs from the show.



14. Melody Buttons

Press the **Melody Buttons** to listen to melodies from the show. Press the **Piano Keys, Bingo Scratch Disc, Muffin Drum Pad,** and **Bluey Button** to jam funny effects into the melody.



15. Bluey Button

Press the **Bluey Button** to listen to the Bluey theme tune and to hear Bluey talking.



16. Automatic Shut-Off

To preserve battery life, the unit will automatically turn off after a short while without input. The unit can be turned on again by sliding the **Off/Mode 1/Mode 2 Switch**. The unit will also automatically turn off when the batteries are very low.

The **Muffin Drum Pad** will flash as a reminder to change the batteries.

NOTE: If the unit powers down or if the lights fade out during play, please install a new set of batteries.

ACTIVITIES

Music Time

Slide the **Off/Mode 1/Mode 2 Switch** to **Mode 1** to start **Music Time**. Press the buttons to hear sung songs and melodies, to create your own masterpieces, and to record and play back funny voices. **Piano Keys**, **Bingo Scratch Disc** and **Muffin Drum Pad** will light up with the sounds.



Play Time

Slide the **Off/Mode 1/Mode 2 Switch** to **Mode 2** to start **Play Time**. Listen closely and watch the sequence of the music notes, scratch disc and drum sounds. Then press the white **Piano Keys**, **Bingo Scratch Disc** and **Muffin Drum Pad** in the same order to repeat the sequence.



SING-ALONG SONG LYRICS

Song 1

One man went to mow
Went to mow a meadow
One man and his dog <yap>
Went to mow a meadow
Two men went to mow
Went to mow a meadow
Two men, one man and his dog <yap>
Went to mow a meadow
Three men went to mow
Went to mow a meadow
Three men, two men, one man and his dog <yap>
Went to mow a meadow.

Song 2

Five little men in a flying saucer
Flew round the world one day
They looked left and right
But they didn't like the sight
And then they flew away.

Song 3

Lay an egg
Lay an egg
Lay a chickenrat egg
For our breakfast
For our breakfast
Make a chickenrat egg
For our breakfast!

Song 4

Poor little bug on the wall

Jing Jing!

No one to love her at all

Jing jing!

No one to tickle his toes

Jing Jing!

No one to blow his nose!

Jing Jing!

Song 5

Burger Dog, B-Burger Dog.

He has pickles and he has cheese.

Burger Dog, B-Burger Dog.

Fluffy bun with some sesame seeds.

Burger Dog, B-Burger Dog.

Yap yap yap yap yap yap!

Burger Dog, B-Burger Dog.

He was once a wiener dog, now he is a burger dog.

Burger Dog. B-Burger Dog.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

