

vtech[®]
Baby

Instruction Manual

Snooze & Soothe Elephant



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Snooze & Soothe Elephant**. This soft and cuddly elephant will soothe your little one with its soft glowing light, melodies, songs, nature sounds and loving phrases. Holding down the elephant's button will stop the current response. The electronic module can be easily removed, so the elephant can be hand washed.

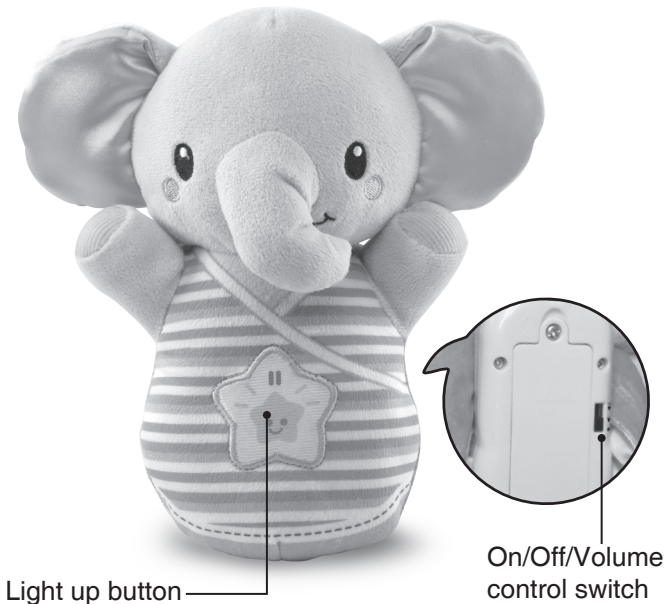

INCLUDED IN THIS PACKAGE

- One VTech® Snooze & Soothe Elephant
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


WARNING:

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the electronic module inside the elephant. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

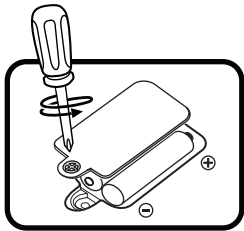

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product


The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.





The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

ASSEMBLY INSTRUCTIONS

To ensure your child's safety, this product should only be assembled by an adult.




REMOVABLE ELECTRONIC MODULE

1. To remove the electronic module, open the Velcro-like attachment on the back of the elephant. There is a button on the left side of the module, press the button to detach and remove it.
2. To reinsert the electronic module, press the same button you used to remove the module and click it onto the tab inside the back of the elephant. When the electronic module is inserted correctly, you will hear a click sound. Push the electronic module into the back of the elephant and seal the Velcro-like attachment.



PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the elephant **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the elephant **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. AUTOMATIC SHUT OFF

To preserve battery life, the **VTech® Snooze & Soothe Elephant** will automatically shut off shortly after the responses have finished. The elephant can be turned on again by pressing the light up button.

Note: If the unit repeatedly shuts down, or the light flickers then fades out, we recommend changing the batteries.

ACTIVITIES

1. Slide the **ON/OFF/VOLUME CONTROL SWITCH** to turn the elephant on. You will hear a kiss sound, a phrase, a giggle sound and a lullaby song. The light pattern will fade in and fade out slowly with the sounds.



2. Press the **LIGHT UP BUTTON** to hear soothing phrases, lullaby songs, nature sounds and soft melodies. You will hear approximately 15 minutes of music play after each press of the button. The light pattern will fade in and fade out slowly with the sounds.
3. Holding down the **LIGHT UP BUTTON** for around 3 seconds will stop the current response.



SING-ALONG SONG LYRICS

SONG 1

Close your eyes, now and rest,
May these hours be blessed.
Till the sky's bright with dawn,
When you wake with a yawn.

SONG 2

Over in the jungle,
Under the moon's glow.
The stars, they shine so beautifully,
So off to sleep we go.

MELODY LIST:

1. Alouette
2. Beautiful Dreamer
3. Jesu, Joy of Man's Desiring - Johann Sebastian Bach
4. All Through the Night
5. Hush, Little Baby
6. Morning - Edvard Grieg
7. London Bridge
8. Danny Boy
9. Cockles & Mussels

10. Rock-a-bye Baby
11. Bicycle Built for Two
12. Cradle Song - Wolfgang Amadeus Mozart
13. The Nutcracker - Pyotr Ilyich Tchaikovsky
14. Eine kleine Nachtmusik - Wolfgang Amadeus Mozart
15. The Four Seasons (Spring) - Antonio Vivaldi
16. Diddle, Diddle, Dumpling
17. Pussy Cat, Pussy Cat
18. Simple Simon
19. Sweet and Low - Joseph Barnby
20. There's Music in the Air - George Frederick Root
21. Cradle Song - Carl Maria von Weber
22. Home, Sweet Home - Henry Bishop and John Howard Payne
23. Polly Put the Kettle On
24. Down by the Riverside
25. A Paper of Pins
26. Lavender's Blue
27. Aiken Drum
28. Canon in D - Johann Pachelbel
29. Adagietto from Symphony No. 5 - Gustav Mahler
30. Toyland

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
 2. Interrupt the power supply by removing the batteries.
 3. Let the unit stand for a few minutes, then replace the batteries.
 4. Turn the unit ON. The unit should now be ready to play with again.
 5. If the unit still does not work, install a brand new set of batteries.
- If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003457-012 (UK)