

## **Tummy Time Play Pillow**



91-003923-001 ( )



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

## Pre-School

Interactive toys to develop their imagination and encourage language development

## I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

## Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

#### Ineed...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school



vtech Bally

stimulate their interest

in different textures, sounds and colours

...responding to colours,

...understanding cause

...learning to touch, reach,

grasp, sit-up, crawl and

sounds and textures

Toys that will

l am...

and effect

toddle

 $\bigoplus$ 








4-10 years

To learn more about this and other VTech® products, visit www.vtech.co.uk

## **INTRODUCTION**

Thank you for purchasing the Tummy Time Play Pillow by VTech®!

This beautiful **Tummy Time Play Pillow** converts into 3 different modes of play. Mode 1 supports tummy time play, mode 2 encourages crawling and in mode 3 have fun rolling the pillow along. The 4 piano buttons on the side of the pillow trigger melodies, nature sounds, fun sounds, songs & phrases for auditory development.

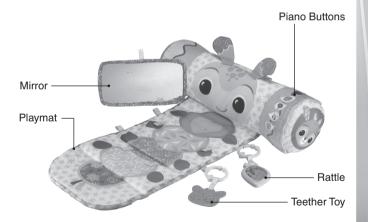

## INCLUDED IN THIS PACKAGE

- . Tummy Time Play Pillow
- · Parent's Guide

#### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

#### NOTE

(lacktriangle)

Please keep this Parent's Guide as it contains important information.


## **GETTING STARTED**

#### **Battery Removal and Installation**

- Make sure the unit is turned Off.
- Find the battery cover located inside the pillow on the side of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

#### **WARNING:**

Adult assembly required for battery installation. Keep batteries out of reach of children.

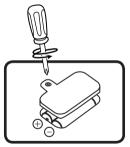

3

#### IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

#### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

### Disposal of batteries and product



(lacktriangle)

 
The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product



Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.



#### In the UK:

 $\bigcirc$ 

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

## INSTRUCTIONS FOR WASHING

Please remove the electronic module from the pillow before cleaning.

- To remove the electronic module, open the hook-and-loop closure on the end of the pillow and take out the electronic module.
- 2. Handwash the pillow and let it air-dry.
- 3. Insert the curved end of the electronic module first, nestling it into the fabric pocket. Next, rotate the module in the fabric pocket 45 degrees towards the front of the caterpillar, so that the curved end is towards the caterpillar's face. Smooth the cloth around the electronic module, pressing it further into the caterpillar. Then, close the padded end and secure the hook-and-loop closures.



## **PRODUCT FEATURES**

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/ Volume Switch** to the Low volume ♠) position or the High volume ♠) position. You will hear a song, a fun phrase and playful sounds. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off** ♠ position.



2. Easy to Transform

Unroll the **Playmat** to change from roller to tummy time toy, or roll up the **Playmat** to use it for rolling play.



537003 Tummy Time Play Pillow IM 0818 Folder.indd 5

5

 $\bigcirc$ 

#### 3. Automatic Shut-Off

To preserve battery life, the **Tummy Time Play Pillow** will automatically shut off after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

#### NOTE

 $\bigcirc$ 

This product is in Try-Me mode in the packaging. After opening the package, turn the **Tummy Time Play Pillow** off and on again to proceed with normal play. If the unit repeatedly powers down while playing, please install a new set of batteries.

## **ACTIVITIES**

#### 1. Piano Buttons

Press one of the four **Piano Buttons** to trigger playful responses. Pressing the **Music Button** plays a variety of melodies, while pressing the **Tree Button** plays nature sounds. Press the **Caterpillar Button** to hear fun phrases and songs. Press the **Happy Face Button** to hear playful sounds. When a melody or a song is playing, moving the pillow activates the motion sensor, which adds fun sounds on top of the melody or song.



Move or roll the pillow to activate the **Motion Sensor** and hear fun sounds, playful phrases and short tunes. The light will flash with the sound.

#### 3. Removable Play Pieces

Prop up the mirror, or play with the teether toy or rattle for added fun.











 $\bigcirc$ 

## **MELODIES**

- 1. A-Tisket, A-Tasket
- 2. Twinkle. Twinkle Little Star
- 3. Bingo
- 4. Did You Ever See a Lassie?
- 5. Aiken Drum
- 6. Hickory. Dickory Dock
- 7. Humpty Dumpty
- 8. Little Miss Muffet
- 9. London Bridge Is Falling Down
- 10. Mary Had a Little Lamb
- 11. Muffin Man
- 12. Old MacDonald
- 13. One, Two, Buckle My Shoe
- 14. Skip to My Lou
- 15. Teddy Bears' Picnic

## SING-ALONG SONG LYRICS

#### Song 1

 $\bigcirc$ 

Peek-a-boo, peek-a-boo, I see you.

I see a fawn and an owl too.

#### Song 2

I'm a tickly, tickly caterpillar,

I crawl, I creep, I wiggle.

I giggle all day when we get to play,

Oh! how I love you!

#### Song 3

Crawling here, crawling there, crawling everywhere! Let's wiggle, wiggle all around, wigglin' up and down!



## **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- The pillow can by surface washable or hand washed. Please remove the electronic module from the pillow before cleaning.

## **TROUBLESHOOTING**

If for some reason the program/activity stops working, please follow these steps:

- Turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit back **ON**. The unit will now be ready to play with again.
- If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.







## **CONSUMER SERVICES**

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**UK Customers:** 

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers: Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

**UK Customers:** 


Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



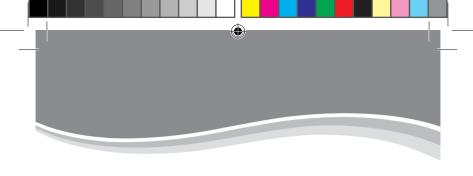

# Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au



TM & © 2020 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003923-001 (8)



 $\bigcirc$