

vtech[®]
baby

Instruction Manual

Pop & Sing Animal Train



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Pop & Sing Animal Train**.

All aboard! Join the animal characters on a fun journey while learning about animals and fun facts. Press the button, flip the switch and turn the gear for fun animal surprises. The train is ready to go, all aboard!

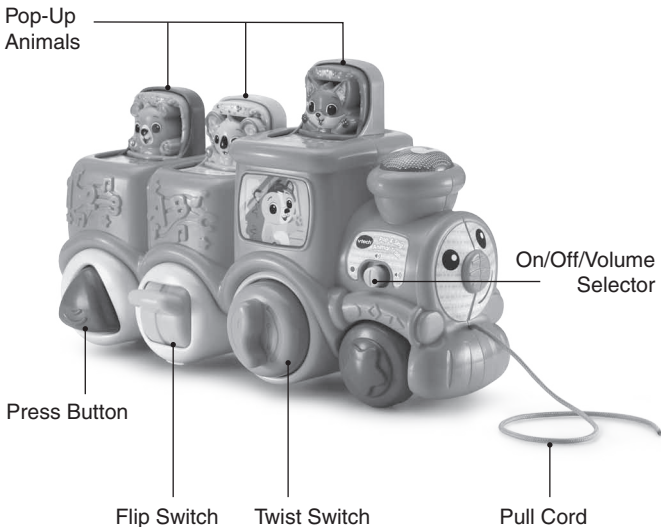

INCLUDED IN THE PACKAGE

- Pop & Sing Animal Train
- Quick Start Guide

 
WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

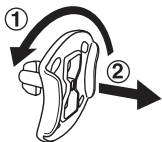


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

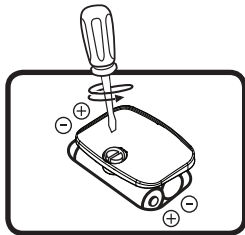

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low Volume (🔊) or the High Volume (🔊🔊) position. You will hear sounds, phrases and a song. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** ● position.



2. Pull Cord

To convert the unit from a push toy to a pull toy, remove the pull cord from the storage compartment on the bottom of the train. For your child's safety, we suggest you store the pull cord in the compartment until your child is walking.



3. Automatic Shut-Off

To preserve battery life, the **Pop & Sing Animal Train** will automatically shut off after approximately 75 seconds without input. The unit can be turned on again by pressing any button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Press Button

Press the **Button** to pop up the bear. You will hear the animal name and a playful phrase as well as a fun song, sounds and tunes. Press the **Button** after the animal is already popped up to hear a cute phrase or a tune. The light will flash with the sounds.



2. Flip Switch

Flip the **Switch** to pop up the koala. You will hear the animal name and a playful phrase as well as a fun song, sounds and tunes. Flip the **Switch** after the animal is already popped up to hear a cute phrase or a tune. The light will flash with the sounds.



3. Twist Switch

Turn the **Switch** to pop up the fox. You will hear the animal name and a playful phrase as well as a fun song, sounds and tunes. Turn the **Switch** after the animal is already popped up to hear a cute phrase or a tune. The light will flash with the sounds.



4. **Pop-Up Animals**

Press the **Pop-Up Animals** back into the train to hear a playful phrase, a tune and fun sounds. The light will flash with the sounds.



5. **Motion Sensor**

Pull or push the train to hear fun train sounds and melodies. The light will flash with the sounds.



MELODY LIST

1. Grandfather's Clock
2. Teddy Bears' Picnic
3. Here We Go 'Round the Mulberry Bush
4. Daring Young Man on the Flying Trapeze
5. Toyland
6. Good Morning Merry Sunshine
7. London Bridge
8. Bear Went Over the Mountain
9. Humpty Dumpty
10. Do You Know the Muffin Man?
11. Pussy Cat, Pussy Cat
12. On Top of Old Smokey

13. Did You Ever See a Lassie?
14. Oh Where, Oh Where Has My Little Dog Gone?
15. While Strolling Through the Park One Day
16. Diddle, Diddle Dumpling

SONG LYRICS

Song 1

All aboard, I'm ready to go,
I blow my little whistle!
Chug-a-chug away I go!
Wave as I roll by.

Song 2

The bear on the train plays peek-a-boo, peek-a-boo, peek-a-boo.
The bear on the train plays peek-a-boo, all day long!

Song 3

Peek-a-boo, peek-a-boo, I see you koala!
I see your big ears and cute smiley face,
I'm happy to see you today!

Song 4

Oh what a surprise, there's a fox hiding inside!
Peek-a-boo little fox, I missed you.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

