



## **Instruction Manual**

# **GAME TIME LAPTOP**





BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo  $\circledcirc$  Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC 1090 & BBC 1996

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

### l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

#### Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

## I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

```
4-10 years
```

vtech Boby

Toys that will stimulate their interest in different textures, sounds and colours

## l am...

...responding to colours, sounds and textures

...understanding cause and effect


...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

To learn more about this and other VTech® products, visit www.vtech.co.uk

# INTRODUCTION

Thank you for purchasing the **VTech®** Bluey **Game Time Laptop**. The Bluey **Game Time Laptop** encourages role-play and is packed with 10 games to play with Bluey, Bingo and their family and friends.

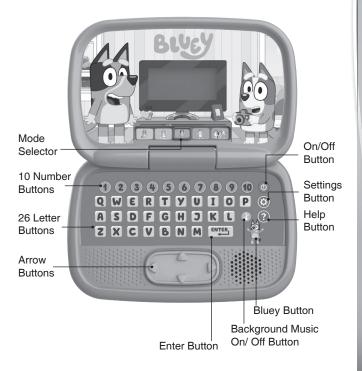

# **INCLUDED IN THE PACKAGE**

- · VTech<sup>®</sup> Bluey Game Time Laptop
- · Quick Start Guide

#### WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

#### NOTE:

Please save this Instruction Manual as it contains important information.

#### Unlock the Packaging Locks:



- Rotate the packaging locks 90 degrees anticlockwise.
- 2 Pull out the packaging locks and discard.

# **GETTING STARTED**

### **Battery Removal and Installation**

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
- Install 2 new "AA" size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

#### WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.



### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

#### **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

#### Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set



out in the Batteries and Accumulators Regulation. The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

\* Visit www.recyclenow.com to see a list of collection points near you

# PRODUCT FEATURES

## 1. On/Off Button 🕕

Press the On/Off Button to turn the unit ON and press it again to turn the unit OFF.

## 2. Settings Button 😥



Press the Settings Button to adjust the volume and screen contrast. Press the left or right Arrow Buttons to choose which item to adjust, then press the Enter Button to confirm.

### 3. Help Button

Press the Help Button to hear an instruction or a question repeated.

### 4. Mode Selector

Slide the Mode Selector to choose one of the five character modes. There are two fun games within each character mode.

### 5. Bluey Button

Press the **Bluey Button** to hear Bluey speak and see her on the screen.

#### 6. Arrow Buttons 🖲

Press the left or right, up or down Arrow Buttons to make selections.

### 7. Enter Button



Press the Enter Button to confirm your choice.

## 8. Background Music On/Off Button

Press the Background Music On/Off Button to turn the background music off, press this button again to turn the background music on.

### 9. Letter Buttons

Press the Letter Buttons to learn letters or to answer letter related questions.



### **10.Number Buttons**

Press the **Number Buttons** to learn numbers or to answer number related questions.



### **11.Automatic Shut-Off**

To preserve battery life, the **Bluey Game Time Laptop** will automatically turn off after around 2 minutes without input. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

# GAMES

The **VTech®** Bluey **Game Time Laptop** offers a total of 10 fun games in 5 character modes.

# **BLUEY GAMES**

### Rain

Press the left or right **Arrow Buttons** to pick the object that fits the space in the dam wall. Press the **Enter Button** to confirm.

### Dance Mode

Watch Bluey dance! Press the **Number Buttons** to choose tunes and press the **Letter Buttons** to add fun sounds to the music.

## **BINGO GAMES**

### Grannies

Type the letters and numbers to help Rita avoid slipping on the cans of beans.

### Fairies

Watch closely to find out where the fairy is. Press the left or right **Arrow Buttons** to choose and then press the **Enter Button** to confirm.

## DAD GAMES

### Hospital

Identify what is on Dad's x-ray. Press the left or right **Arrow Buttons** to select the right object and then press the **Enter Button** to confirm.

### Fancy Restaurant

Press the left or right **Arrow Buttons** to help Bingo to get the food for the special dishes. Press the **Enter Button** to confirm.

## MUM GAMES

### **Musical Statues**

Press the **Arrow Buttons** to make Bluey dance. Stop pressing buttons when the music stops to help Bluey freeze.

### Promises

Press the left or right **Arrow Buttons** to select the odd one out. Press the **Enter Button** to confirm.

## **RELATIVES & FRIENDS GAMES**

### Muffin

Press the left or right **Arrow Buttons** to select the item that Muffin wants. Press the **Enter Button** to confirm.

### Spy Game

Remember the password and type it by pressing the Letter Buttons and Number Buttons.

# **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play with again.
- 5. If the product still does not work, please install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# **CONSUMER SERVICES**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers: Phone: 1800 862 155 Website: support.vtech.com.au

NZ Customers: Phone: 0800 400 785 Website: support.vtech.com.au

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

#### UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

#### Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/ consumerguarantees for further information.

# Visit our website for more information about our products, downloads, resources and more.

# www.vtech.co.uk www.vtech.com.au



TM & © 2023 VTech Holdings Limited. All rights reserved. IM-530903-000 Version: 0