



Instruction Manual

Animal Friends Playground



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Animal Friends Playground!** Come along and enjoy playtime with the Animal Friends Playground By VTech®! Little ones can use their imagination and create fun role-play adventures. Place the included Animal Friend Connie Cow in the treehouse and flip the launcher to watch her roll down the slide. She can also be the lookout or enjoy the views from the turning telescope! She can also be the lookout or enjoy the views from the turning telescope!



INCLUDED IN THE PACKAGE



One tree house



 
One tree base



One flag



One door

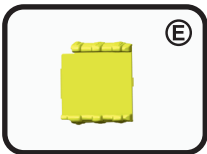


One bridge




One tree trunk



 One base support

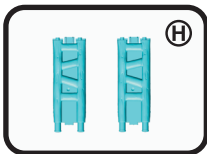

Two brackets

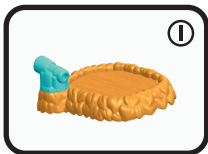 


One telescope roof




One slide



 One slide track

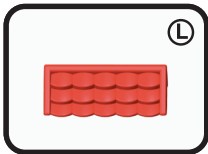


One stable roof

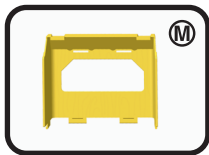 

One stable wall



 One stable base

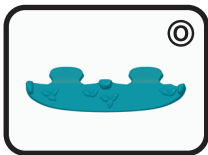

One stable base
front



One windmill



One windmill bracket



One windmill base



One field piece



Connie Cow

- Label sheet
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

 
NOTE

Please save this Instruction Manual as it contains important information.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw. Then remove the cover.
3. If used battery is present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

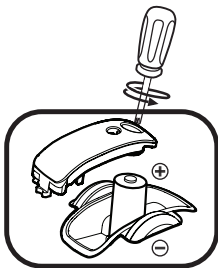

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
 
 
 
www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION

Please securely stick the labels to the playset as indicated on the following pages:

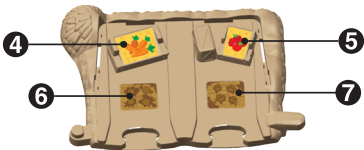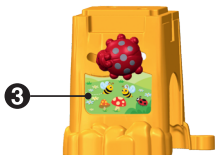
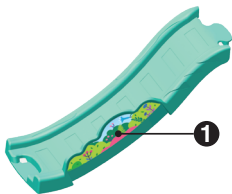
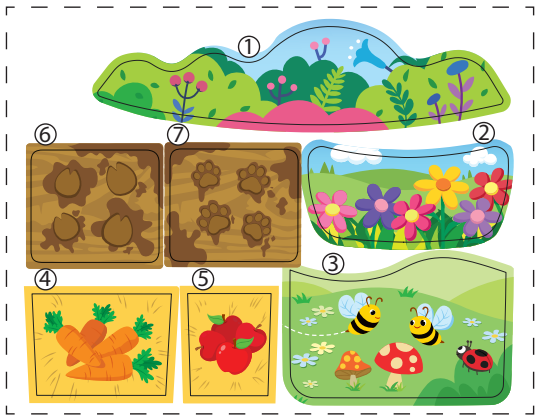


ASSEMBLY INSTRUCTIONS



With the **Animal Friends Playground** safety comes first. To ensure your child's safety, adult assembly is required.

SMALL COMPONENT ASSEMBLY

  
 
1. First, Insert **(A)** into **(B)**, then insert **(E) (D) (C)** into **(A)** as shown. You will hear a click sound to indicate the pieces are secure.

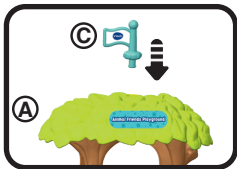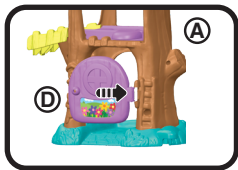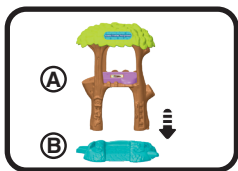

  
2. Insert **(H)** into **(G)**, then insert **(I)** into **(H)**. You will hear a click sound to indicate the pieces are secure. Please note that they cannot be detached once connected.

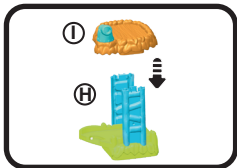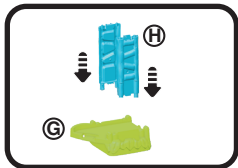

  
Then, insert ⑥ into ⑤, join ⑩ into ⑪ as shown. You will hear a click sound to indicate the pieces are secure. Please note that they cannot be detached once connected.

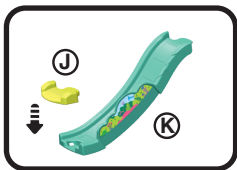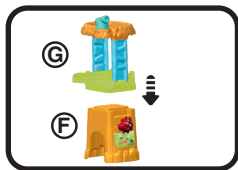

 
3. Insert ⑭ into ⑬. Second, insert ⑭ into ⑮ as shown. Then, insert ⑯ into ⑮. You will hear a click sound to indicate the pieces are secure.

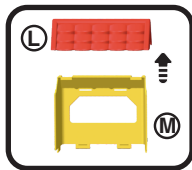

 4. Insert ⑰ into ⑱, then insert into ⑲. You will hear a click sound to indicate the pieces are secure. Please note they cannot be detached once connected. Lastly, join ⑲ to ⑳ as shown.

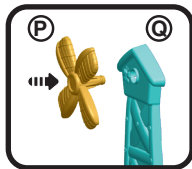

 5. Join the five assembled parts together as shown. Once you've completed the above steps, you are ready to play! Refer to the product image on the cover page of the manual for one way to set up the **Animal Friends Playground**.

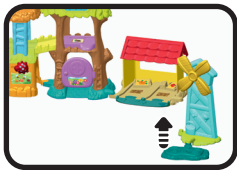

PRODUCT FEATURES

1. Heart Button

Press the Heart Button to turn on or wake the unit up.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power-down after approximately 30 seconds without input. The unit can only be turned on again by pressing the **Light Up Heart Button**

NOTE

 
If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES - CONNIE COW

1. Press the **Light Up Heart Button** to turn the unit **ON**. You will hear a song, a phrase and fun sounds.



2. Touch the **Heart Shaped Touch Point** on Connie's cheek to hear a kiss sound and animal noises.

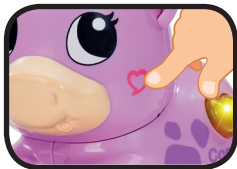

3. Pushing the animal along will trigger a song, phrase and melody.



PRODUCT FEATURES – PLAYGROUND

Play with Connie Cow or other Animal Friends characters (each sold separately) on the Playground. Simply place Connie on a location to play.

ACTIVITIES

 
1. Sliding Ladybird

Move the **Ladybird** back and forth for added pretend play.



2. Spinning Windmill

Turn the **Windmill** for mechanical play.

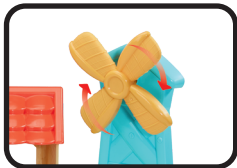

3. Swinging Gate

Open and close the **Door** to let Connie in and out of the house.



4. Turning Flag & Telescope

Place the Connie on the **Telescope** platform and twist the **Telescope** or **Flag** for mechanical play.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

