




Toddle & Stroll Musical Elephant Walker™



INTRODUCTION

Thank you for purchasing the Toddle & Stroll Musical Elephant Walker™!

Move from floor play to toddling with this musical friend. Spin, twist, slide and press the interactive learning panel, then stroll with the endearing elephant and learn about colors, shapes and more.

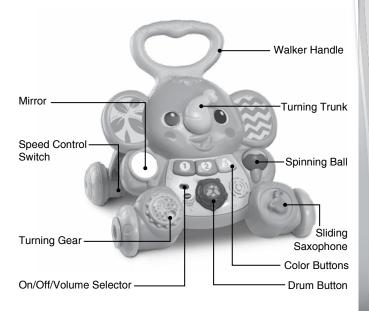

INCLUDED IN THIS PACKAGE

Toddle & Stroll Musical Elephant Walker™



Storage compartment

Five screws

Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Locate the battery cover on the back of the elephant. Use a coin or a screwdriver to loosen the screw and then open up the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- 4. Install 3 new AA batteries following the diagram inside the battery box.
- 5. Replace the battery cover and tighten the screw to secure.

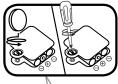



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Seules des piles du type recommandé doivent être utilisées.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en courtcircuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

MARNING / ATTENTION :

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

ASSEMBLY INSTRUCTIONS

To ensure your child's safety, adult assembly is required. Adult supervison recommended.

 Lay the storage compartment on the back of the elephant. Snap the lower part of the compartment onto the elephant, then insert the two screws at the top of the compartment to secure the storage compartment.



Insert the handle into the slot on the back of the walker legs.



Insert the back legs into the slot on the back of the walker.



Insert the three screws into the holes on the back of the handle to secure it to the main body of the walker.



PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume **■**()) or the High volume **■**()) position. You will hear a song, sound and a phrase. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off ●** position.



2. Speed Control Switch

The Toddle & Stroll Musical Elephant Walker™ is equipped with a speed control switch on the two back wheels of the walker. Position one is for babies who are just learning to take their first steps. This position prevents the walker from moving too quickly. Position two is intended for the more skillful toddler and will allow the walker to move more freely. When adjusting the speed control switch, please make sure both wheels are set to the same position.



3. Automatic Shut-Off

To preserve battery life, the **Toddle & Stroll Musical Elephant Walker™** will automatically shut off after approximately 80 seconds without input. The unit can be turned on again by pressing any button. Pushing the walker will not turn the unit back on.

NOTE: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. Color Buttons

Press the **Color Buttons** to learn about colors, shapes and numbers. Press the buttons three times to hear a playful song. The drum will flash with the sound.



2. Drum Button

Press the **Drum Button** to hear drum sounds, short tunes and songs. The light will flash with the sound.



3. Hands-On Play

Little ones can practice motor skills by exploring the Turning Trunk, Spinning Ball, Sliding Saxophone and Turning Gear. Play peek-a-boo in the mirror!



4. Wheel Sensor

Push the **Elephant Walker** to hear melodies and the Alphabet Song. When the Alphabet Song is playing, stop pushing the walker to hear the song stop, then push the walker to continue the song. The drum will flash with the sound.



MELODY LIST

- 1. Mary Had a Little Lamb
- 2. Yankee Doodle
- 3. The Bear Went Over the Mountain
- 4. A-Tisket, A-Tasket
- 5. Good Morning Merry Sunshine
- 6. Skip to My Lou
- 7. Pussy Cat, Pussy Cat
- 8. Sailing, Sailing

SONG LYRICS

Song 1A B C D, E F G,
H I J K, L M N O P,
Q R S, T U V,
W X. Y and Z.

Song 2

I'm a friendly little elephant, I like when you take me for a walk.

Song 3

Let's go out for a walk, Push me fast or push me slow, I am so happy, When we get to play!

Song 4

Circle and heart, triangle and square, Those are the shapes you'll find all around you. Look all around, see what you can find, Come on, let's go!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Please turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit On. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®

Model: 5230

Product Name: Toddle & Stroll Musical Elephant Walker™

Responsible Party: VTech Electronics North America, LLC

Address: 1156 W. Shure Drive, Suite 200

Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com

Read our complete warranty policy online at vtechkids.com/warranty vtechkids.ca/warrantv

