

**vtech**<sup>®</sup>

# User's Manual

**Kid  
SuperStar**<sup>®</sup>



© 2016 VTech  
All rights reserved  
Printed in China  
91-003251-006 (UK)

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## Electronic Learning Computers

**Cool, aspirational and inspiring computers for curriculum related learning**

### **vtech Baby**

**Toys that will stimulate their interest in different textures, sounds and colours**

#### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

### **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

#### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

#### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

3-6 years



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Kidi Super Star®!**

**Kidi Super Star®** helps encourage your child to sing, communicate, perform and create!

 
With the 8 built-in sing-along songs and Games & Tools, there is plenty of singing and learning fun! Free Play mode encourages children to use their imagination to create! You can also plug in an external music player to listen to your own music via a 3.5mm jack audio cable! The Music Magic mode allows for the reduction or removal of the main vocal track from a song, so you can sing to your favourite music as the lead!

It also has a 180 degree twistable Disco Light which glows in different colours and sequences. Pressing the instant sound effects buttons will allow you to hear Cheering, Applause, and more! Apply a funny voice changing effect to the microphone to alter your voice, such as the Squeaky effect! The 6 built-in Games & Tools will provide even more music and learning fun for your child! Enjoy **Kidi Super Star®!**




## PRODUCT FEATURES



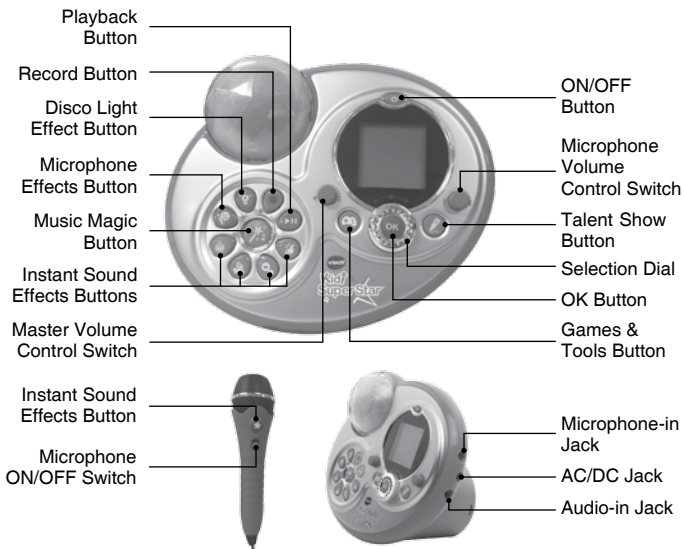

### PRODUCT LAYOUT AND BUTTONS































## BUTTONS ON MAIN UNIT

<b>ON/OFF</b> 	Press this button to turn the unit ON/OFF.
<b>Master Volume Control Switch</b> 	This controls the master volume of the whole unit, including the microphone volume. Turn this switch to adjust the whole unit's volume at any time. <b>NOTE:</b> This unit complies with maximum volume output standards to protect your child's hearing.
<b>Microphone Volume Control Switch</b> 	Adjust the microphone volume at any time by turning this switch. If the master volume is turned OFF, the microphone output cannot be heard.

<p><b>Music Magic Button</b> </p>	<p>The Music Magic is for sing-along use only. It reduces or removes the main vocal track from most songs. This allows you to perform like a Super Star and sing-along to the music as the lead. Press the Music Magic button to toggle between the Music Magic mode and the Normal mode.</p> <p><b>Music Magic mode:</b> Reduces or removes the main vocal track from sing-along songs*.</p> <p><b>Normal mode:</b> Normal music playback.</p> <p>*<b>NOTE:</b> The Music Magic feature may not work for all songs. Its effectiveness varies depending on the song. For the best results, studio recorded songs are recommended. Unfortunately we cannot guarantee Music Magic will work for every song. We do not recommend using Music Magic mode with mono songs or live concert performances, etc.</p>								
<p><b>Record</b> </p>	<p>Press to start or stop Recording. <b>NOTE:</b> Records up to a maximum of 5 minutes.</p>								
<p><b>Playback</b> </p>	<p>Press to play or pause the recording. <b>NOTE:</b> When recording, please do not remove the batteries or unplug the power adaptor. Or else, the recording will be erased.</p>								
<p><b>Disco Light Effects</b> </p>	<p><b>Changing Light Effects:</b> In the Games &amp; Tools mode, press this button to switch ON and OFF the light. In Talent Show mode, press this button to toggle different disco light effects:</p> <table border="1" data-bbox="360 1191 919 1384"> <tbody> <tr> <td>• Disco</td> <td>• Peaceful</td> </tr> <tr> <td>• Voice</td> <td>• Romantic</td> </tr> <tr> <td>• Fairy</td> <td>• Party</td> </tr> <tr> <td>• Preset</td> <td>• Light Off</td> </tr> </tbody> </table>	• Disco	• Peaceful	• Voice	• Romantic	• Fairy	• Party	• Preset	• Light Off
• Disco	• Peaceful								
• Voice	• Romantic								
• Fairy	• Party								
• Preset	• Light Off								



	<p><b>Brightness settings:</b></p> <p>Hold down the Disco Light button for approximately 2 seconds to enter the brightness settings menu. From here, turn the selection dial left or right to adjust the brightness of the unit. Press the OK button to save when finished.</p>						
<p><b>Microphone Effects</b> </p>	<p>Press this button to switch between different microphone effects when using the microphone:</p> <table border="1" data-bbox="401 390 961 564"> <tr> <td>• Squeaky </td> <td>• Deep </td> </tr> <tr> <td>• Robot </td> <td>• Echo </td> </tr> <tr> <td>• Normal </td> <td></td> </tr> </table>	• Squeaky 	• Deep 	• Robot 	• Echo 	• Normal 	
• Squeaky 	• Deep 						
• Robot 	• Echo 						
• Normal 							
<p><b>Instant Sound Effects</b></p>    	<p>There are 4 instant effects buttons on this unit. Press any of these buttons to add a sound effect over your performance:</p> <table border="1" data-bbox="401 695 961 797"> <tr> <td>• Intro Drum</td> <td>• Applause</td> </tr> <tr> <td>• Laughter</td> <td>• Cheering</td> </tr> </table>	• Intro Drum	• Applause	• Laughter	• Cheering		
• Intro Drum	• Applause						
• Laughter	• Cheering						
<p><b>Games &amp; Tools</b> </p>	<p>Press this button to enter the Games &amp; Tools mode for different activities.</p>						
<p><b>Talent Show</b> </p>	<p>Press this button to enter the Talent Show mode for Singing Fun, Free Play and External Music Connection.</p>						
<p><b>Selection Dial</b> </p>	<p>Turn the selection dial to make a selection.</p>						
<p><b>OK Button</b> </p>	<p>Press this button to confirm your selection.</p>						
<p><b>Microphone-in Jack</b></p> 	<p>Used to plug in your microphone.  <b>NOTE:</b> Please ensure a firm connection.</p>						
<p><b>Audio-in Jack</b> </p>	<p>Used to plug in an external music player (not included) using the supplied 3.5mm jack audio cable.  <b>NOTE:</b> Please ensure a firm connection on both ends of the audio cable.</p>						

AC/DC Jack DC7.5V 400mA



Used to plug in a VTech® 7.5V AC power adaptor (sold separately).


 
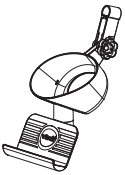 
 



## BUTTONS ON MICROPHONE

<b>Microphone ON/OFF</b> 	Use this switch to turn the microphone ON or OFF. Slide the switch up (I) for ON and down (O) for OFF. <b>NOTE:</b> To avoid picking up any unnecessary harsh sounds from the microphone, place the microphone away from the speaker and switch the microphone OFF whenever it is not in use.
<b>Instant Sound Effects</b> 	Press this button to add a sound effect over your performance.

## INCLUDED IN THIS PACKAGE


- 1 VTech® Kidi Super Star®
- 1 microphone
- 1 3.5mm jack audio cable
- 1 instruction manual
- 4 AA batteries for demo purpose only
- 1 set of stand components

 **NOTE:** Includes 3 poles to adjust height. Ensure the stand is assembled using the correct number of poles for your child's height.

 x 1	 x 1	 x 1
 x 2	 x 3	
 x 1	 x 3	

**WARNING:** All packing materials such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


**NOTE:** Please keep user's manual as it contains important information.

This product is only to be connected to equipment of Class II (marked on the marking plate with a symbol ).

INCLUDED IN THIS PACKAGE








## Unlock the packaging locks:

 - ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

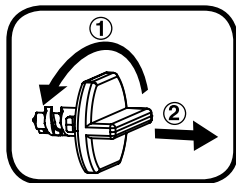


## STAND ASSEMBLY

       Adult assembly required. For your child's safety, do not let your child play with this product until it is fully assembled.

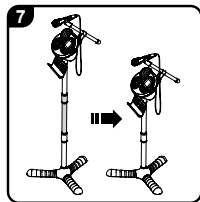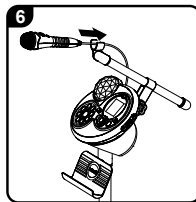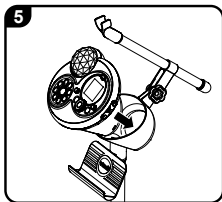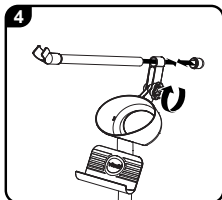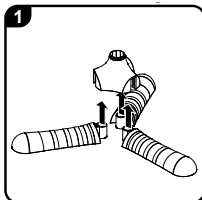

 For the best stability, we recommend positioning any foot of the stand perpendicular to the back of the **Kidi Super Star**® unit. Please refer to the below illustration

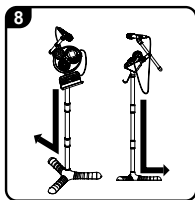





# GETTING STARTED

## BATTERY INSTALLATION

**Kidi Super Star®** uses 4 AA size batteries or a **VTech®** 7.5V adaptor (sold separately).

  - Make sure the unit is turned OFF.
- Locate the battery cover at the back of the unit.
- Remove the battery cover and install 4 AA size batteries as illustrated.
- Close the battery cover.

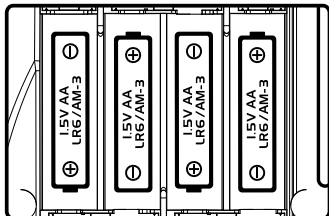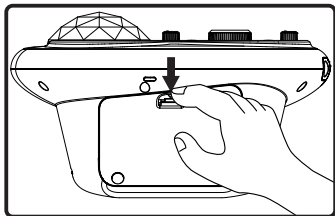

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:


[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

## POWER ADAPTOR CONNECTION

- Make sure the unit is turned OFF and ensure no batteries remain inside the unit.
- Locate the AC/DC Jack on the side of the unit.
- Connect the power adaptor into the unit's AC/DC Jack.
- Insert the other end of the power adaptor into a plug socket.
- Turn the unit ON.

## TRANSFORMER SAFETY NOTICE

- Using a **VTech®** adaptor (AC/DC 7.5V  400mA) is recommended.
- This product should only be used with a transformer for toys.
- The transformer is not a toy.
- This product is not intended for use by children under the age of 3.
- Do not connect this product to more than the recommended number of power supplies.
- Never clean this product with liquid when it is plugged into a power supply.
- Please regularly examine the transformer, checking for damage to the cord, plug and other areas. Do not use the transformer if there is any damage to it.

**NOTE:** If the unit stops working or the sound becomes weak, it may be because of a fault with the power adaptor connection.


Turn the unit OFF and unplug the adaptor for 15 seconds. Then plug the adaptor back in and turn the unit ON. If the problem persists, the adaptor you are using may be faulty.

## TO BEGIN USING KIDI SUPER STAR®


### ACTIVATING NORMAL PLAY

If the picture on the right appears on screen, It means that **Kidi Super Star®** is in 'Try Me' mode. Follow the below steps to deactivate 'Try Me' mode and to activate Normal play mode.



1. Make sure the unit is OFF.
2. Connect the microphone into the microphone jack of the unit.
3. Press the **ON/OFF** button  to turn on the unit.

### LOW BATTERY ICON



When the batteries are exhausted, the low battery icon  will be displayed and the unit will automatically shut off. Please replace the batteries with a full set of new batteries before further use.

If the product is frequently used, then the batteries will drain at a faster rate. We recommend using a power adaptor (sold separately) if this product is to be used frequently.


### AUTO POWER OFF

To preserve battery life, **Kidi Super Star®** will automatically power off if there is no operation for a period of time. You can change the Auto Power Off time in External Music Connection mode. To do this, simply enter External Music Connection mode and press the OK button to bring up the Auto Power Off menu, from here use the selection dial to change the time. We recommend the use of a power adaptor (sold separately) whenever possible.

# ACTIVITIES

<p>Games &amp; Tools</p> 	<ul style="list-style-type: none"><li>• Funky Monkey</li><li>• Beat Catcher</li><li>• Silly Beat, Silly Song</li><li>• Beat Boxer</li><li>• Play That Instrument</li><li>• Tongue Twisters</li></ul>
<p>Talent Show</p> 	<ul style="list-style-type: none"><li>• Singing Fun</li><li>• Free Play</li><li>• External Music Connection</li></ul>

## 1. GAMES & TOOLS

Press the Game & Tools button  to enter the Games & Tools menu. From here, turn the selection dial to choose an activity, pressing the OK button to confirm.

### 1.1 Funky Monkey

To play this fun party game, simply dance along with the monkey and freeze when the monkey freezes. There is no right or wrong way to dance; this is just a fun party game to play either on your own or with friends! Enjoy and have an amazing monkey time!



### 1.2 Beat Catcher

In this game, try to catch the music note on the right beat. Press the instant effect buttons to play. When the music note is in the target area, push the corresponding button to catch it. Try and catch them all!



### 1.3 Silly Beat, Silly Song

When there is a smiling face in the target area, make a silly sound into the microphone.

Record yourself when playing this game to see how silly the sounds you made were!



### 1.4 Beat Boxer

Beat Boxer is a tool that provides different musical beats for your own beat box creation. You can create, sing and beat box along to your preferred beat and record it! Play it back to see how great your beat box creation was!



### 1.5 Play That Instrument

Turn the selection dial to choose a piece of music and an instrument, pressing the OK button to confirm your selections. Then blow into the microphone to perform the music!



Change the instrument while you play using the selection dial!


### 1.6 Tongue Twisters

Challenge yourself to master all of these tricky Tongue Twisters! Turn the selection dial to select a twister, pressing the OK button to confirm. Listen to the instructions and repeat the Tongue Twister! Press the OK button when you've finished and select the next Tongue Twister! Can you master them all?



**NOTE:** For all of the Tongue Twister sentences, please refer to the **APPENDIX**.

## 2. TALENT SHOW

Press the Talent Show button  to enter the Talent Show menu. Then turn the selection dial to choose an activity and press the OK button to confirm.

### 2.1 Singing Fun

Choose the Singing Fun activity to learn and sing-along to 8 built-in songs. Turn the selection dial to choose a song and press the OK button to begin. When you are ready, press the Music Magic button to remove the main vocal track from the built-in songs and sing by yourself like a Super Star!



**NOTE:** For the lyrics of the 8 built-in sing-along songs, please refer to the **APPENDIX**.

## 2.2 Free Play

Here it is just you and the microphone. You can use your imagination to create your own concert, talk show, talent show, or to just play around and have fun! It's Show Time!



## 2.3 External Music Connection

Plug in an external music player (not included) via the provided 3.5mm jack audio cable to listen to your own music! From here, you can press the Music Magic button to reduce or remove the main vocal track from the current song. Now you can sing-along and be a Super Star!



You can also set an auto-off timer in this mode. To do so, simply press the OK button and turn the selection dial to choose your desired auto-off time: 60 minutes, 90 minutes, 120 minutes, 180 minutes or disabled auto-off. Please note that the disabled auto-off option can only be used when using a power adaptor.

The volume controls on the **Kidi Super Star**<sup>®</sup> cannot control the volume of external devices. Please use the volumes controls on your external music player to increase or decrease volume.

Music Magic mode may not apply for all songs. For details, you may refer to the Music Magic section under **PRODUCT FEATURES**.

**NOTE:** Please disconnect your external music player and the provided 3.5mm jack audio cable from **Kidi Super Star**<sup>®</sup> if it is not in use.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Handle the device carefully.
3. Keep the device away from dusty or dirty areas.
4. Keep the device away from moisture or extreme temperatures.
5. Do not disassemble the device. If a problem occurs, remove and replace the batteries to reset the device, or try new batteries.
6. Do not drop the device on a hard surface and do not expose it to or immerse it in water.

# TROUBLESHOOTING

Please refer to this section if you are experiencing difficulty operating your **Kidi Super Star®**.

<b>Problem</b>	<b>Possible cause</b>	<b>Correction</b>
Your <b>Kidi Super Star®</b> has stopped working or does not turn on	Incorrect battery polarities	Ensure that the batteries are installed using the correct polarity.
	Depleted batteries	Replace with new batteries.
	Power adaptor issue	Ensure that the adaptor is connected correctly.
Microphone output cannot be heard	The microphone is not plugged in correctly	Ensure that the microphone is connected to the unit firmly and correctly.
	The microphone is not switched on	Turn the ON/OFF switch on the microphone to the (I) ON position.
	The microphone volume is low	Turn up the microphone volume on the unit using the Microphone Volume Control Switch.
	The master volume is low	Turn up the master volume on the unit using the Master Volume Control Switch.
Microphone output is not loud enough*	The microphone volume is low	Turn up the microphone volume on the unit using the Microphone Volume Control Switch.

Harsh sounds coming from the speaker	The microphone may be too close to the speaker	To avoid picking up any unnecessary harsh sounds, please ensure that the microphone is kept away from the speaker and that the microphone is switched OFF whenever it is not in use.
Music Magic mode is not functioning correctly	The external music player is not correctly connected to <b>Kidi Super Star®</b>	Make sure that your external music player is well connected to <b>Kidi Super Star®</b> at both ends of the provided 3.5mm jack audio cable. <b>NOTE:</b> If your External Music Player is inside a case, we recommend removing it to ensure a firm connection with the audio cable.
	Unsuitable song source	The Music Magic feature may not work for all songs. Its effectiveness varies from song to song. For best results, studio recorded songs are recommended. Unfortunately we cannot guarantee Music Magic will work with every song. It is not recommended to use Music Magic for mono songs or live concert performances, etc.

**\*NOTE:** This unit complies with maximum volume output standards to protect your child's hearing.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



# APPENDIX

Table 1 - Tongue Twisters

1	Double bubble gum, bubbles double.
2	She sells seashells on the seashore.
3	Red lorry yellow lorry, red lorry yellow lorry, red lorry yellow lorry.
4	She sees cheese, she sees cheese, she sees cheese.
5	Rolling red wagons, rolling red wagons, rolling red wagons.
6	Freshly fried flying fish.
7	A proper copper coffee pot.
8	I scream, you scream, we all scream for ice cream.
9	Which wristwatches are Swiss wristwatches?
10	Many an anemone sees an enemy anemone.
11	How much wood would a woodchuck chuck if a woodchuck could chuck wood?
12	Peter Piper picked a peck of pickled peppers, A peck of pickled peppers Peter Piper picked
13	Fuzzy Wuzzy was a bear. Fuzzy Wuzzy had no hair. Fuzzy Wuzzy wasn't fuzzy, was he?
14	Any noise annoys an oyster, but a noisy noise annoys an oyster more.
15	If two witches were watching two watches, which witch would watch which watch?

**Table 2 – Singing Fun**

<b>1. Wiggle till the night!</b>	
We jump to the left we jump to the right, we jump up high and wiggle till the night.	We laugh to the left, we laugh to the right, we laugh in the light and wiggle till the night.
We dance to the left, we dance to the right, we dance in the light and wiggle till the night.	Come on! Friends! Don't be shy! Take my hand! And we wiggle...
Come on! Friends! Don't be shy! Take my hand! And we wiggle...	We jump to the left, we dance to the right, we clap up high and we wiggle till the night.
We clap to the left, we clap to the right, we clap up high and we wiggle till the night.	We wiggle to the left, we giggle to the right, we wiggle at night and we wiggle wiggle till the night. Oh yeah!
<b>2. You are my friend!</b>	
Doodle, Diddle, Noodle. You look like an angel. You're my friend; let's go do something, simple.	
Tickle, Giggle, Wiggle. You look like an angel. You're my friend and we laugh about anything, simple.	
Doodle, Diddle, Noodle. You look like an angel. You're my friend and we care about all living things, simple.	
Tickle, Giggle, Wiggle. You look like an angel. You're my friend, we share everything, simple.	

### 3. Shake your body!

Work, work, work a little bit harder!  
Move, move, move a little bit faster!  
Dance, dance, dance a little bit longer!

Are you ready to sweat? Get ready and let's go again!

Shake, shake, shake your hips!  
Use your legs to jump, jump, jump!  
Wave, wave, wave your hands!

Are you ready to sweat? Get ready and let's go again!

Shake, shake, shake your hips!  
Use your legs to jump, jump, jump!  
Cover, cover, cover your belly!  
And we're done!

### 4. Music saves us all!

Drop a beat and hit play  
Playing music makes my day  
Write a successful song  
Hope you'll sing along!

Sing, sing, sing along  
To the words of our favourite song  
Sing, sing, sing along  
It's sure to be a super hit!

Find a great outfit to wear  
Put on makeup, comb our hair  
Come on girls let's get loud  
And make our super fans proud!

Sing, sing, sing along  
To the words of our favourite song  
Sing, sing, sing along  
It's sure to be a super hit!

## 5. Cats and dogs!

At school thinking about home  
Our pet dog is all alone  
Barking, driving the neighbours mad  
Not to mention Mum and Dad  
He's a friendly, loving doggy  
We also have a kitty called Moggy

Cats and dogs are the best  
They give hugs better than the rest  
Cats and dogs are lots of fun  
They love playing in the sun

Moggy is a cute cat  
Always there on the mat  
She loves eating any food  
And is always in a happy mood  
She loves sitting on our laps  
For lovely long kitty naps

Cats and dogs are the best  
They give hugs better than the rest  
Cats and dogs are lots of fun  
They love playing in the sun

**6. Wake up!**

Wake up, get up, go outside!  
Let's even go for a ride!  
The sun is shining, the birds are singing,  
the bells are ringing, let's go outside!

Wake up, wake up,  
it's a big world out there!  
Wake up, wake up,  
let's get some air!

Wake up, get up, go explore!  
Don't want to hear you snore!  
It's a big world, many things to see,  
time for adventure for you and me!

Wake up, wake up,  
it's a big world out there!  
Wake up, wake up,  
let's get some air!

**7. My school is number one!**

I'm in my classroom, I am ready to learn.  
I study hard for all the A's that I earn.  
My friends and I find time to have fun.

Cause my school...  
My school is number one!

We learn a lot about so many things.  
Thankful for all the knowledge it brings.  
My friends and I find time to have fun.

Cause my school...  
My school is number one!

## 8. Dance for the show!

Shake your body, gotta go with the flow.  
Move your head and the next thing you know.  
You're out there spinning and you're ready to go.  
On the floor, the lights are aglow.

Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Oh yeah! Look at you go!

Shake your body, gotta go with the flow.  
Move your head and the next thing you know.  
You're out there spinning and you're ready to go.  
On the floor, the lights are aglow.

Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Dance, dance, dance for the show!  
Oh yeah! Look at you go!

**IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.





## PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

