

DREAMWORKS
**GABBY'S
DOLLHOUSE**



Instruction Manual

A-Meow-Zing Phone



DreamWorks Gabby's Dollhouse
© DreamWorks Animation LLC.
All rights reserved.

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTECH® Gabby's Dollhouse A-Meow-Zing Phone**.

Give Gabby and her friends a call with a phone that's just like the one Gabby uses in the show. This cat-shaped phone makes it feel like you're really talking to **Gabby**—she'll even respond! Play meow-mazing games focused on music, logic, maths and more with **Gabby, Pandy Paws, Cakey Cat** and **DJ 'Daniel James' Catnip**.

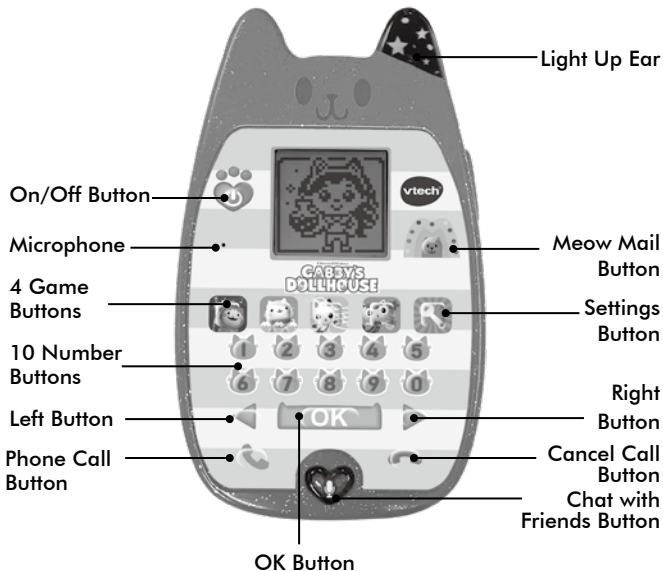

INCLUDED IN THIS PACKAGE

- One VTech® Gabby's Dollhouse **A-Meow-Zing Phone**
- Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

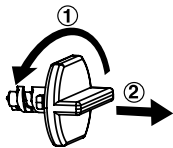

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

INSTRUCTIONS

 
WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Note: This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

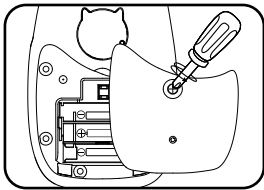

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. ON/OFF BUTTON



To turn the unit on, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit off.

2. MEOW MAIL BUTTON



Press the **Meow Mail Button** to hear messages from Gabby about her friends and see them on the screen. The light will flash with the sounds.

3. GAME BUTTONS

Press the **Game Buttons** to play one of the four games.



4. NUMBER BUTTONS

Press the **Number Buttons** to learn numbers or to answer number-related questions.



5. CHAT WITH FRIENDS BUTTON



Press the **Chat With Friends Button** to chat with Gabby and Pandy Paws and hear them respond.

6. OK BUTTON



Press the **OK Button** to confirm your choice.

7. LEFT/RIGHT BUTTONS



Press the **Left/Right Buttons** to make a selection in games or menus.

8. PHONE CALL BUTTON



 
Press the **Phone Call Button** to pretend to make a call and leave a message.

9. CANCEL CALL BUTTON

Press the **Cancel Call Button** at any time to end the call.

10. MICROPHONE

The **Microphone** is used for the voice activation feature. Be sure to keep the Microphone about 10cm from your mouth for best results.

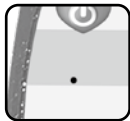


11. LIGHT UP EAR

The **Light Up Ear** will flash with the sounds during the games and features.



12. AUTOMATIC SHUT-OFF

To preserve battery life, the **A-Meow-Zing Phone** will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries .

NOTE:

If the unit powers down while playing, we suggest changing the batteries.

NOTE:

This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

GAMES & FEATURES:

The VTech® Gabby's Dollhouse **A-Meow-Zing Phone** has 6 games and features to play.

1. DJ's Music

It's music time! Blow into the **Microphone** to pass the mic to DJ 'Daniel James' Catnip. Press the **Number Buttons** to hear music. Press the **Left/Right Buttons** or **OK Button** to add fun sounds to the music.



2. Cake Pattern Fun

Help Cakey Cat decorate the cake by finding the correct shape to complete the pattern. Press the **Left/Right Buttons** to choose then press the **OK Button** to confirm. Celebrate completing all three levels by blowing into the **Microphone** to blow out the candle.



 
3. Hopscotch Memory

Pandy Paws is playing hopscotch! Remember the order and press the **Number Buttons** to repeat it.



4. Magic Potion Counting

Help MerCat find the correct number of shapes to make the magic potion. Press the **Left/Right Buttons** to choose then press the **OK Button** to confirm. Celebrate completing all three levels by blowing into the **Microphone** for a magical surprise.

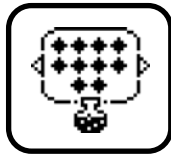

5. Meow Mail

Press the **Meow Mail Button** to hear messages from Gabby about her friends and see them on the screen.



6. Chat with Friends

Press the **Chat With Friends Button** to chat with Gabby and Pandy Paws. Speak into the **Microphone** and hear them respond.



7. Settings

Press this button to turn the background music on or off, adjust the screen contrast or choose a ringtone out of the three options.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2023 VTech Holdings Limited.
All rights reserved.
IM-561903-000
Version: 0