


vtech[®]

User's Manual

Gallop & Rock Learning Pony™



© 2016 VTech
Printed in China
91-003259-001 

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**® with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**®

To learn more about **VTech**® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Gallop & Rock Learning Pony™**.

The **Gallop & Rock Learning Pony™** easily transforms from a rocker to a ride-on. The two chunky handles are easy for toddlers to grasp when riding on the pony. Press one of the three light-up buttons to learn about colors and animals, and hear playful songs and imaginative phrases. Rocking or riding on the pony triggers the motion sensor and responds with fun melodies and sounds.

 
3 LIGHT-UP
BUTTONS

ON/OFF/MODE
SELECTOR SWITCH


TURNING DISC

VOLUME
CONTROL
SWITCH

2 HANDLES

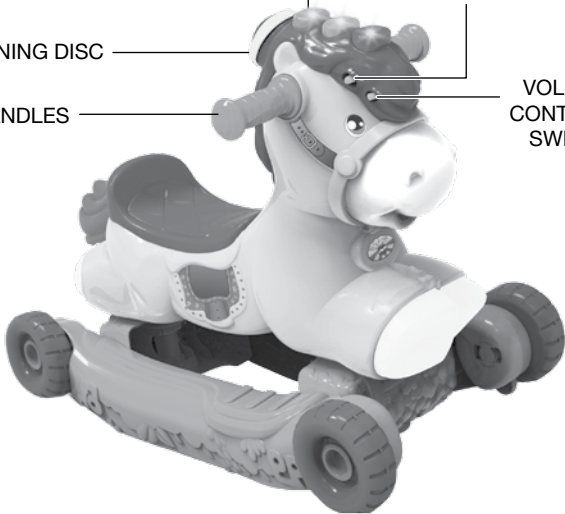

INCLUDED IN THIS PACKAGE

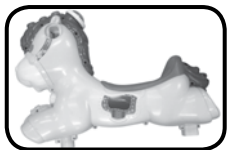 

One **Gallop & Rock Learning Pony™**



Four wheels



Two rockers



One front link bracket



Two handles



One back link bracket



8 small screws



Two plastic screws

- One user's manual
- One sheet of labels

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

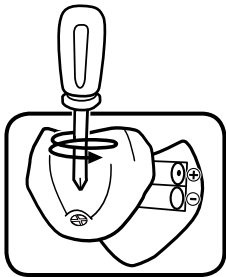

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.

- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

 
WARNING!

With the **VTech® Gallop & Rock Learning Pony™** safety comes first:

Adult assembly required. Not to be used by children over 36 months. Insufficient strength. 20kg Max. Protective equipment should be worn. Not to be used in traffic.


This package contains 8 small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

Please stick the labels to the pony securely as indicted below:

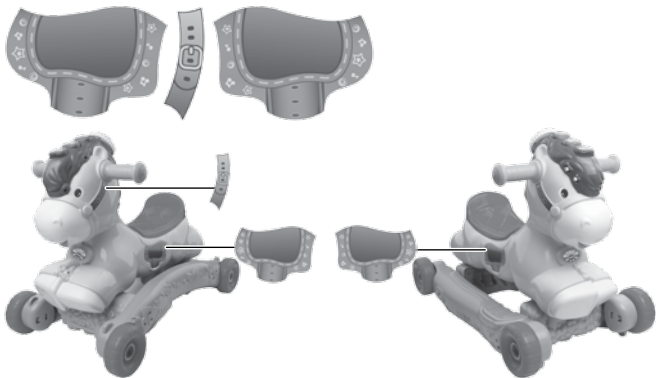

ASSEMBLY INSTRUCTIONS

 
1. Insert the 4 wheels into the two rockers as shown. You will hear the wheels click into place to indicate they are attached securely.

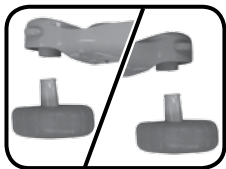


2. Insert the front link bracket and the back link bracket into the inside of the rockers. Secure the brackets to the rockers with the small screws provided.



 
3. Insert the **Gallop & Rock Learning Pony™** onto the support brackets as shown.

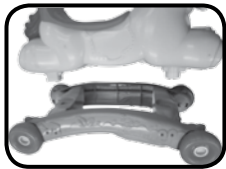

 4. Insert the two plastic screws into the holes in the front link and back link brackets. Turn the screws clockwise to secure. You will hear the locks click into place to indicate they are attached securely.


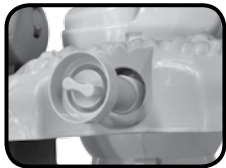


 5. Insert the two handles into the side of the pony's head. You will hear the handles click into place to indicate the handles are attached securely.

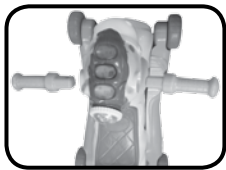

TRANSFORM FROM ROCKER TO RIDE-ON MODE

  
6. To change the pony from the rocker mode to the ride-on mode, press and hold the lock next to the plastic screws and turn the screws counter-clockwise. Remove the rocker panel and turn it over so the wheels are on the ground. Re-insert the two plastic screws into the holes in the front link and back link brackets. Turn the screws clockwise to secure.

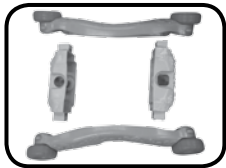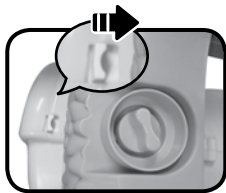

PRODUCT FEATURES


1. ON/OFF/MODE SELECTOR SWITCH

 To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING & MUSIC MODE** (🎵🎵) or the **ADVENTURE MODE** (🔍) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

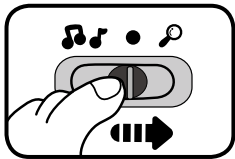

2. VOLUME CONTROL SWITCH

 To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or the **HIGH VOLUME** (🔊) position.

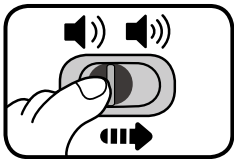


3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Gallop & Rock Learning Pony™** will automatically power-down after approximately 65 seconds without input. The unit can be turned on again by pressing any button, or turning the disc.


Note: If the unit repeatedly powers down quickly, we suggest changing the batteries.

ACTIVITIES

 1. Slide the **on/off/mode selector switch** to turn the unit on. You will hear a playful song and a friendly phrase. The lights will flash with the sounds.

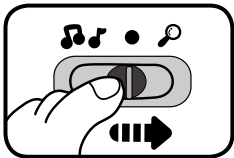

 2. Press the **light-up buttons** to learn about colors and animals, and hear fun songs and music in the Learning & Music Mode. In the Adventure Mode you will hear playful phrases, sounds and songs. When a melody is playing, press the light-up buttons to play the melody one note at a time. The lights will flash with the sounds.

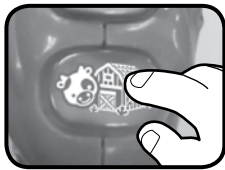

3. Spin the **turning disc** to hear fun sounds and short tunes in the Learning & Music Mode. In the Adventure Mode, you will hear playful phrases and horse sounds. The lights will flash with the sounds.



4. Rock or ride the pony to activate the **motion sensor**. In the Learning & Music Mode you will hear playful melodies. In the Adventure Mode you will hear a variety of fun sounds. The lights will flash with the sounds. The faster you ride, the faster the lights will flash.

MELODY LIST

1. Pop Goes the Weasel
2. Ring Around the Rosy
3. Old MacDonald
4. Farmer in the Dell
5. Sailing, Sailing
6. Down by the Riverside
7. Oh, Susanna
8. Bear Went Over the Mountain
9. Yankee Doodle
10. Polly Wolly Doodle
11. She'll Be Coming Round the Mountain
12. Skip To My Lou
13. Toyland
14. Ta Ra Ra Boom De Ay
15. To Market, To Market

SUNG SONG LYRICS

SONG 1

Klip, klop, klippity, kloppity,
We are on our way.

SONG 2

We are going on an adventure!
We are galloping through the tall trees,
We are in the forest.

SONG 3

We are going on an adventure!
We are running through the grassy field,
We are at the farm!

SONG 4

We are going on an adventure!
We are trotting on the sandy ground.
We are at the beach!

SONG 5

Hop into the saddle, hold on tight,
I'm ready to ride.

CARE & MAINTENANCE

1. Keep the unit clean by wiping with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.