

nick jr.



Parent's Guide

PAW Patrol Learning Watch



© 2018 Spin Master PAW Productions Inc. All Rights Reserved.
PAW Patrol and all related titles, logos and characters are
trademarks of Spin Master Ltd. Nickelodeon and all related titles
and logos are trademarks of Viacom International Inc.



91-003447-002 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years




To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

The VTech® PAW Patrol Learning Watch is a great wearable gadget for children! As well as displaying a digital clock, this watch features handy alarm, timer and stopwatch functions. There are also 4 built-in games to test your skills at matching, problem solving and maths as you go on an adventure with the PAW Patrol.

FEATURES

PRODUCT LAYOUT AND BUTTONS

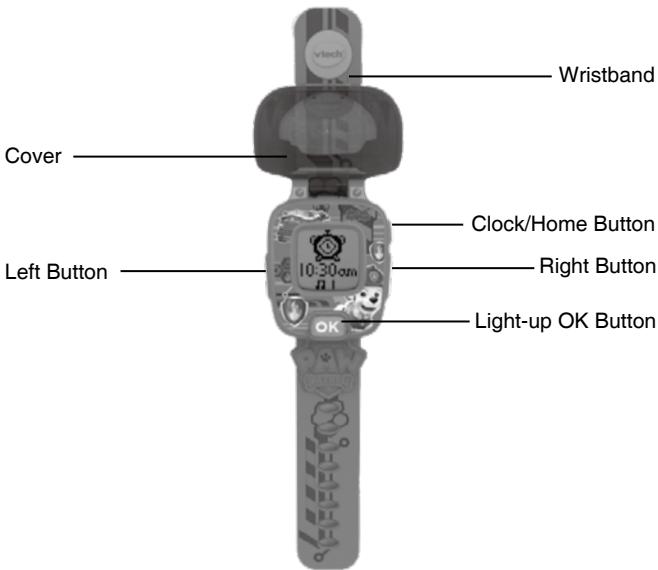

INCLUDED IN THIS PACKAGE

- 1 VTech® PAW Patrol Learning Watch
- 1 Parent's Guide
- 1 CR2450 battery (placed inside the product)

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

PRODUCT SPECIFICATION

BATTERY	One CR2450 battery
TIME FORMAT	12h or 24h
DISPLAY	Digital
OPTIMUM OPERATING AND CHARGING TEMPERATURE	32°F - 104°F (0°C - 40°C)

Important Note:

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

WARNING:

People with very sensitive skin may notice some irritation after wearing the **VTech® PAW Patrol Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

Cover

Open the cover to view the time. When the cover is closed, tap bottom of the cover to activate PAW Patrol phrases with a lighting effect.

Left/Right Buttons

Use the **Left** and **Right Buttons** to select an activity or option, or to change options in time settings or alarm mode.

Light Up OK Button

Press the **Light Up OK Button** to confirm a selection and move to the next option in different activities.

Clock/Home Button

Press the **Clock Button** to return to the clock from any other function or activity.

GETTING STARTED

WARNING:

This product contains a coin battery. A coin battery can cause serious internal chemical burns if swallowed.

WARNING:

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


POWER SOURCE

The **VTech® PAW Patrol Learning Watch** operates using a CR2450 battery. The CR2450 battery included with the product is for demo purposes only.

BATTERY INSTALLATION

NOTE: For best performance, remove the factory-installed battery from the **VTech® PAW Patrol Learning Watch** and use a new battery.

1. Locate the battery cover on the back of the unit and open it with a screwdriver (not included).
2. Remove the battery cover and insert a CR2450 battery as illustrated.
3. Replace the battery cover and fasten the screw.

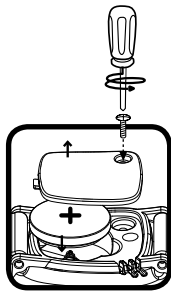

BATTERY NOTICE

- Use one CR2450 Lithium coin battery only for this toy. Do not use rechargeable Lithium ion battery LIR2450. This toy is not compatible with LIR2450.

- The coin battery used with this product should be kept away from small children who might still put things in their mouths. If the coin battery is swallowed, consult a doctor immediately.
- Insert the coin battery with the correct polarity.
- Do not use a damaged coin battery.
- Do not short-circuit the coin battery terminals.
- Remove exhausted coin battery from the product.
- Remove coin battery during long periods of non-use.
- Do not dispose of coin battery in fire.
- Do not charge non-rechargeable coin battery.
- Rechargeable batteries are to be removed from the toy before being charged. (if removable)
- Rechargeable batteries are only to be charged under adult supervision. (if removable)

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

TO BEGIN USING THE VTECH® PAW PATROL LEARNING WATCH

When you use the watch for the first time, open the cover, then press the **LEFT+RIGHT+OK Buttons** for approximately 5 seconds to unlock the Try Me mode. You will hear three 'beeping' sounds when the try me mode is unlocked. You can then press any button to activate the watch and set the time.

Press the **Left/Right Buttons** to select, then press the **OK Button** to confirm and move to the next option. A tick will be displayed when the setting is complete.


Note:

- When the battery level is low, most functions on the watch may not be activated, except for the clock display. It is recommended to change a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after the battery has been replaced.

AUTOMATIC POWER OFF

To save power, the **VTech® PAW Patrol Learning Watch** will automatically power off when there has been no input for about 30 seconds. Press any button or open the cover to turn the unit **ON** again.

The unit will also automatically turn **OFF** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.

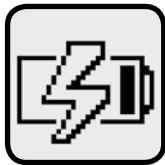






ACTIVITIES

Clock Display

When the **Clock/Home Button** is pressed, the time will be displayed. Press the **Left** or **Right Buttons** to display the **Home Menu** where other activities can be selected.

Home Menu

Press the **Left** or **Right Buttons** to display the **Home Menu**. There are 5 activities to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Buttons** to scroll through the menu options.
- Press the **OK Button** to enter the chosen activity.

1. Alarm Clock

You can set an alarm with a choice of 10 alarm tones.

- Press the **Left** or **Right Buttons** to select the time/alarm tone.
- Press the **OK Button** to confirm and move to the next setting.



2. Stopwatch

Access the stopwatch here.

- Press the **OK Button** to start the **Stopwatch**, press again to stop.
- When the stopwatch is stopped, you can press the **Left** or **Right Buttons** to reset.



3. Timer

Set a countdown timer here.

- Press the **Left** or **Right Buttons** to change the time.
- Press the **OK Button** to confirm.
- When you press the **OK Button** to confirm the timer duration, the countdown will start immediately.
- While the timer is running, you can press the **OK Button** to pause/resume, and press the **Left** or **Right Button** to reset.



4. Games

In the Games menu, press the **Left** or **Right Buttons** to scroll through the different progressive leaning game options:

4.1. Pups and the Badges

Ryder has mixed up all the badges and gadgets of the pups. Help Ryder find the correct badges and gadgets. Press the **Left** or **Right Buttons** to select, and press the **OK Button** to confirm.



4.2. Pups First Aid

Jake has slipped on the snow-covered mountain slope and hurt himself. Help Marshall use his x-ray screen and EMT kit to take care of the injuries. Press the **Left** or **Right Buttons** to select, and press the **OK Button** to confirm.



4.3. Pups Save the Animals

Farmer Yumi's fence is broken and her animals have escaped. Follow the instructions to help Chase find the animals. Press the **Left** or **Right Buttons** to select, and press the **OK Button** to confirm.



4.4. Pups Temple Rescue

Mandy the monkey has swiped Ryder's PupPad in the jungle and run into a mysterious temple. Solve some maths problems with Skye to open the door and find the PupPad. Press the **Left** or **Right Buttons** to select, and press the **OK Button** to confirm.



5. Settings

In the **Settings** menu, press the **Left** or **Right Buttons** to scroll through the various options:

5.1. Clock Face

- Press the **Left** or **Right Buttons** to select from 12 different clock faces.
- Press **OK Button** to confirm.



5.2. Cuckoo Clock

- When Chickaletta's **Cuckoo Clock** is activated, the watch will briefly chime at the top of each hour between 7am and 7pm. The **Cuckoo Clock** will not ring if a game is in progress.



- Press the **Left** or **Right Buttons** to turn the **Cuckoo Clock ON** or **OFF**.
- Press **OK Button** to confirm.

5.3. Time Setting

- Press the **Left** or **Right Buttons** to change the options. (am/pm setting is only applicable in 12-hour time format)
- Press **OK Button** to confirm.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the battery when not using it for an extended period of time.
4. Avoid dropping it. Never try to dismantle it.
5. Always keep the unit away from water.

TROUBLESHOOTING

If for some reason the program/activity stops working or the unit can't be turned on again, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit does not work, replace with an entire set of new battery.

If the problem persists, please call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 0330 678 0149 (from UK) and +44 330 678 0149 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

