


vtech[®]

Parent's Guide

Secret Safe Treasure Chest



91-003869-004 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Keep your treasure safe with the **Secret Safe Treasure Chest** by **VTech®**! This beautifully designed Treasure Chest is great for protecting your treasures. Unlock the Treasure Chest with your very own 4-digit password to keep your secrets safe inside. You can even use the built-in alarm clock to help you wake up just in time to head off for the day.

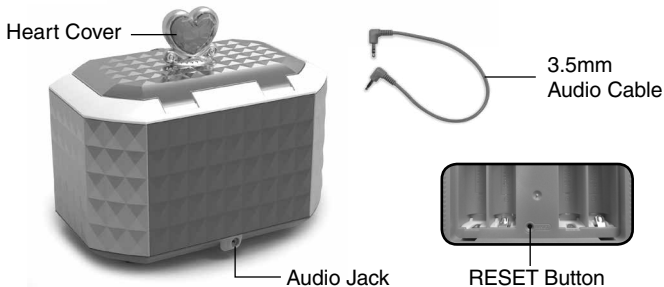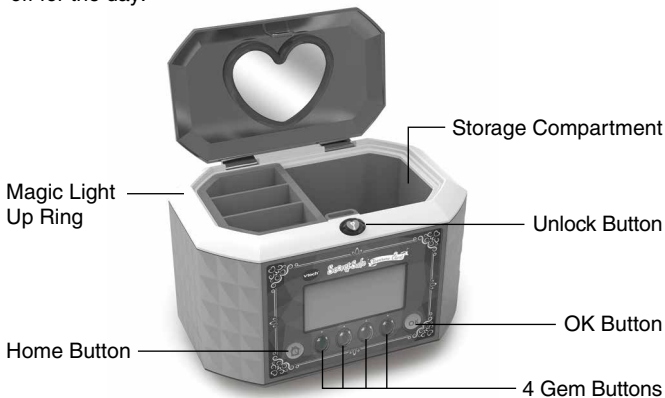


INCLUDED IN THIS PACKAGE

- One VTech® Secret Safe Treasure Chest
- One Parent's Guide
- One 3.5mm Audio Cable
- One Tray

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this Parent's Guide as it contains important information.

This toy is only to be connected to Class II equipment bearing the following symbol .

Unlock the packaging locks:

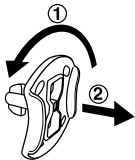


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Open the battery cover.

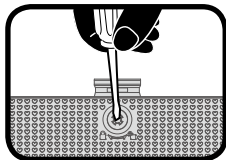

 - If used or spent batteries are present, remove them by pulling up on one end of each battery.
- Install 4 new AA batteries into the compartment as illustrated. (The use of new, alkaline batteries is recommended for maximum performance).
- Replace the battery cover.

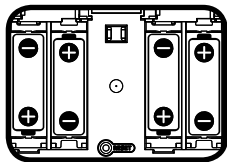

NOTE: The clock and date will be reset each time the batteries are replaced.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

Activating Normal Play Mode:

When you first use the Treasure Chest, you will need to activate normal play mode.

1. Press any button to turn on the unit.
2. Press the RESET button (It is located in the battery compartment with the word "RESET").
3. The screen will display the message "Normal Mode".
4. Then, press any button to turn on the unit. You can then begin using the Treasure Chest in normal play mode.

PRODUCT FEATURES

1. **Unlock Button**

Press this button to set or enter your password to open the Treasure Chest. There are two password formats: Number Password and Picture Password. You can choose 1 format to open the cover. You can turn the unlock function ON or OFF in Settings. Please close the Treasure Chest at any time to keep your treasures safe.

2. **RESET Button**

Press this button to reset the password. To activate normal play, first turn on the Treasure Chest. Then, press the RESET button until the screen shows the message "Normal Mode". To reset the password, press the Unlock button to enter the password input screen. Then, press the RESET button until "Password Reset" shows on the screen and the Treasure Chest will open. Close the Treasure Chest and press the unlock button again. You will then be asked to set a new password.

3. **Home Button**

Press this button to shift between the main menu and clock. In the main menu, there are 4 categories: Clock, Games, Music and Settings. Pressing the Home button when in the main menu will display the clock.

4. **4 Gem Buttons**

Press the Gem buttons to make a choice or play the games.

5. **OK Button**

Press this button to confirm your selection. When on the clock screen, press this button to tell the current time.

6. Audio Jack

The Audio Jack is located on the bottom of the unit. Connect a music player (not included) to the Treasure Chest with the included 3.5mm Audio Cable. The Treasure Chest will enter Music mode automatically, ready to play the music.

7. Light Up Screen

This is a light up screen. Go to Setting to turn on or off the screen light.

8. Colour Changing Light

Features mood lighting colours and lighting effect. Go to Setting to turn on or off the colour changing light.

9. Alarm

You can set an alarm in the Alarm Setting screen. When the alarm sounds, press any button to stop it. If no button is pressed, the alarm will stop after 30 seconds.

10. Cover

If the cover can't be closed, please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The cover can now be closed again.

If the above steps have not solved the problem, please refer to the **TROUBLESHOOTING** section in this guide.

11. AUTOMATIC SHUT-OFF

To preserve battery life, the Secret Safe Treasure Chest will automatically switch to clock mode after several minutes without input or when the battery power is low. The unit can be turned on again by pressing any button.

When the battery power is very low, a warning will be displayed on the screen as a reminder to change the batteries.

ACTIVITIES

Time Settings

When you first use the Treasure Chest, or change the batteries, you will need to set the time. Press the Gem buttons to select the time. Then, press the OK button to confirm.

Password Settings

Press the Unlock button. Then, follow the below steps.

Step 1 – Choose a password format.

Step 2 – Enter a new password.

Step 3 – Repeat the password.

Step 4 – Choose a melody for when the Treasure Chest opens up.

If the password is successfully set, the Treasure Chest will open up, play a melody and the lights will flash.

To turn the password ON or OFF, to change the password, or to change the opening music, go to Settings.

Enter the Password

If you have set the password, press the Unlock button. You will then be asked to enter the password to open the Treasure Chest. If the password is correct, the cover will open up with a melody and a light effect.

Reset the Password

After you press the Unlock button, press the RESET button which is located inside the battery compartment to clear the password.

Clock

There are 3 clock settings in this category.

1. Time

Enter this setting to set the time. Press the Gem buttons to make a selection and press the OK button to save.



2. Clock Face

Enter this setting to select a clock background. There are 10 backgrounds for selection. You can press the yellow or blue Gem buttons to select a background and press the OK button to confirm.



3. Alarm

Enter this setting to set an alarm. Here you can:

- Turn the alarm on or off.
- Select an alarm tune.
- Set the alarm time.



Use the Gem buttons to make a selection and press the OK button to save. When the alarm is set and it activates, you will see the alarm animation, an accompanying sound and colour changing lights.

Fun Games

There are 9 games in this category.

1. Hide and Seek

A butterfly will hide behind 1 of the 4 flowers. Then, the 4 flowers will keep changing their position and stop. After the flowers stop, choose the flower that the butterfly is hiding behind. Press the related Gem button to answer.

Level 1: Easy

Level 2: Hard



2. Food Company

The food will move on the screen from right to left. Select the correct box at the bottom to collect the food when it reaches it on the left side of the screen. Press the related Gem button to play.

Level 1: Collect 2 types of food.

Level 2: Collect 4 types of food.



3. Magically Disappearing Cats

The cats will appear from 1 of the 4 holes. The player will need to press the correct button to make the cat magically disappear. Press the Gem buttons to play.

Level 1: Slow speed.

Level 2: Fast speed.



4. Cake Collection

A specific cake will be shown on the screen. It will then disappear and items will begin dropping from the top of the screen. Collect the specific cake that was originally shown. Press the Gem buttons to change the position of the plate in order to collect the correct cake.



5. Spot the Difference

4 objects or numbers will be shown on the screen, press the 4 objects or numbers will be shown on the screen, press the Gem button that is directly below the images to pick the odd one out!



Level 1: Find a different object from the 4 objects.

Level 2: Find the only odd or even number amongst the other numbers.

6. Match the Letters

A letter will appear on the chest, with 4 other letters underneath. You need to match the letter on the chest with the same letter underneath. Press the Gem button that is directly below the letter you want to select.



Level 1: Find the same letter.

Level 2: Match the capital letter with the lower case letter.

7. Speedy Speller

4 letters will be shown on the bottom of the screen. You will then need to combine the letters to make as many words as you can within the given time. Press the Gem buttons to select a letter. Then, press the OK button to confirm the word you have made.



8. Guess the Password

You need to guess the password with the given hint. Press the Gem buttons to select the numbers. Press the OK button to confirm. You have 8 chances to guess the password correctly.



Below is the meaning of the hint icon.

V = The password includes this number and the position is correct.

O = The password includes this number, but the position is not correct.

X = The password does not include this number.

9. Order Challenge

A screen will show 4 numbers. Press 2 Gem buttons to exchange the number position in order to arrange the numbers from smallest to biggest.



Music

There are 3 activities in this category.

1. Music Player

Connect a music player (not included) and enter this mode to listen to your music and see the lights flash with the song.



2. Music Box

Select a melody to listen to it. When the melody is playing, an animation will play with the melody. The lights will flash with the melody. Press a Gem button to select a function.



: Press the Gem buttons below the arrows to go to the previous or next melody.



: Press the Gem buttons below the stop or play icon to stop or play the music.



: Press the Gem button below this icon to play the entire playlist again.



: Press the Gem button below this icon to repeat the song.




: Press the Gem button below this icon to play the songs in the playlist randomly.

3. Music Creation


Here you can create your very own melodies. Press the Gem buttons to select a function and create a melody. You can review, edit and save your own melody.




: Add a music note.


: Remove a music note.


: Add a rest note.

: Change the tempo of the composed melody.


: Select a light effect for your composed melody.

: Review the melody.

: Save your composed melody.

: Go back to music list or add a new melody.

After adding your chosen music notes, select one of the following to create your melody.

: Change the beat of the music note.

: Raise the tone of the music note.

: Lower the tone of the music note.

Settings

There are 5 settings to choose from in this category.

1. Password – Turn the password On or Off, or change the password. You can also change the melody that plays when the Treasure Chest opens.
2. Screen Light – Turn the screen light On or Off.
3. Colour Changing Light – Select a light effect for the Music Player and Alarm, or turn the Colour Changing Light On or Off.
4. Volume and Background Music – Set the volume, or turn the background music On or Off.
5. Music Setting – Select an auto-off time for the Music Player and Music Box.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or the unit can't be turned on again, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

