

vtech[®]
baby

Instruction Manual

Beep Beep Baby Driver



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Beep Beep Baby Driver** by VTech®! Put baby in the driver's seat with this exciting driver that attaches to pushchairs. Cool car features and interactive dashboard buttons are fun to play with sitting down or on-the-go!

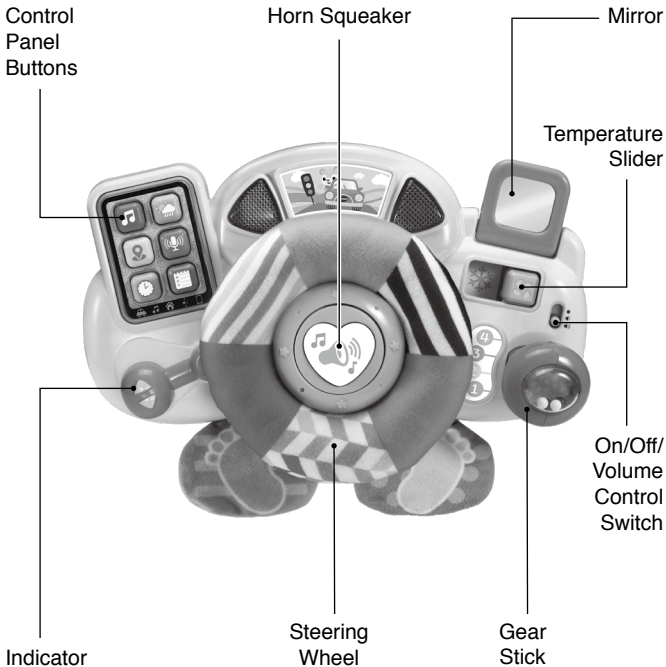

INCLUDED IN THE PACKAGE

- **Beep Beep Baby Driver**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

 
NOTE:

Please save this Instruction Manual as it contains important information.

WARNING

With the **Beep Beep Baby Driver** safety comes first. To ensure your child's safety, adult assembly is required. Never use the **Beep Beep Baby Driver** as a handle. Do not use in moving vehicles. Do not add additional strings or straps. Possible entanglement or strangulation injury when attached to cots or playpens. Do not attach to cots or playpens.

Removing the Packaging Locks:

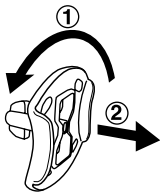

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

INSTRUCTIONS

 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

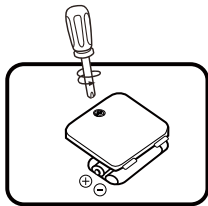

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product




The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit **On**, slide the **On/Off/Volume Control Switch** to the Low volume (🔊) or High volume (🔊🔊) position. You will hear fun sounds, a phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Control Switch** to the **Off** (●) position.

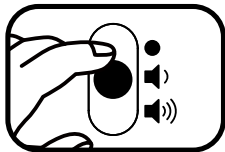

2. Pushchair Attachment

Position the **Beep Beep Baby Driver** on the pushchair bar. Using the straps on the back of the toy, fasten each side of the toy securely to the pushchair bar using the hook and loop closures, ensuring they are securely fastened.



3. Automatic Shut-Off

To preserve battery life, the **Beep Beep Baby Driver** will automatically shut off after approximately 45 seconds without input. The unit can be turned on again by activating the electronic features. Turning the steering wheel will not turn the unit back on.

 
NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Steering Wheel

Turn the **Steering Wheel** to pretend to drive, you will hear fun car sounds, friendly phrases and music. The lights will flash with the sound.

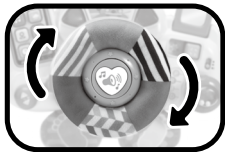

2. Control Panel Buttons

Press one of the six **Control Panel Buttons** to learn colours, hear songs, playful melodies, fun phrases and sounds related to the button graphics. The lights will flash with the sound.



 
3. Gear Stick

Push or pull the **Gear Stick** to learn about opposites through imaginative phrases, sounds and short tunes. The lights will flash with the sound.



4. Indicator

Slide the **Indicator** to hear realistic car sounds and imaginative phrases. The lights will flash with the sound.

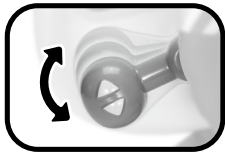

5. Temperature Slider

Slide the **Temperature Slider** to pretend to choose heating or cooling mode while driving, hear fun sounds and phrases. The lights will flash with the sound.



6. Horn Button

Press the **Horn button** to hear a fun squeaking sound.



MELODIES

1. Yankee Doodle
2. Glow Worm
3. Chicago, That Toddlin' Town
4. William Tell Overture
5. The Wheels on the Bus
6. Looby Loo
7. Hickory, Dickory, Dock
8. Funiculi, Funicula
9. Colonel Bogey March
10. A-Tisket, A-Tasket

SONG LYRICS

Song 1

Beep, beep!
Wave hello to friends you know!
Beep, beep!
Wave good-bye, it's time to go!

Song 2

Start the car, where should we go?
Turn the wheel, let's go, go, go!

Song 3

Drive through the city,
Drive through the country,
Drive through the forest,
There's lots to see!

Song 4

Red light means it's time to stop,
And amber means it's time to slow.
Green light means it's time to go.
These are the rules of the road!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The soft fabric steering wheel and soft pedals are surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

