

Parent's Guide

Feathers & Feelings Peacock



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

> chool Interactive toys to develop their imagination and encourage language development

want

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Ineed...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

vtech Baby

stimulate their interest

in different textures. sounds and colours

...responding to colours,

...understanding cause

...learning to touch, reach,

grasp, sit-up, crawl and

sounds and textures

Toys that will

lam...

and effect


toddle





INTRODUCTION

Thank you for purchasing the VTech® Feathers & Feelings Peacock. Explore and discover with this brightly coloured, light up, peacock. Learn colours, shapes, numbers, counting and emotions! Add or remove Peacock's pegs and he will share his emotions; happy, sad, angry or surprised with you.

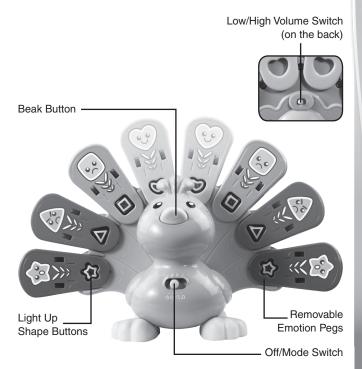

INCLUDED IN THIS PACKAGE

- One Feathers & Feelings Peacock
- 8 Emotion Pegs



· One Parent's Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this Parent's Guide as it contains important information.

Unlock the packaging locks:



- 1 Turn the packaging lock anti-clockwise several times.
- 2 Pull out and discard the packaging lock.

Exit Try-Me Mode

When the **Feathers & Feelings Peacock** is taken out of the gift box, it will still be in the Try-Me mode, which only gives limited responses. To activate the full program, turn the unit on and then slide the **Low/High Volume Switch** at the back of the **Feathers & Feelings Peacock** to enter normal play.

 
When the peacock exits the Try-me mode, it will play 2 beep sounds.

GETTING STARTED

BATTERY INSTALLATION

- Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the Feathers & Feelings Peacock. Use a screwdriver to loosen the screw.
- If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 2 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 5. Replace the battery cover and tighten the screw to secure.



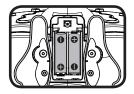

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- · Remove exhausted batteries from the toy.
- · Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- · Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. Off/Mode Switch



Slide the Off/Mode Switch from left to right to switch the unit on and choose a mode: Explore & Learn Mode, Question Mode or Music Mode. Slide the switch back to the OFF position to turn the unit off.

2. Low/High Volume Switch

Slide the Low/High Volume Switch on the back of the Feathers & Feelings Peacock to the left for lower volume and to the right for higher volume.

3. Beak Button



Press the **Beak Button** to hear the **Feathers & Feelings Peacock** introduce himself in **Explore & Learn Mode**, give hints to answer the questions in **Question Mode** and hear him sing in **Music Mode**.

4. Light Up Shape Buttons



Press the **Shape Buttons** to learn the shapes & colours in **Explore & Learn Mode**, answer the questions in **Question Mode** and hear music in **Music Mode**.

5. Removable Emotion Pegs



Add or remove the pegs to learn emotions, colours and counting in **Explore & Learn Mode** and answer the questions in **Question Mode**. Add a peg to Peacock's tail to hear music in **Music Mode**.

6. AUTOMATIC SHUT-OFF

To preserve battery life, the **Feathers & Feelings Peacock** will automatically power down after several minutes without input. The unit can be turned on again by moving the **Off/Mode Switch** to any mode.

NOTE: If the **Feathers & Feelings Peacock** powers down while playing, we suggest installing a brand new set of batteries.

MODES

Mode 1: Explore & Learn Mode



Move the **Off/Mode Switch** to the second position to enter this mode. Add or remove the pegs from Peacock's tail to learn emotions, colours and counting. Press a button that has a peg on to learn emotions, colours and counting. Press a button with no peg on to learn colours and shapes. Press Peacock's **Beak Button** to hear fun facts about Peacock.

Mode 2: Question Mode



Move the **Off/Mode Switch** to the third position to enter this mode. Peacock will ask questions. To answer the questions, press the buttons or add/remove a peg. If you need any help, press Peacock's **Beak Button** for a hint.

Mode 3: Music Mode



Move the **Off/Mode Switch** to the forth position to enter this mode. Press the shape buttons or add a peg to Peacock's tail to hear music. Press Peacock's **Beak Button** to hear Peacock sing.

SONG LYRICS

Song 1:

Look at my beautiful feathers.

They come in lots of colours.

Just pick a colour and press on a feather to see how I'm feeling. Blue means I'm sad, and yellow means I'm happy.

Red is the sign I'm very angry, and purple means I'm surprised!

Song 2:

Yellow, blue, red and purple. I have lots of different colours. Yellow, blue, red and purple. won't you play with me!

CARE & MAINTENANCE

- Keep the product clean by wiping them with a slightly damp cloth.
- Keep the product out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries when the product is not in use for an extended period of time.
- Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play with again.
- 5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

