 
 





Instruction Manual

Doodle & Draw Learning Board



INTRODUCTION

 Get creative with the **Doodle & Draw Learning Board** by VTech®! Learn how to write letters, numbers and draw shapes with step-by-step instructions. Create your masterpieces on this personalised doodle board with your name on it!

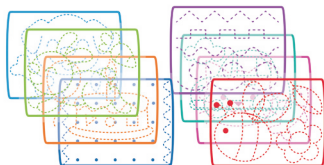

8 Stencils



Mode Selector

 
Magnetic Stamps

ABC Slide Eraser

Drawing Pen

Game Buttons

Game Buttons

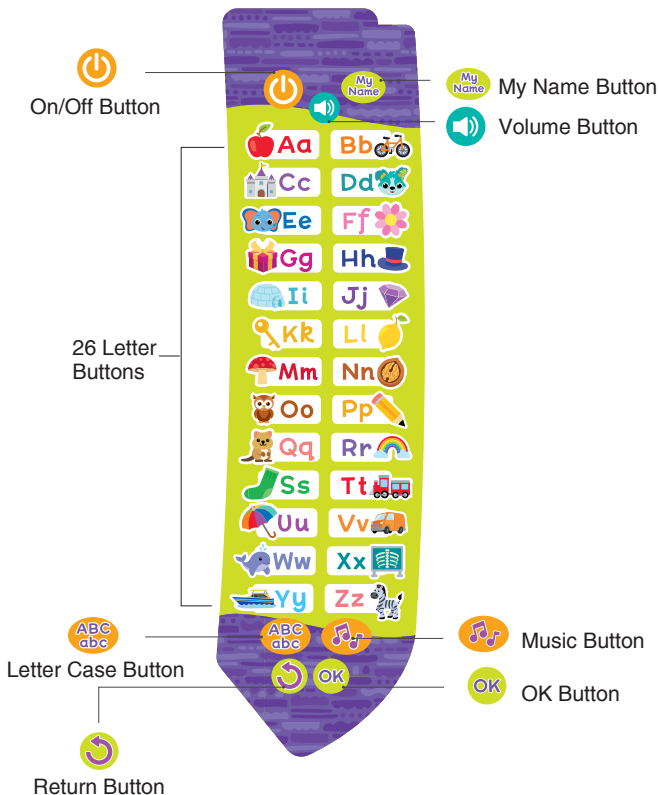

INCLUDED IN THIS PACKAGE

- One VTech® Doodle & Draw Learning Board
- Three Magnetic Stamps
- 8 Stencils
- Quick Start Guide

 
WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

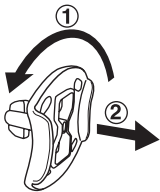

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

The **Doodle & Draw Learning Board** is in try-me mode in the packaging. To exit try-me mode, press the **On/Off Button** to turn the unit **On**, then use the **Drawing Pen** to draw on the board. The unit will exit try-me mode and restart.

 
INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

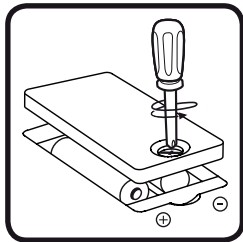

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

BEFORE USE

After unpacking, or after a long period of non-use, the magnetic surface may need to be re-activated to improve the drawing and writing functions. Use one of the **Stamps** to cover the surface of the screen. Then move the **ABC Slide Eraser** back and forth several times until the surface is clear.



Product Features

1. On/Off Button

To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

2. Drawing Pen

Use the **Drawing Pen** for tracing and drawing.



3. Mode Selector

Slide the **Mode Selector** to choose from five activities.



4. **My Name Button**

Press the **My Name Button** to enter a name and practise writing it.

5. **Music Button**

Press the **Music Button** to select different music to accompany your drawing.

6. **Letter Buttons**

Press the **26 Letter Buttons** to learn letters, numbers, shapes, objects, and more. Responses vary based on the mode selected.



7. **Letter Case Button**

Press the **Letter Case Button** to switch between uppercase and lowercase letters.

8. **OK Button**

Press the **OK Button** when you have finished a writing or drawing activity.

9. **Return Button**

Press the **Return Button** to delete entered letters or repeat instructions for an activity.

10. **ABC Slide Eraser**

Move the **ABC Slide Eraser** at the bottom from left to right, and back again to erase your designs.



11. Magnetic Stamps

Press the **Magnetic Stamps** on the drawing surface to add fun shapes to your artwork.



12. 8 Stencils

Place one of the **8 Stencils** onto the drawing board to practise drawing or tracing. Use the dot stencil to play **Connect the Dots**.



13. Automatic Shut-Off

To preserve battery life, the unit will automatically turn **Off** after approximately 30 seconds without input. The unit can be turned **On** again by pressing the **On/Off Button**.

ACTIVITIES

1. Learn to Write Aa

Use the **Drawing Pen** to follow the demonstration and practise the correct stroke order for uppercase and lowercase letters.

2. Number & Shape 2Δ

Use the **Drawing Pen** to follow along with the numbers 1-10, or practise lines and shapes as shown on the screen.

In this mode, **Letter Buttons** correspond to the following numbers and shapes:

A - 1
B - 2
C - 3
D - 4
E - 5
F - 6
G - 7
H - 8
I - 9
J - 10
K - Straight lines
L - Slanted lines
M - Curved lines
N - Circle
O - Oval
P - Crescent
Q - Heart
R - Triangle
S - Square
T - Rectangle
U - Diamond
V - Trapezium
W - Pentagon
X - Hexagon
Y - Octagon
Z - Star

3. Learn To Draw



Use the **Drawing Pen** on the board to follow step-by-step instructions on the screen and practise drawing the 26 objects.

4. Letter Picture

 


Find the hidden letters in each picture and press a **Letter Button** to answer. Next, draw a picture to turn your letter into a new object.

5. Connect the Dots



Place the **Dot Stencil** on the drawing surface. Then, follow instructions and connect the dots to reveal hidden pictures.

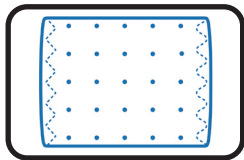

6. Write My Name

HELLO!
Riley

Press the **My Name Button** to practise writing your name. Use the **Letter Buttons** to enter your name, or press the **Undo Button** to delete the letters and enter a new name. Once the name is entered, press the **OK Button** to confirm. Then, practise writing each letter in the name.

7. Music Time



Press the **Music Button** to hear funny pen sounds and listen to music while you draw. Press the **Music Button** or **Letter Buttons** to change the melody.

MELODY LIST:

- A - Apples and Bananas
- B - Take Me out to the Ball Game
- C - The Wheels on the Bus
- D - Old MacDonald Had a Farm
- E - Humpty Dumpty
- F - Row Row Row Your Boat

G - Here We Go Round the Mulberry Bush
H - This is the House That Jack Built
I - Jack and Jill
J - Bingo
K - Little Miss Muffet
L - London Bridge is Falling Down
M - Hey Diddle Diddle
N - On Top of Old Smoky
O - Oranges and Lemons
P - A Tisket, A Tasket
Q - Old King Cole
R - Twinkle Twinkle Little Star
S - Incy Wincy Spider
T - The Farmer in the Dell
U - It's Raining, It's Pouring
V - Three Little Kittens
W - Sing a Song of Sixpence
X - Where O Where Has My Little Dog Gone
Y - This Old Man
Z - The Alphabet Song

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.
5. If the product still does not work, please install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

