

vtech[®]

Parent's Guide

Touch & Learn Activity Desk



91-003220-005^{UK}

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

4-10 years



INTRODUCTION

Thank you for purchasing the **Touch & Learn Activity Desk!**

The **Touch & Learn Activity Desk** features an interactive desktop with activity cards that introduce letters, music, colours and more. The writing pad with a light up display teaches how to write letters and numbers stroke by stroke. Flip up the desktop and create a masterpiece by using the art station or blackboard. For more fun, play with the toy phone or listen to tunes on the music player.

INCLUDED IN THIS PACKAGE


- One **Touch & Learn Activity Desk** (touch panel, base, four legs)
- Four double-sided activity cards
- One stool (seat, four legs)
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.



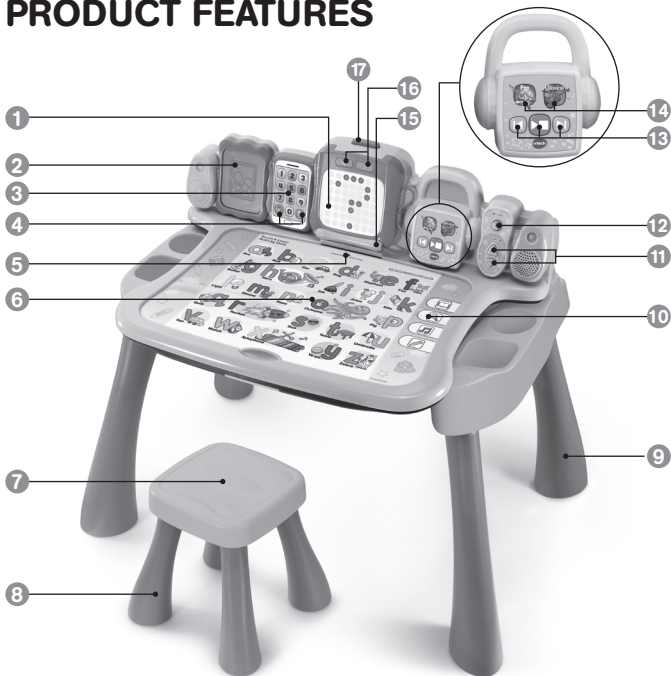



PRODUCT FEATURES



- | | |
|-------------------------------|--|
| 1 LED Display (Writing Pad) | 10 Activity Page Mode Icons |
| 2 Photo Frame | 11 Volume Buttons |
| 3 Toy Phone Number Buttons | 12 Power Button |
| 4 Toy Phone Game Mode Buttons | 13 Music Player Controls |
| 5 Activity Card Slot | 14 Music Style Buttons |
| 6 Activity Page Area | 15 Stylus |
| 7 Stool Seat | 16 Letter and Number Selection Buttons |
| 8 Stool Legs | 17 Writing Pad Release Button |
| 9 Desk Legs | |

FEATURES

ACTION

Power Button	Press the Power Button to turn the unit ON . Press the button again to turn the unit OFF .
Volume Buttons	Press the  buttons to decrease or increase the volume. There are five volume levels.
Toy Phone Number Buttons	Press the Number Buttons to learn and explore numbers.
Toy Phone Game	Press the  button to learn numbers in Learn It Mode. Press the  button to meet new friends in Call A Friend Mode.
LED Display / Writing Pad	Watch images and simple animations appear on the LED Display . Transform it into a Writing Pad and learn how to write letters and numbers with proper stroke order.
Activity Page Area	Listen to the game instructions and touch the correct objects on the activity page to play.
Writing Pad Release Button	Press the Release Button to release the LED Display and transform it into a Writing Pad .
Letter and Number Selection	Press the  buttons to select the letters or numbers you would like to write.
Stylus (only works with writing pad)	Practise writing letters and numbers by using the Stylus to trace the flashing lights.
Music Player Controls	Press the  button to play or stop the music and press the  buttons to hear the previous or next song.
Activity Page Mode Icons	Use your finger to touch any of the Mode Icons on the activity page to play.
Activity Card Slot	Insert one of the activity cards into the Activity Card Slot to play.

WARNING:


Please do not use a stylus, pencil or other pointed object on the **Activity Page Area** or activity cards.

ASSEMBLY INSTRUCTIONS


With the **Touch & Learn Activity Desk** safety comes first.
To ensure your child's safety, adult assembly is required.

For the Desk:

1. Support the base by placing it on the floor. Insert the touch panel into the base and press firmly down on the shoulders until you hear a click.
Caution: Do not place too much pressure on the touch panel itself.

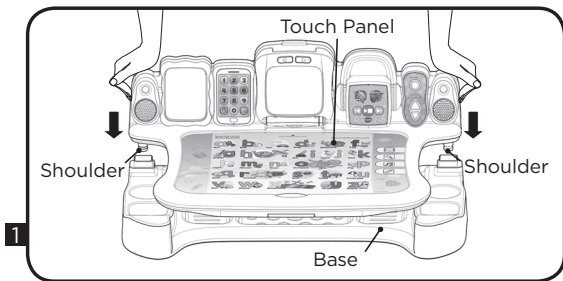

2. Fully insert the four desk legs into the slots on the bottom of the base.

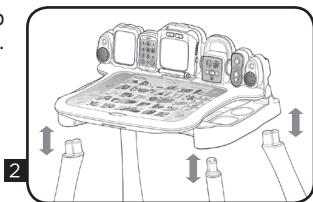

For the stool:



Insert the four stool legs into the slots on the bottom of the stool seat. Please make sure you have fully inserted the legs into the seat to ensure the stool is stable. Always make sure all four legs are fully inserted before your child sits on the seat. The recommended weight limit of the stool should not exceed 34 kilograms.

Easily Transforms from an Activity Desk to an Art Station and Blackboard.

To use the **Activity Desk** as an **Art Station**, flip up the touch panel and use the clip to hold paper on the blackboard surface. You can also draw directly on the **blackboard** surface by using chalk (not included).

Art Station



Blackboard



Use a cloth to remove the chalk and wipe away any remaining chalk dust on the desk or activity cards.

CAUTION: Keep fingers away from the hinges or underneath the desk before lowering the touch panel or closing the desk.


Activity Card Holder:

Flip up the touch panel to store your activity cards in the activity card holder.



How to Return the Writing Pad


1. Lift up the writing pad.
2. Push the writing pad back into place until you hear a click sound indicating it has been securely returned.

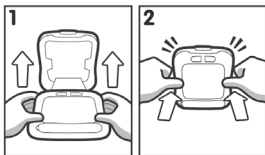

GETTING STARTED

BATTERY INSTALLATION

- Make sure the main unit is turned **OFF**.
- Locate the battery cover on the back of the touch panel. Use a coin or screwdriver to open the battery cover.
- Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- Replace the battery cover and tighten the screw to secure.

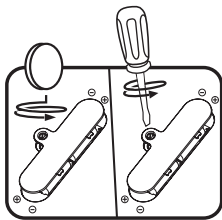

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.


Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

 The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

TO BEGIN PLAY

Press the **Power Button**  to turn the main unit on.

Activity Page Area

Touch any object on the activity page to explore. Touch any of the **Mode Icons** on the right of the page to play additional activities. Voice instructions are included for each activity. The **Activity Page Area** will not be responsive to touch if the writing pad is down.

Music Player

There are 10 popular music and 10 classical music melodies in the **Music Player**.

In this mode, the **Music Player** will play the popular music by default. The **Music Player** will stop when the popular music melodies have played through twice. You can change the music by using the **Music Controls**. Once the **Music Player** is in classical music mode, it will also play through twice and then stop.

Writing Pad



Press the release button on the **LED Display** to transform it into an interactive writing pad. Press the arrow buttons to select which letter or number you would like to write.

When the **Stylus** is not in use, place it back in the stylus holder. Be careful not to pull on the stylus wire too firmly.


NOTE:

- The **Stylus** only works when the desk is on.
- If the **LED Display** is covered, do not use the **Stylus** to draw on it. The sensitivity of the **Stylus** may be affected and it may not work properly.
- Direct sunlight may impact the sensitivity of the **Stylus**.

Toy Phone

	Learn It Mode Touch the number buttons to learn numbers, counting and number order. Then test your knowledge by answering questions.
	Call A Friend Mode Follow the instructions and press the correct number buttons to meet some new friends.

Battery Status

When the batteries are almost exhausted, the unit will show an empty battery icon  on the **LED Display** for a few seconds and then may automatically power off. New batteries should be inserted before further use.

Automatic Shut Off

To preserve battery life, the main unit will automatically turn off after about two minutes without operation.

ACTIVITY CARDS

To play an activity card, insert it into the **Activity Card Slot**.

WARNING:

- Please insert only one activity card at a time. Inserting more than one activity card may damage the card or the desk and may also result in incorrect card detection.
- Do not try to insert anything other than the activity card into the **Activity Card Slot**. To avoid any interference, please keep the slot area clean and free from debris.













- Keep the activity cards on a flat surface when not in use. Do not bend or fold the activity cards.
- Please wipe away any dust or chalk residue from the activity card before inserting it into the **Activity Card Slot**.

Activity Cards

The **Touch & Learn Activity Desk** comes with nine fun interactive pages that cover fundamental skills such as letters, colours, body parts, music and more.

Refer to the table below for details.

Alphabet & Letter Sounds	
	 Touch the letters and objects to learn the alphabet, words and letter sounds.
	 In Quiz Mode , questions related to the page will be asked and you will have 3 chances to answer correctly.
	 Play the 'abc' song game. When the music stops, touch the next letter to continue the song.
	 Touch a letter and the LED Display will show you how to write it step-by-step.
Numbers & Counting	
	 Touch the numbers to learn counting from 1 to 15.
	 In Quiz Mode , questions related to the page will be asked and you will have 3 chances to answer correctly.
	 Lights in the LED Display will appear. Count the lights and touch the number to answer.
	 Touch a number and the LED Display will show you how to write it step-by-step.

The Classroom



Touch and learn to identify people and objects in the classroom.



In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Listen to the hints and find the correct people.

Underwater Shapes & Colours



Touch and learn ocean animal facts, shapes and colours.



In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Listen to the hints and find the lost treasure.

Seasons & Months



Touch and learn about holidays, seasons and month order.



In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Find the months related to the given holidays and become a **Months Master!**

Animal Orchestra



Touch and listen to musical instruments, sounds and fun facts.



In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Touch the instruments to jam to the music and become a DJ!

Human Body & Clothes



Touch and learn body parts and clothes.




In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Help the boy put the correct clothes on the correct body parts.

Town Map

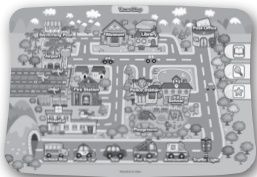

Touch and explore the map to learn about directions and vehicles.



In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Trace the map with your finger to help the vehicles get to their destinations.

Farm Animals



Touch and learn about farm animals.



In **Quiz Mode**, questions related to the page will be asked and you will have 3 chances to answer correctly.



Play the 'Old MacDonald' song game and touch the correct animal to finish the song!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Keep the **Activity Cards** placed on a flat surface when not in use. Do not bend or fold the **Activity Cards**.
6. Keep the **Activity Cards** clean by wiping them with a slightly damp cloth.

TROUBLESHOOTING

Problem	Possible solution(s)
The main unit does not turn ON.	1. Reload the batteries to reset the Touch & Learn Activity Desk . Please refer to the Battery Installation section for instructions.
	2. Batteries may be exhausted. Please replace with a new set of batteries.
The Activity Card inserted is not recognised.	1. Make sure that only one Activity Card is inserted into the slot.
	2. Make sure the Activity Card is the only object in the slot and that it is fully inserted. It should be firmly placed in the recessed Activity Page Area .

The main unit is ON but the Activity Page Area has no response.	1. Make sure the LED Display is not ejected. The Activity Page Area only works when the LED Display is securely attached to the main body.
	2. Make sure you are touching the Activity Page Area with your finger and are not using the Stylus or other objects.
The main unit gives an incorrect response.	1. Reload the batteries to reset the Touch & Learn Activity Desk .
	2. Batteries may be exhausted. Please replace with a new set of batteries.
	3. Humidity may cause interference with the Touch & Learn Activity Desk . Please be sure the desk is in a dry area.

If the problem persists, please call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/customer support](http://www.vtech.co.uk/customer-support)

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



Use the picture template below to determine the correct size for the photograph or art you would like to display. Once the image is properly sized, place it in the **Photo Frame**.



Photo Size: 2.5 x 3.5 inches

TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003220-005 