



# Instruction Manual

## Explore & Discover Roller



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
 
*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Introducing the **Explore & Discover Roller** by **VTech®**! Grow-with-me from sitting to crawling play with five ways to play! The three light up piano keys introduce animals, colours, numbers and play piano notes. Tap the large drum button to hear different beats and sounds. Let's have lots of rolling fun together!

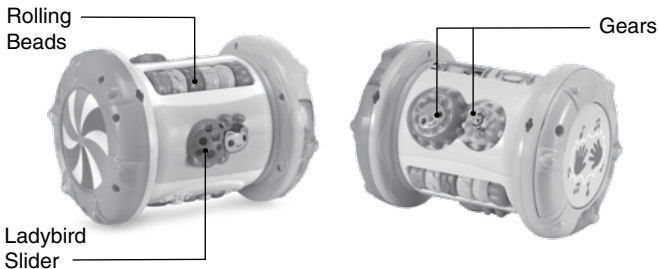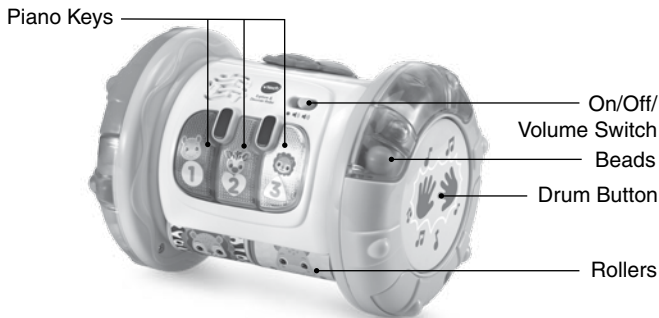

# INCLUDED IN THE PACKAGE

- Explore & Discover Roller
- Quick Start Guide

 
## NOTE

Please keep this Instruction Manual as it contains important information.

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### Unlock the Packaging Locks:

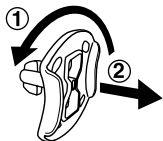


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

# GETTING STARTED
 
## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw. Then, remove the cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

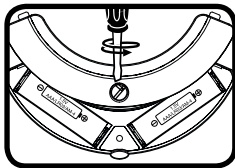

## **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **Disposal of batteries and product**



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:



[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)


[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## PRODUCT FEATURES

### 1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the Low volume  position or the High volume  position. You will hear sounds, phrases and a song.

To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off**  position.

### 2. Interactive Roller

Roll the **Roller** to play sounds and music. When a melody is playing, roll the **Roller** or press the **Drum Button** to add fun sounds to the music. The lights will flash with the sounds.

### 3. Automatic Shut-Off

To preserve battery life, the **Explore & Discover Roller** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing the **Piano Keys** or **Drum Button**.



## NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

 
## 1. Light Up Piano Keys

Pressing the light up **Piano Keys** introduces animals and numbers with songs and playful phrases. The lights will flash with the sounds.



## 2. Turn, Slide & Spin

Strengthen little muscles with **Gears, Rollers, Beads** and a **Ladybird Slider**.

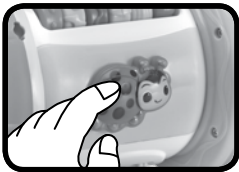

## 3. Drum Button

Tap on the **Drum Button** to hear drum sounds and watch the beads bounce. The lights will flash with the sounds.



# SONG LYRICS

## Song 1

Tap the drum and play the piano,  
Switch it any way you like.

One, two, tap, tap, tap.

Three, four, clap, clap, clap.

Five, six, just like that!

We're going to have some fun!

## **Song 2**

Push, spin, roll with me,  
Move me left and right.

## **Song 3**

Tap, tap, tap,  
Clap, clap, clap.  
We tap, we clap.  
We make fun beats let's clap!

## **Song 4**

Good morning, my dear friend.  
So many things to see,  
Like colours, shapes and numbers.  
Let's see what we can see!

## **Song 5**

A hippo is big and strong,  
Big and strong, big and strong.  
It loves the water to stay cool,  
To stay cool, to stay cool.

## **Song 6**

The zebra runs here and there,  
With black and white stripes.  
One long tail and spiky mane,  
And loves to play a lot!

## **Song 7**

Oh the king of the savanna,  
Is the lion, is the lion!  
Its fluffy mane and loud roar,  
Is recognised by all!



# MELODY LIST

1. Mary Had a Little Lamb
2. Old MacDonald
3. The Bear Went Over the Mountain
4. Rockin' Robin
5. One, Two, Buckle My Shoe
6. Here We Go' Round Round the Mulberry Bush
7. The Alphabet Song
8. Bingo
9. Skip to My Lou
10. London Bridge
11. Three Little Kittens
12. Hey, Diddle, Diddle
13. Wheels on the Bus
14. Pat-A-Cake
15. Hot Cross Buns
16. Looby Loo
17. Oh Where, Oh Where Has My Little Dog Gone?
18. Pease Porridge Hot

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

## CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

### **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

