



Instruction Manual

LearnBook Pro



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **LearnBook Pro!** This kid-friendly laptop features over 80 games and activities that cover a variety of subjects, including: vocabulary, maths, science, logic, music and even French language learning! Spark curiosity and build foundational skills whilst having fun!




INCLUDED IN THIS PACKAGE

- **LearnBook Pro**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this Instruction Manual as it contains important information.

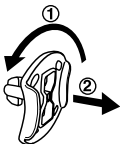


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

The **LearnBook Pro** operates on 4 AA batteries (AM-3/LR6).

Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

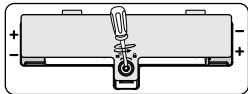

INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION


- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


EXITING THE TRY-ME DEMO

The **LearnBook Pro** is in try-me demo mode in the packaging. To exit try-me demo mode, turn ON the unit, and then press the Shift Button and the Mouse's Left Arrow Button together. When you hear the beep tones and the unit restarts, it means that your unit has exited try-me mode and entered normal play mode.

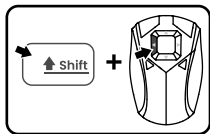

Using the Cursor Mouse

You can set the cursor mouse to the left or right side of the laptop using the cable rail located on the bottom of the unit.

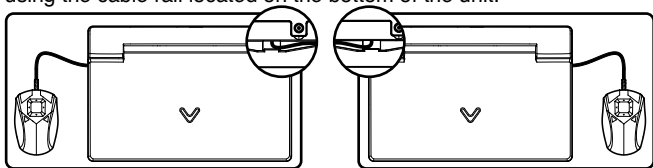

The buttons on the cursor mouse work just like the arrow keys on the keyboard.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

■ Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

Pressing  will turn the unit **ON**. Pressing  again will turn the unit **OFF**.

AUTOMATIC POWER OFF

To save power, **LearnBook Pro** automatically shuts down if it does not receive any input after several minutes.

BATTERY STATUS

When the screen shows a Low Battery icon, we recommend installing a fresh set of batteries as soon as possible. The light and sound intensity from the unit will be reduced when the battery is low, and the unit may not function properly when the batteries are almost exhausted. New batteries should be inserted before further use.

ACTIVITY SELECTION





When the unit is turned on, you will see a short opening before entering the Main Menu. After that, you can choose an activity in the following ways:








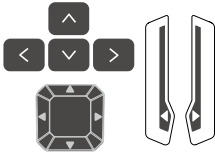
- 1) Use the Category keys, Arrow keys and the Enter key to navigate through the menus and select an activity.
- 2) In the Main Menu, type an activity number to start it directly.









KEYBOARD LAYOUT



Your **LearnBook Pro** has a full QWERTY keyboard. You will also find the following function keys.

| | |
|---|---|
|  | <p>ON/OFF Key Press this key to turn the unit ON or OFF.</p> |
|  | <p>My Favourites Press this key to jump to the My Favourites sub-menu. In the My Favourites menu, select an empty icon and type the activity number to save up to 10 activity shortcuts. Press the Delete key to delete a saved activity shortcut.</p> |
|  | <p>Category Keys Press one of these keys to jump to the sub-menu of the chosen category.</p> |
|  | <p>Notebook / Calculator / Music Player Keys Press one of these keys to jump to the chosen app.</p> |

| | |
|--|--|
|  | <p>Esc Press this key to go back to the previous screen or exit the current activity.</p> |
|  | <p>Backspace Press this key to erase the character or space to the left of the cursor.</p> |
|  | <p>Level In most activities, you can press this key to change the activity's difficulty level.</p> |
|  | <p>Help Press this key to get special help in most activities. Your score will be reduced if this key is pressed.</p> |
|  | <p>Shift Press this key together with a letter key to capitalise the letter. You can also use this key to access the alternate letters/symbols or functions of some keys.</p> |
|  | <p>Delete Press this key to delete the current character or space to the right of the cursor, or to clear all the actions the player made previously.</p> |
|  | <p>Enter Press this key after choosing your answer to confirm your selection. When typing in Notebook, use this key to insert a new line.</p> |
|  | <p>Arrow Keys / Light Up Keys / Mouse Keys Use these keys to select choices in activities and menus.</p> |

| | |
|--|---|
|  | <p>Answer Press this key to see the correct answer to a question. You will not receive points if this key is pressed.</p> |
|  | <p>Repeat Press this key to repeat a question or an instruction.</p> |
|  | <p>Light Effect Press this key to select a light effect mode for the Light Up keys.</p> |
|  | <p>Music On/Off Press this key to turn the background music on or off (except for the Music Player).</p> |
|  | <p>Volume/Contrast Press this key to see the volume and contrast control screen. Then use the UP & DOWN arrow keys to select the volume or contrast control bar and use the LEFT & RIGHT arrow keys to make adjustments.</p> |
|  | <p>Space Bar When typing, use this key to insert a space between words, letters or numbers.</p> |
|  | <p>Musical Note Keys Use these keys to enter musical notes in music-related activities.</p> |
|  | <p>Calculator Keys Use these keys in the Calculator app.</p> |

ACTIVITIES

Your **LearnBook Pro** includes 82 activities.

| Number | Activity Name | Category |
|--------|---------------------|----------|
| 01 | Letter Stairs | Reading |
| 02 | Letter Fireworks | |
| 03 | Letter Spy | |
| 04 | Picture Spelling | |
| 05 | Spelling Pipe | |
| 06 | Scrambled Cargo | |
| 07 | Word Pen | |
| 08 | Secret Picture | |
| 09 | Number Words | |
| 10 | Typing Barn | |
| 11 | Synonym Stop | |
| 12 | Antonym Stop | |
| 13 | Tense Skis | |
| 14 | Singulars & Plurals | |
| 15 | Picture Dictionary | |
| 16 | Notebook | |
| 17 | My Word Quiz | |
| 18 | Daily Fun Fact | |

| | | |
|----|-----------------------|---------|
| 19 | Number Fireworks | Maths |
| 20 | Quick Counting | |
| 21 | Number Stairs | |
| 22 | Number River | |
| 23 | Flying Money | |
| 24 | Guess the Number | |
| 25 | Addition Stop | |
| 26 | Subtraction Stop | |
| 27 | Pick the Sign | |
| 28 | Formula Cargo | |
| 29 | Simple Multiplication | |
| 30 | Multiplication Skis | |
| 31 | Division Skis | |
| 32 | Equation Barn | |
| 33 | Sign Cap | |
| 34 | Fraction Fun | |
| 35 | Calculator | |
| 36 | Unit Converter | |
| 37 | Animal Food | Science |
| 38 | Feed the Animal | |
| 39 | Animal Prints | |
| 40 | Who Passed By? | |
| 41 | Who is it? | |
| 42 | Mother and Child | |
| 43 | Float or Sink? | |
| 44 | Laser Path | |
| 45 | Water Transformer | |
| 46 | Vehicle Altitude | |
| 47 | Vehicle Match | |

| | | |
|----|---------------------|-----------------|
| 48 | Follow the Notes | Music & Art |
| 49 | Music Player | |
| 50 | Piano | |
| 51 | Picture Maker | |
| 52 | Secret Performance | |
| 53 | Dance Music | |
| 54 | Quick Beat | Games & Logic |
| 55 | Odd River | |
| 56 | Card Matching | |
| 57 | Hidden Shapes | |
| 58 | Shape Swapping | |
| 59 | Arrow Maze | |
| 60 | Chocolate Factory | |
| 61 | Treasure Hunt | |
| 62 | Noughts and Crosses | |
| 63 | Ring Tower | |
| 64 | Number Puzzle | |
| 65 | Time Telling | Time & Schedule |
| 66 | Clock Puncher | |
| 67 | Clock Matching | |
| 68 | Timer | |
| 69 | Weekly Planner | |
| 70 | To-Do List | |

| | | |
|----|-------------------|------------------|
| 71 | French Letters | Learning French |
| 72 | French Numbers | |
| 73 | French Greetings | |
| 74 | French Match | |
| 75 | French River | |
| 76 | French Picture | |
| 77 | French Cheque | |
| 78 | French Translator | |
| 79 | Pick The Side | Quick Challenges |
| 80 | True or False | |
| 81 | Picture Hunt | |
| 82 | Quick Match | |

MY FAVOURITES MENU

Press the My Favourites key to quickly launch your favourite activities. To add a My Favourites shortcut, select an empty slot and press Enter, then type the activity number and press Enter again to save it. You can save up to 10 shortcuts. To remove one, select it and press the Delete key.

PROGRESSIVE LEARNING

Many activities have three levels of difficulty. These activities will automatically level up after scoring 80-100 for three rounds in a row. To set the difficulty level yourself, press the Level key.

ACTIVITY DESCRIPTIONS

01 Letter Stairs

Type the missing letter in the sequence to jump along the stairs.

02 Letter Fireworks

Quickly type the letters to pop the fireworks!

03 Letter Spy

Listen to the first or last letter of a word, then guess the picture.

04 Picture Spelling

Look at the picture and fill in the missing letters.

05 Spelling Pipe

Listen to the word and type the missing letters.

06 Scrambled Cargo

Unscramble the word by swapping letters.

07 Word Pen

Select the pen lid that completes the word you hear.

08 Secret Picture

Type letters to guess the word hidden behind the wall. Start with vowels for a higher hit chance!

09 Number Words

Finish the bank cheque by typing the number in words.

10 Typing Barn

Type the words quickly to stop the gate from falling.

11 Synonym Stop

Press the Enter key to stop the bus with the word that has the same meaning as the word on the bus stop.

12 Antonym Stop

Press the Enter key to stop the bus with the word that has the opposite meaning as the word on the bus stop.

13 Tense Skis

Match the ski with the verb to the ski with its past tense.

14 **Singulars & Plurals**

Select the correct plural form for the given word.

15 **Picture Dictionary**

Select a word to hear it spoken and see a picture!

16 **Notebook**

Type your notes! The notes will be saved automatically.

17 **My Word Quiz**

Type and save up to 10 words. To test yourself on spelling, select a word and press the Enter key.

18 **Daily Fun Fact**

100 facts! Read them all at once or spread them out.

19 **Number Fireworks**

Quickly type the numbers to pop the fireworks!

20 **Quick Counting**

Count the shapes quickly and guess how many there were.

21 **Number Stairs**

Type the missing number in the sequence to jump along the stairs.

22 **Number River**

Cross the river by jumping on the odd or even numbers.

23 **Flying Money**

Collect falling notes to match a given sum.

24 **Guess the Number**

Guess and type the number to open the treasure chest.

25 **Addition Stop**

Press the Enter key to stop the bus with the sum of the formula.

26 **Subtraction Stop**

Press the Enter key to stop the bus with the difference of the formula.

27 **Pick the Sign**

Select the correct sign to complete the equation.

28 Formula Cargo

Unscramble the cargo to make the equation true.

29 Simple Multiplication

Practise simple multiplication with patterns. Type the number and press the Enter key to answer.

30 Multiplication Skis

Match the multiplication equation with its answer.

31 Division Skis

Match the division equation with its answer.

32 Equation Barn

Solve the equations quickly to keep the gate from falling!

33 Sign Cap

Select the pen lid that makes the equation true.

34 Fraction Fun

Select the fraction that represents the shaded part.

35 Calculator

Use this simple calculator to solve maths problems.

36 Unit Converter

This is a basic unit converter with length, weight, and temperature units. Type the number and select the output unit to see the conversion.

37 Animal Food

Select an animal to see what food it likes.

38 Feed the Animal

Select the animal's favourite food from the Animal Food activity.

39 Animal Prints

Select an animal to see its footprint.

40 Who Passed By?

Guess and select the animal that matches the given footprint hints.

41 Who is it?

Guess and select the animal that matches the given picture hints.

42 Mother and Child

Match the baby animal with its mother.

43 Float or Sink?

Throw objects in the water to see if they float or sink.

44 Laser Path

Guide the laser to the diamond by selecting and rotating the mirrors.

45 Water Transformer

Select the temperature with the up and down arrows, then press Enter to learn about water in different states of matter.

46 Vehicle Altitude

Select an altitude with the up and down arrows, then press Enter to see the vehicles that work there! Press the ESC key to return to altitude selection.

47 Vehicle Match

Match the vehicle to its background.

48 Follow the Notes

Listen carefully to the notes, then use the Musical Notes keys to play them back.

49 Music Player

Listen to 20 built-in melodies. There are six modes:

- Nursery melodies
- Classical music
- Dance music
- Relaxing music
- Play All music
- Shuffle All music

50 Piano

Choose an instrument, then play your own music with the Musical Note keys. Press Enter to play back your tune!

51 Picture Maker

Select different frames, objects and stamps to create your own picture. The picture will be saved automatically. Press the Delete key to clear the picture.

52 Secret Performance

Listen to the music and guess the instrument that played it.

53 Dance Music

Use the Musical Notes keys to compose your own dance music, then press Enter to play it back!

54 Quick Beat

Press the Left and Right keys to clear the arrow sequence as quickly as you can.

55 Odd River

Cross the river by jumping on the shape that is different from the others.

56 Card Matching

Try to match the hidden cards.

57 Hidden Shapes

Count the total number of hidden shapes. Some of the shapes are very tricky to find, stay focused!

58 Shape Swapping

Track the moving objects, then guess the correct pattern.

59 Arrow Maze

Remember the sequence, then press the Arrow keys to escape the maze!

60 Chocolate Factory

Fill in the missing piece of the pattern.

61 Treasure Hunt

Remember the sequence, then press the Arrow keys to walk to the right spot and press Enter to dig up the treasure!

62 Noughts and Crosses

You can challenge the computer or another player. Select an empty slot and press the Enter key to place your mark on the board. Be the first to get three-in-a-row.

63 Ring Tower

In this classic logic puzzle, try to move all the rings from the leftmost tower to the rightmost one while keeping the smaller rings on top. Press the Left and Right keys to select a tower and Enter to lift or release a ring. Press Help to see a demo.

64 Number Puzzle

Use the numbers from 1 to 4 to fill the board without repeating any numbers in a row or column.

65 Time Telling

Learn how to tell the time on an analogue clock by changing the time with the arrow keys.

66 Clock Puncher

Set the clock to the time you hear with the arrow keys, then press Enter.

67 Clock Matching

Match the digital time to the time on the clock.

68 Timer

Use the arrow and Enter keys to set a countdown timer up to 10 minutes long.

69 Weekly Planner

Create your weekly plan with different icons. Use the Arrow and Enter keys to select a day, then choose a symbol. Press Delete to clear an icon.

70 To-Do List

Type your tasks on the list. As you finish them, press the Space key to mark them off.

71 French Letters

Press the Arrow keys to jump on letters and hear their pronunciation in French.

72 French Numbers

Press the Arrow keys to jump on numbers and hear their pronunciation in French.

73 French Greetings

Select a greeting and press the Enter key to hear its translation.

74 French Match

Try to match the hidden letters.

75 French River

Cross the river by jumping on the correct number.

76 French Picture

Listen to the French word, then select the matching picture.

77 French Cheque

Finish the bank cheque by listening to the number in French, then typing it.

78 French Translator

Select a word and press the Enter key to see the translation.

79 Pick the Side

Listen to the question and select the correct side as quickly as you can.

80 True or False

As quickly as you can, press the Left key if the equation is true, or the Right key if it's false.

81 Picture Hunt

Select the picture that matches the word and press the Enter key to confirm.

82 Quick Match

Quickly match the small picture in the middle to the object on the left or right.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

OTHER NOTES:

Electrostatic discharge may cause the unit to malfunction. If this occurs, recover the unit by pressing and holding the Power Button for 2 seconds until the unit turns off. Then, press and hold the Power Button for 3 seconds to turn the unit on, or remove batteries for 10 seconds and reinstall the batteries before powering on the unit.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)

+44 330 678 0149 (outside UK)

1800 862 155 (Aus) / 0800 400 785 (NZ)

www.vtech.co.uk

www.vtech.com.au

**Visit our website for more
information about our products,
downloads, resources and more.**

**www.vtech.co.uk
www.vtech.com.au**

