 


vtech®

Parent's Guide

SWITCH&GO[®] DiNOS

Charge the Triceratops

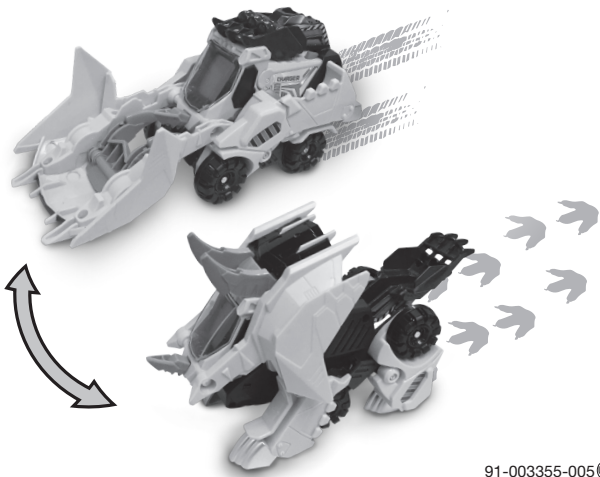

91-003355-005 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Switch & Go Dinos® Charger the Triceratops** by **VTech®**! With a few steps, Charger can switch into a bulldozer and back again! Press the Action Button to see Charger move his head back and forth. By interacting with Charger, your child can learn fun dinosaur facts as they play.

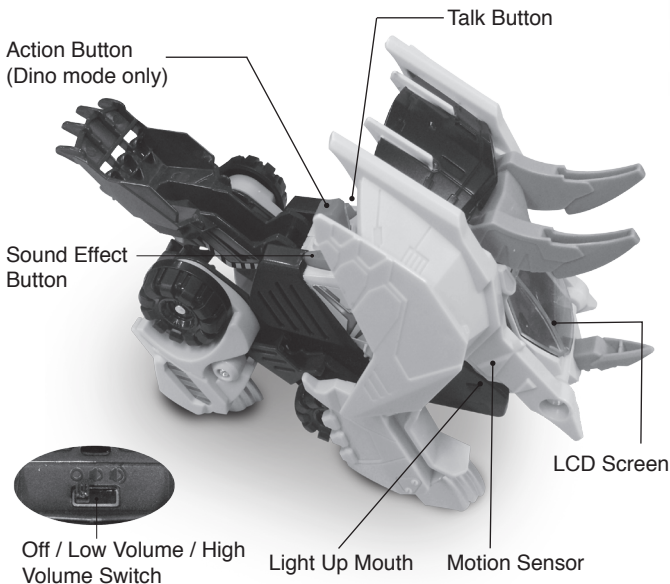

INCLUDED IN THIS PACKAGE

- One VTech® Switch & Go Dinos® Charger the Triceratops
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE:

Please keep this parent's guide as it as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the dino is turned OFF.
2. Locate the battery cover on the bottom of the panel.
3. Use a screwdriver to open the cover.
4. Install 2 AAA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

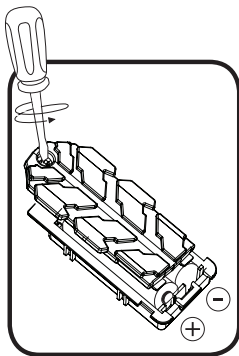

NOTE: If there is no response when the dino is switched on, please insert new batteries and try switching it on again.



BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

 


PRODUCT FEATURES

1. OFF / LOW VOLUME / HIGH VOLUME SWITCH



Slide the **OFF / LOW VOLUME / HIGH VOLUME SWITCH** to the **LOW VOLUME** (🔊) or the **HIGH VOLUME** (🔊) position to turn the dino ON. To turn the dino OFF, slide the switch to the **OFF** (🔇) position.

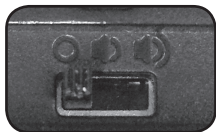

2. TALK BUTTON

Press the **TALK BUTTON** to hear fun phrases and cool dinosaur facts.



 
3. SOUND EFFECT BUTTON

Press the **SOUND EFFECT BUTTON** to hear cool dinosaur and bulldozer sound effects.



4. ACTION BUTTON (DINO MODE ONLY)

Press the **ACTION BUTTON** to see Charger's head move and mouth light up.

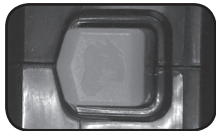

5. LCD SCREEN

The **LCD SCREEN** will display driver and dinosaur eye animations.

6. AUTOMATIC SHUT OFF

To preserve battery life, Charger will shut off automatically after several minutes without input. Charger can be turned on again by pressing any button.

Note: If Charger repeatedly shuts off, or has abnormal responses when switched on, please install brand new batteries and try switching Charger on again.

ACTIVITIES

 
1. Dino Mode

In dino mode, pressing the **TALK BUTTON** will play fun phrases and cool dinosaur facts. Press the **SOUND EFFECT BUTTON** or move Charger to hear dinosaur sound effects. Press the **ACTION BUTTON** to see Charger's head move and mouth light up.


2. Vehicle Mode

In vehicle mode, Charger will say fun and encouraging driver phrases when the **TALK BUTTON** is pressed. Pressing the **SOUND EFFECT BUTTON** or moving Charger will trigger bulldozer sound effects.


TRANSFORMATION

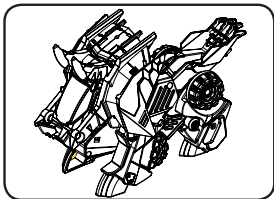

 
1. Dino mode.

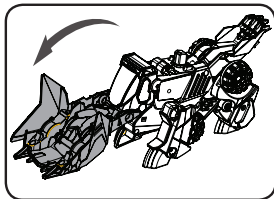

 
2. Move Charger's head shield forward.

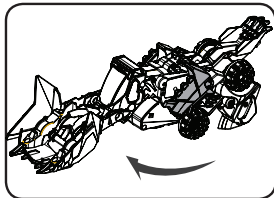

 
3. Turn Charger's front legs up into the body.

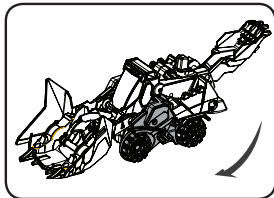

 4. Turn Charger's hind legs down into the body of the bulldozer.

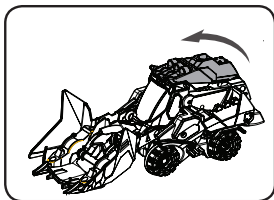

 5. Close Charger's tail.

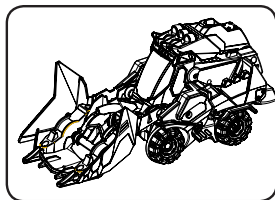

6. Vehicle mode.

Note:

To switch Charger into dinosaur again, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the unit still does not work, insert a brand new set of batteries. If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



10





**Visit our website for more
information about our products,
downloads, resources and more.**



www.vtech.co.uk
www.vtech.com.au



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003355-005 

