



 
Instruction Manual

Play Along Music Centre



INTRODUCTION

Thank you for purchasing the **Play Along Music Centre** by **Vtech®**. Listen and move to the rhythm of Toucan's tuneful music. Discover animals, colours and numbers with each piano key. Use the musical accessories to play along to your favourite songs and melodies, or explore and create your own tunes.

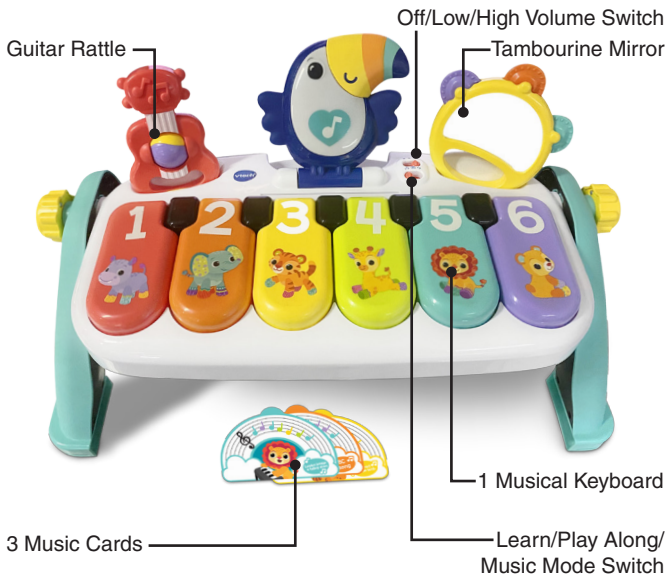

INCLUDED IN THE PACKAGE

- 1 Musical Keyboard
- 2 Blue Stand Blocks
- 2 Yellow Screws
- 1 Tambourine Mirror
- 1 Guitar Rattle
- 3 Music Cards
- Quick Start Guide

 
WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

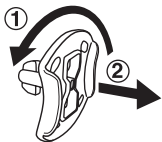

- ① Turn the packaging locks anticlockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

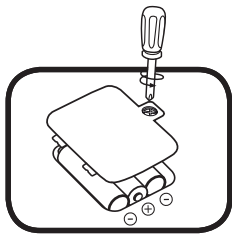

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

ASSEMBLY INSTRUCTIONS

With the **Play Along Music Centre**, safety comes first. To ensure your child's safety, adult assembly is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Music Centre Assembly

1. Connect the Musical Keyboard to the Blue Stand Blocks. Insert the Yellow Screws and rotate until you hear it click into place.



2. Insert the Musical Accessories into the slots on the Musical Keyboard.



PRODUCT FEATURES

1. **Off/Low/High Volume Switch**

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the Low volume (🔊) or the High volume position (🔊)). You will hear fun sounds, a phrase and a song. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off** position (●).



2. Mode Switch

Slide the Mode Switch to Learn Mode, Play Along Mode or Music Mode position.



3. Automatic Shut Off

To preserve battery life, the **Play Along Music Centre** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Piano Buttons

Press the Piano buttons to hear fun sounds, songs and melodies in Music Mode. Learn about animals, numbers and colours in Learn Mode. Play the piano in Play Along Mode and follow the colourful notes on the Music Cards to play a short tune.



MELODIES

1. A-Tisket, A-Tasket
2. Old King Cole
3. Row, Row, Row Your Boat
4. Jack Be Nimble
5. Hickory Dickory Dock
6. Little Boy Blue

7. The Green Grass Grew All Around
8. London Bridge
9. Oh Dear! What Can the Matter Be?
10. Lazy Mary, Will You Get Up?
11. Incy Wincy Spider
12. Mary Had a Little Lamb
13. The Alphabet Song
14. Are You Sleeping

SONG LYRICS

Song 1

Hello friend, it's play time!
The animals are ready.
They run and they roar,
They stomp and they sing,
We'll have fun together!

Song 2

Hippo likes to splash and play,
Swimming in the pond all day.

Song 3

Stomping here, stomping there,
Elephant marches everywhere.

Song 4

Tiger's in the jungle, hear her roar.
Bounding through the trees, ready to play.

Song 5

Giraffe is tall, standing so high,
Giraffe can reach up to the sky.

Song 6

Lion is brave, lion is strong,
He plays in the grass all day long.

Song 7

Bear is cute and furry,
Bear likes to snack on honey.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk

www.vtech.com.au

