


vtech[®]

Parent's Guide

Secret Safe Notebook



91-003621-000 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 
 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Secret Safe Notebook**.

Protect your notebook with a 4-digit passcode so only you can access it and keep your secrets hidden from prying eyes! A 60-page notebook and pen is included for you to start your journaling! You can even record up to 10 voice entries and apply funny effects to your voice! There's so much to enjoy and discover!

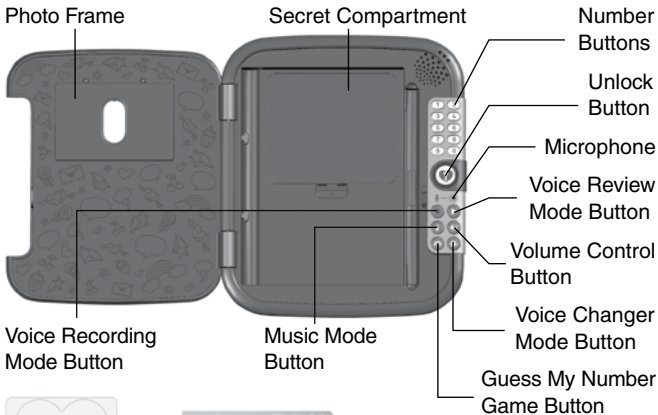

Clear Plastic Frame



 
Sample Photo



Notebook




Pen

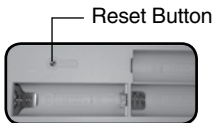

(Located inside the Battery Compartment)

INCLUDED IN THIS PACKAGE

 - One VTech® Secret Safe Notebook
- One Parent's Guide
- One Notebook with 60 pages (30 sheets)
- One Pen

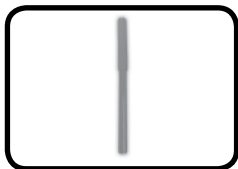

- One Clear Plastic Frame
- One Sample Photo

 


WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this Parent's Guide as it contains important information.

Unlock the packaging locks:

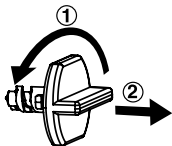



- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

NOTE: For the best performance, remove all of the factory-installed batteries from the **VTech® Secret Safe Notebook** and install brand new alkaline batteries.

  1. Make sure the unit is **OFF**.
2. Locate the battery cover on the back of the unit and slide it down to remove it.
3. Install 3 new AA batteries following the diagram inside the battery box. (New alkaline batteries are recommended for maximum performance).
4. Replace the battery cover.

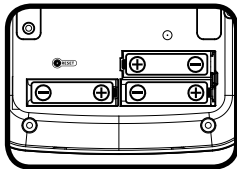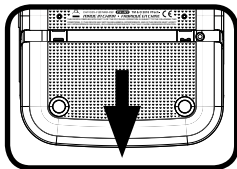

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

 
PRODUCT FEATURES

1. Unlock Button

Press this button and then enter your 4-digit passcode to open the cover. Close the cover to switch off the unit. When the unit is on, press this button again to switch off the unit.

2. Reset Button

When you first use this product, you will need to activate Normal Play Mode. To do so, first press the Unlock Button to turn on the unit and then press the Reset Button (the Reset Button is located under the battery compartment). You will then hear a 'beep' sound once the passcode has been cleared. The next time you wish to open the cover by pressing the Unlock Button, you will be asked to create a new 4-digit passcode. If you want to change the passcode which you set before. Repeat the above operation before entering any mode.

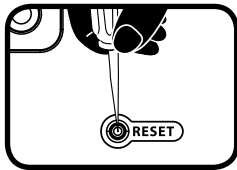

Note: A small tool, such as a paperclip, may be needed to press the Reset Button.

3. **Voice Recording Mode Button**

Press this button to enter Voice Recording Mode, then press a number button to record a voice entry. If the unit is locked, you'll be asked to enter your passcode before entering this mode.

4. **Voice Review Mode Button**

Press this button to enter Voice Review Mode, then press a number button to review the voice entry assigned to that number. If the unit is locked, you'll be asked to enter your passcode before entering this mode.

5. **Music Mode Button**

Press this button to listen to the 10 built-in melodies. The melodies will play randomly until they have all played once. You can also press any number button to select a melody to play.

6. **Voice Changer Mode Button**

Press this button to enter the Voice Changer mode. This mode is for fun! Say anything and then hear your voice played back to you with a silly effect!

7. **Guess My Number Game Button**

Press this button to enter the Guess My Number game. Listen to the instruction and try to guess the correct number.

8. **Volume Button**

Press this button to toggle between Low and High volume.

9. **Number Buttons**

Press these buttons to enter your number passcode or to input numbers in certain activities.

10. Microphone

The Microphone is located under the **Unlock Button** and is used for the voice activation feature. The suggested distance to keep between the Microphone and your mouth is around 12-15 centimetres.



 
11. Automatic Shut-Off

To prolong battery life, the **VTech® Secret Safe Notebook** will shut off automatically if it has not had any input after several minutes. The unit can be turned on again by pressing the **Unlock Button** or any of the mode buttons.

The unit will also automatically turn off when the batteries are low on power.

12. Notebook Replacement

You can replace the included notebook with a standard A6 size notebook. The maximum recommended page count of a replacement notebook is 100 pages (50 sheets). There are two book holders to secure the replacement notebook. Please make sure that the replacement notebook has been inserted into the two book holders when replacing the notebook.

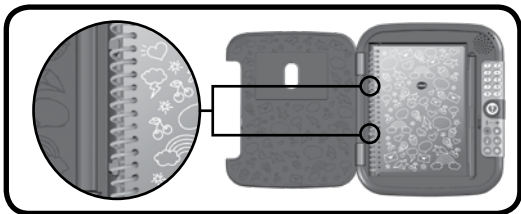


13. Pen Holder

Keep your pen in this holder.



14. Secret Compartment

 Store your items in the compartment to keep them secret and safe.

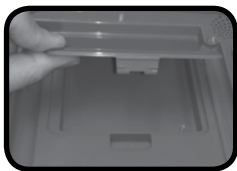

15. Clear Plastic Frame

Before inserting a photo of your choice (not included) into the front cover of the **Secret Safe Notebook**, we recommend placing the provided Clear Plastic Frame on top of it. First, place the Clear Plastic Frame on top of your photo and make sure the subject of your photo is inside the dotted heart. Draw around the outline of the Clear Plastic Frame, and then cut along the line which you have just drawn.

Note: Adult supervision required.



TO BEGIN PLAY

Activating Normal Play Mode:

When you first use this product, you will need to activate Normal Play Mode.

1. Open the battery cover and locate the **Reset Button** next to the word “**RESET**”.
2. Press the **Unlock Button** to turn the unit on.
3. Next, press the **Reset Button**. You will hear a ‘beep’ sound once the passcode has been cleared and Normal Play Mode has been activated.
4. The next time the unit turns on, you will be asked to set the number passcode.

If no passcode exists:

- A voice saying “Please create a 4-digit passcode” will be heard.
- Once you have entered a 4-digit passcode you will be asked to repeat it.
- When your password has been set, a voice will say “OK! Your passcode has been set”. The cover will then open and you can begin using the **Secret Safe Notebook**.
- If the passcode did not set, you will hear “Oh! There’s no passcode”. Press the **Unlock Button** to try setting a passcode again.

If a passcode exists:

- By typing in the correct passcode you will hear “OK” and the cover will open.
- If you enter the passcode incorrectly twice, you will hear “Sorry, this isn’t your notebook” and the unit will shut off automatically.

Reset Passcode:

- To change the passcode, press the **Reset Button** before entering any games. The passcode will then be removed. The next time your **Secret Safe Notebook** turns on, you will be asked to create a new passcode.

ACTIVITIES:

1. Voice Recording Mode

In this mode you can record up to 10 voice entries. Each number button will store 1 voice entry. You can record up to approximately 40 seconds per recording. The light will flash when the recording time is about to finish.

2. Voice Review Mode

In this mode you can review the voice entries that you've recorded in the Voice Recording Mode. Press a number button to review the recorded voice assigned to that number.

3. Music Mode

In this mode you can listen to 10 built-in melodies. The melodies will play randomly until they have all played once. You can also press any number button to select a melody to play.

4. Voice Changer Mode

In this mode, say anything into the microphone and it will be repeated back to you with a silly voice effect! The voice effects are as follows: pitch up, pitch down, slow voice, fast voice, echo and robot voice.

5. Guess My Number Game

In this game you will need to guess the correct number based on the instruction voice. If the answer is a 2-digit number, please enter the two numbers within 1.5 seconds.

CARE & MAINTENANCE

1. Keep your **VTech® Secret Safe Notebook** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep the unit out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not in use for an extended period of time.
4. Do not drop the unit on hard surfaces or expose the unit to moisture or water. **Never** try to dismantle it.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

