

vtech[®]

Instruction Manual

 
Zoo Jamz[®] Doggy Xylophone



INTRODUCTION

Thank you for purchasing the **Zoo Jamz® Doggy Xylophone**.

Create your own melodies, discover different music notes, then follow the light-up bars to play songs in an exciting game. Do re mi, it's a party!

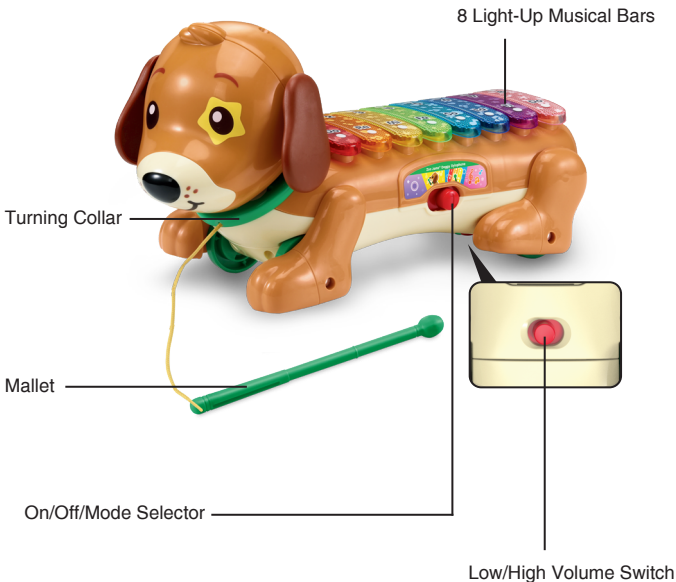

INCLUDED IN THE PACKAGE

- Zoo Jamz® Doggy Xylophone.
- Mallet
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the packaging locks:

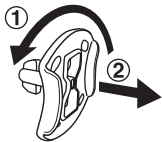


- ① Turn the packaging locks 90 degrees counterclockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the dog's tummy, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. For best performance, alkaline batteries are recommended. Rechargeable batteries are not guaranteed to work with this product.
5. Replace the battery cover and tighten the screw to secure.

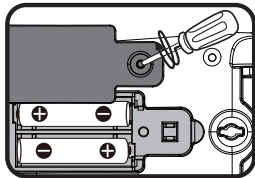

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION





- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



PRODUCT FEATURES

 
1. On/Off/Mode Selector

To turn the unit **On**, slide the **On/Off/Mode Selector** to the **Free Play mode** , **Follow Me mode**  or **Learn to Play Mode** . To turn the unit **Off**, slide the **On/Off/Mode Selector** to the **Off**  position.



2. Low/High Volume Switch

Slide the **Volume Switch** to select **Low volume**  or **High volume** .

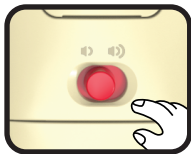

3. Light-Up Musical Bars

Press or tap the **Musical Bars** to learn music notes, create music or follow light patterns to play songs.



4. Turning Collar

Turn the **Collar** around to move the Mallet closer to the Musical Bars.



5. Mallet

Use the **Mallet** to play music by tapping on the musical bars.



6. Automatic Shut-Off

To preserve battery life, the **Zoo Jamz® Doggy Xylophone** will automatically shut off after 60 seconds without input. The xylophone can be turned on again by sliding the **On/Off/Mode Selector** to Free play mode, Follow Me mode or Learn to Play Mode.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries..

ACTIVITIES

1. Free Play Mode



Slide the **On/Off/Mode Selector** to Free Play mode then press or tap the **Musical Bars** to hear individual music notes and create music. The corresponding musical bar will light up.

2. Follow Me Mode



Slide the **On/Off/Mode Selector** to Follow Me mode then press or tap the **Musical Bars** to play a fun game of follow me. The musical bars will light up and the voice will guide you through a sequence of notes.

There are three levels of play. Each level will start by asking you to repeat one note and will build each time you respond with the correct note.

Level 1: Sequence of 3 notes

Level 2: Sequence of 5 notes

Level 3: Sequence of 8 notes

3. Learn to Play Mode

Slide the **On/Off/Mode Selector** to Learn to Play mode then press or tap the **Musical Bars** to play a song.

Press or tap the **Musical Bars** while a song is playing to play the song note by note, following the lights.

There are three levels of play. In level 1 and 2, the song will pause and the light for the next note will remain on until the **Musical Bar** is pressed or the unit automatically shuts off.

Level 1: Play 7-9 notes from the song, the remaining notes will play automatically.

Level 2: Play 11-16 notes from the song, the remaining notes will play automatically.

Level 3: Play the full song note by note.

SONG LYRICS

Song 1

A-B-C-D-E-F-G, won't you run and play with me?

Up the hall and down the stairs.

Chasing, running everywhere.

A-B-C-D-E-F-G, won't you run and play with me?

Song 2

Are you sleeping? Are you sleeping?

Little dog, little dog?

Wake up and come play now!

Wake up and come play now!

[Dog barking sounds]

Song 3

All the puppies run and play,

Run and play, run and play.

All the puppies run and play,

In the sunshine.

Song 4

There was a kid who had a dog and he could fetch and play-o.

[Dog barking sounds], barking all the day-o.

Song 5

Oh, I'm a singing puppy, a puppy, a puppy.

Oh, I'm a singing puppy, la, la, la, la la.

Song 6

Sing, sing, sing a song, sing a song with me.

You can play, and I will sing together merrily.

Song 7

Oh where, oh where has my little dog gone?

He's following right behind me!

Song 8

Tap the keys and we will play.

We will play, we will play.

Tap the keys and we will play.

We will make some music!

Song 9

Making music all day long,
won't you come and sing my song.
Sing, sing, sing, along with me,
And we will play so happily.

Song 10

Oh, I can't think of a better way,
To pass the time, than to sing and play.

Solfège

Do-re-mi-fa-sol-la-ti-do.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5710
Product Name: Zoo Jamz® Doggy Xylophone
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

