

vttech®

Instruction Manual

Dash 'n' Deliver Scooter



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vttech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years

Electronic Learning Computers
Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Dash 'n' Deliver Scooter!**

Get a pizza from the cutest duo with the **Dash 'n' Deliver Scooter.**

Explore numbers, shapes and colours, then press Kitty to make deliveries.



INCLUDED IN THE PACKAGE

- Dash 'n' Deliver Scooter
- Sticker Sheet
- Quick Start Guide


WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

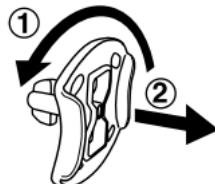


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out and discard the packaging locks.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover on the bottom of the scooter, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

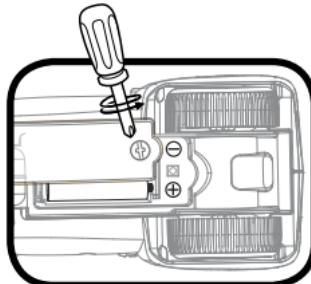

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:


www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION

Please securely stick the label to the scooter as indicated below.

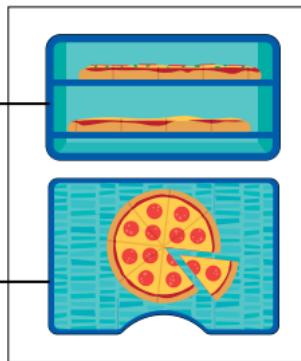

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the **Low Volume (1)** or **High Volume (2)** position. You will hear sounds, phrases and a song. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off (0)** position.



2. Automatic Shut-Off

To preserve battery life, the **Dash 'n' Deliver Scooter** will automatically power down after approximately 30 seconds without input. The unit can be turned back on by pressing any button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

For your child's safety, only use the scooter on the floor. Do not press and release the vehicle on hair, skin or clothing. Loose items may get caught in the wheels during motion. Do not block the scooter's path with hands, feet or other body parts when it's moving forward. If something gets caught in the wheels, lift the scooter away from your child to stop its movement. Adult supervision required.



ACTIVITIES

1. Kitty Button

Press the **Kitty Button** to hear playful sounds and phrases. The scooter will roll forward, the puppy will turn its head, and the light will flash along with the sound.



2. Shape Buttons

Press the **Shape Buttons** to discover numbers, shapes, and colours. Your child will enjoy playful songs, phrases, and melodies. Pressing Kitty during a melody adds fun sounds on top, while the light flashes along with the sound.



3. Back Door

Pull open the **Back Door** to reveal delicious pizzas ready for delivery.



MELODY LIST

1. A-Tisket, A-Tisket
2. Bingo
3. For He's A Jolly Good Fellow
4. Did You Ever See a Lassie?
5. The Bear Went Over the Mountain
6. Funiculi, Funicula
7. Hickory Dickory Dock
8. Looby Loo
9. Oats, Peas, Beans, and Barley Grow
10. Oh Where, Oh Where, Has My Little Dog Gone?
11. Pat-a-Cake
12. Wheels on the Bus

SONG LYRICS

Song 1

Scoot, scoot, don't be late,
Hot pizza's here, let's celebrate!

Song 2

1, 2, 3, 4, 5.
Kitten sitting way up high!
6, 7, 8, 9, 10.
Dog delivers pizza then!

Song 3

Cheesy, melty, golden bright,
Sauce so red and baked just right.
Pepperoni, mushrooms too,
Topped with love just for you!

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

