

vtech[®]
Baby

User's Manual

Baby's Laptop



© 2016 VTech
Printed in China
91-003208-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Baby's Laptop** learning toy!

The **Baby's Laptop** is full of fun and includes a colourful keyboard with nine brightly coloured shape buttons that interact with the light-up screen. The moveable mouse is perfectly sized for little hands and moves in all directions. Close the lid and grab the handle for on-the-go fun!



 
INCLUDED IN THIS PACKAGE

- One VTech® Baby's Laptop learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

Unlock the packaging locks:




- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten to secure.

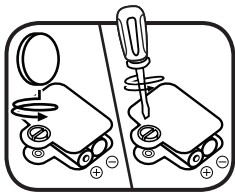

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.




For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com




PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or the **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. MODE SELECTOR SWITCH

To choose a mode of play, slide the **MODE SELECTOR SWITCH** to the **ANIMAL MODE** (), **COLOURS & SHAPES MODE** () or the **MUSIC MODE** () position.



3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Baby's Laptop** will automatically power-down after approximately 40 seconds without input. The unit can be turned on again by pressing any button, moving the mouse or by opening the laptop lid.

Note: If the unit repeatedly powers down or the light flashes three times then the unit powers down, we suggest changing the batteries.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a playful sing-along song in the animal mode and the colours & shapes mode. In the music mode you will hear music notes, a phrase and a short tune. The lights will flash with the sounds.



2. Slide the **mode selector switch** to choose a mode of play. You will hear a playful sing-along song in the animal mode and the colours & shapes mode. In the music mode you will hear music notes, a phrase and a short tune. The lights will flash with the sounds. If the laptop lid is closed, you will hear a reminder phrase to open the laptop.



 
3. Open or close the **laptop lid** to learn about opposites in the animal mode and the colours & shapes mode. In the music mode you will hear fun sounds. The lights will flash with the sounds.



4. Move the **mouse** to activate fun sounds in the animal mode, learn numbers in the colours & shapes mode and hear music notes in the music mode. The lights on the screen will follow the direction the mouse is moved.



5. Press the **shape buttons** to learn about animals through playful phrases and fun sounds in the animal mode. In the colours & shapes mode you will learn about colours and shapes. In the music mode you will hear melodies. The lights will flash with the sounds.

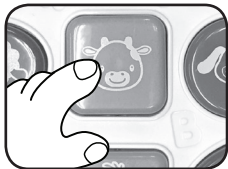

6. Press the **abc button** to hear the letters identified and a song in the animal mode. In the colours & shapes mode you will be asked to find a shape or an animal, use the shape buttons to answer. In the music mode you will hear melodies. The lights will flash with the sounds.



MELODY LIST

1. Happy Farmer
2. Mary Had a Little Lamb
3. Turkey in the Straw
4. Ta Ra Ra Boom De Ay
5. My Bonnie Lies Over the Ocean
6. Sailing, Sailing
7. All the Pretty Little Horses
8. Ride a Cock Horse to Banbury Cross
9. Oh Where Has My Little Dog Gone?
10. Oh! Susanna
11. Old King Cole
12. Skip To My Lou
13. Three Little Kittens
14. Three Blind Mice
15. Row, Row, Row Your Boat
16. Down By the Riverside
17. Clementine
18. Farmer in the Dell
19. Diddle Diddle Dumpling
20. Alphabet Song

SING-ALONG SONG LYRICS

SONG 1

It's such a lovely day,
The animals have come out to play!

SONG 2

Look around and you will see,
A world full of bold and colourful shapes!

SONG 3

Ah-Buh-Cuh-Duh-Eh-Fuh-Guh,
Come along and sing with me.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



vtech[®]

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

