

nickelodeon



# Instruction Manual

## ***Rescue Mission Learning Phone***

 


©2025 Spin Master Ltd. PAW PATROL and all related titles, logos, characters; and SPIN MASTER logo are trademarks of Spin Master Ltd. Used under license. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.

# INTRODUCTION

Thank you for purchasing the **VTech® PAW Patrol Rescue Mission Learning Phone**. Team up with Ryder to choose the best pup for different missions.

This awesome phone includes 6 exciting activities and features that help test your skills with problem solving, simple equations, shapes, memory and more. You can also receive fun virtual voice messages from Chase and Skye and use voice-activated play to make pretend phone calls!

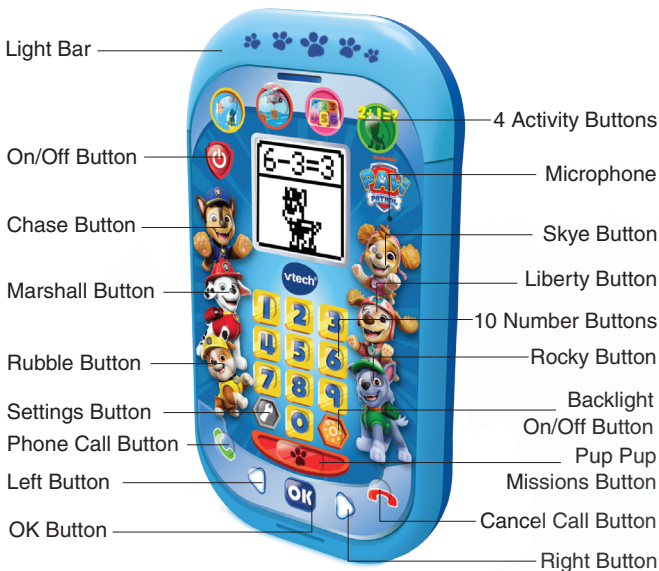

# INCLUDED IN THIS PACKAGE

- One **PAW Patrol Rescue Mission Learning Phone**
- One Quick Start Guide

## **WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE:**

Please save this Instruction Manual as it contains important information.

 
## **ATTENTION :**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## **NOTE :**

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## **Unlock the Packaging Locks:**

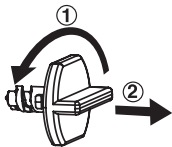


① Turn the packaging locks counterclockwise several times.

② Pull out and discard the packaging locks.

# GETTING STARTED
 
## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

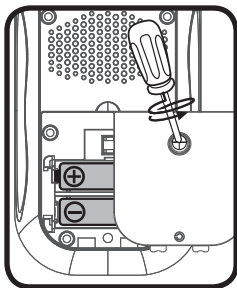

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

## **PILES RECHARGEABLES**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# PRODUCT FEATURES

## 1. On/Off Button



To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

## 2. Character Buttons

Press one of the 6 **Character Buttons** (Chase, Rubble, Marshall, Skye, Liberty, and Rocky) to dial the phone numbers and to see fun pup animations. You can also pretend to leave a message for the character.



## 3. Activity Buttons



Press the **Activity Buttons** directly to play one of the 4 activities.

## 4. Number Buttons

Press the **Number Buttons** to learn numbers or to answer number-related questions.



## 5. Pup Pup Missions Button



Press the **Pup Pup Missions Button** to enter the missions activity. You'll need to select the correct Pup based on the situation to finish the mission.

## 6. OK Button



Press the **OK Button** to confirm your choice.

## 7. Left/Right Buttons



Press the **Left/Right Buttons** to make a selection in activities or menus.

## 8. Phone Call Button



Press the **Phone Call Button** to make a virtual phone call. You will hear the phone ringing and will then be able to leave a message on the answering machine.

## 9. Cancel Call Button



Press the **Cancel Call Button** at any time to exit the current activity.

## 10. Microphone

The **Microphone** is used for the voice activation feature. Be sure to keep the **Microphone** about 4 inches from your mouth for best results.



## 11. Settings Button



Press the **Settings Button** to turn background music **On/Off**, adjust screen contrast, or select a ringtone.



## 12. Backlight On/Off Button



Press the **Backlight On/Off Button** to turn the backlight **On/Off**.

## 13. Light Bar

The **Light Bar** will flash or light with 6 colors when given a response.



## 14. Automatic Shut-Off

To preserve battery life, the **PAW Patrol Rescue Mission Learning Phone** will automatically turn **Off** after several minutes of inactivity. The unit can be turned **On** again by pressing the **On/Off Button**. The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

**Note:** This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

# ACTIVITIES:

The **PAW Patrol Rescue Mission Learning Phone** offers a total of 6 activities and features to play.

### 1. Pup Message

Press any of the 6 **Character Buttons** (Chase, Rubble, Marshall, Skye, Liberty, and Rocky) to call the character to the screen for a brief introduction and to hear fun phrases.



## 2. Surfboard Save

Help Marshall avoid obstacles in the sea. Press the **Left or Right Button** to avoid the obstacles. Then blow into the **Microphone** to inflate a lifebuoy to save Marshall.



## 3. Shapes at Sea

Cap'n Turbot dropped boxes in the sea. Pick up different shaped boxes with Skye. Press the **Left or Right Button** to adjust Skye's position and then press the **OK Button** to confirm.



## 4. Dance It Out

Liberty dances to the Pup Pup Boogie. Remember the dance steps and press the **Number Buttons** to repeat the dance.



## 5. Solve It

Mayor Humdinger stole the gold and locked it in his safe! Help Chase recover stolen gold by solving simple addition and subtraction equations. Press a number to answer.



## 6. Pup Pup Missions

Ryder will need a pup's help according to the situation. Press the correct pup's button to answer the questions being asked.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a brand new set of batteries.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Supplier's Declaration of Conformity** **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5809  
Product Name: Paw Patrol Rescue Mission Learning Phone  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.  
OPERATION IS SUBJECT TO THE FOLLOWING TWO  
CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL  
INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY  
INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT  
MAY CAUSE UNDESIRE OPERATION.  
CAN ICES(B)/NMB(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

