



Little Friendlies Musical Soft Ball



© 2015 VTech Printed in China 91-002989-000 (R)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

School

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Ineed

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

National Curriculum based content to support what I'm learning at school

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

lam...

vtech Bally

Toys that will

...responding to colours, sounds and textures

stimulate their interest

in different textures. sounds and colours

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months






INTRODUCTION

Thank you for purchasing the VTech® Little Friendlies Musical Soft Ball learning toy!

It's a circus of fun with the **Little Friendlies Musical Soft Ball!** Press the big music button to learn about the colourful animals. Then throw, shake, bounce and roll the bright ball to hear cheerful music and more!

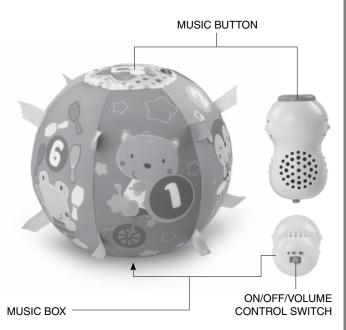

INCLUDED IN THIS PACKAGE

- One VTech® Little Friendlies Musical Soft Ball
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the electronic box inside the unit. Use a screwdriver to loosen the screw.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

ASSEMBLY INSTRUCTIONS

To ensure your child's safety, this product should only be assembled by an adult.

REMOVABLE ELECTRONIC MUSIC BOX

 To remove the electronic music box, open the hook and eye and the covering cotton on the bottom of the ball. Pull the electronic box out.



To insert the electronic music box, push the box into the ball ensuring the round end goes in first. See the image on the covering cotton for reference. You'll hear a click when inserted correctly. Close the covering cotton and seal the hook and eye.



PRODUCT FEATURES

1. ON/OFF VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **On/ Off Volume Control Switch** on the electronic box to the **Low Volume** (◄)) or **High Volume** (◄)) position.

To turn the unit **OFF**, slide the **On/Off Volume Control Switch** to the **OFF** (♠) position.



 
2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Little Friendlies Musical Soft Ball will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing the music button.

ACTIVITIES

- Slide the on/off/volume control switch to turn the unit on. You will hear a song, a fun phrase and a playful sound.
- Press the music button to learn about animals and numbers as well as a variety of playful sounds and melodies.





Roll, throw or push the ball to activate the motion sensor and hear a variety of playful sounds and songs.



MELODY LIST

- 1. Take Me Out to the Ball Game
- 2. Bicycle Built For Two
- 3. Boys and Girls Come Out to Play
- 4. Camptown Races
- 5. I've Been Working on the Railroad
- 6. This Old Man
- 7. Little Boy Blue
- 8. The Animal Fair
- 9. Toyland
- 10. Skip to My Lou
- 11. Chopsticks
- 12. Polly Put the Kettle On
- 13. Humpty Dumpty
- 14. Aiken Drum
- 15. Ta, Ra Ra Boom De Ay

SING-ALONG SONG LYRICS

SONG 1

Grab your friends,

It's time to play!

Bounce, bounce, bounce the ball.

SONG 2

Throw the ball into the air,

Catch it, kick it, roll it, bowl it.

Playing with the ball is so much fun!

SONG 3

One, two, it's cool playing with you!

SONG 4

Three, four, roll the ball on the floor!

SONG 5

Five, six, let's bounce and roll!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- 5. This toy works best indoors on smooth surfaces.
- 6. The fabric ball is machine washable. Please remove the electronic box and follow the care instructions on the label.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON.** The unit should now be ready to play again.
- 5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.





rtech[®] PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).

Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.