 


vtech®

Parent's Guide

SWITCH&GO®
DiNOS 
Overseer the T-Rex

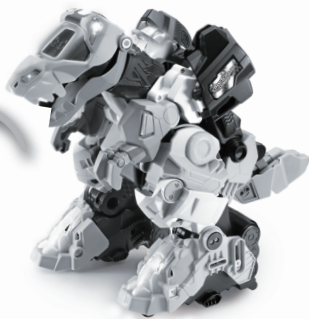

91-003773-011 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **SWITCH & GO DINOS® Overseer the T-Rex** by **VTech®**. Engage your imagination with this amazing T-Rex that switches into a mighty robot. Use the Action and Talk buttons to bring **Overseer the T-Rex** to life in your very own dinosaur universe.


OFF/VOLUME
SWITCH



DIRECTION
BUTTONS

ACTION
BUTTON

 TALK
BUTTON

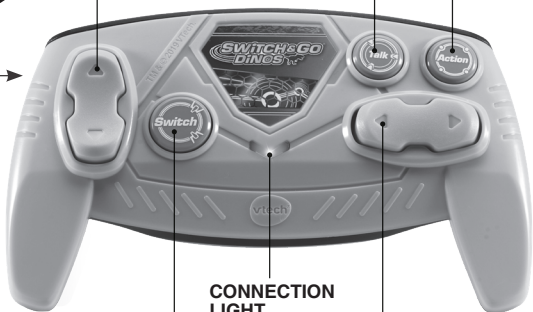

SWITCH
BUTTON

DIRECTION
BUTTONS



LIGHT UP
HEAD

SWITCH BUTTON

LCD SCREEN



POWER ON/OFF
SWITCH



INCLUDED IN THIS PACKAGE

 
- One VTech® SWITCH & GO DINOS® Overseer the T-Rex.
- One Remote Control
- One Parent's Guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

IMPORTANT NOTE:

1. For optimal performance, please play on a smooth surface.
2. When exposed to electrostatic discharge and radio interference, **Overseer the T-Rex** may malfunction. Please turn both Overseer and the remote control off and on again to reset them.
3. For your child's safety, do not put **Overseer the T-Rex** in either configuration on your clothing, body or hair.
4. For your child's safety, don't touch or pick up **Overseer the T-Rex** when it is switching.

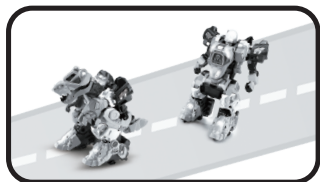


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION


Overseer the T-Rex

 1. Make sure the unit is turned **OFF**.
2. Locate the battery covers on the back of each foot and use a screwdriver to remove them.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 6 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery covers.

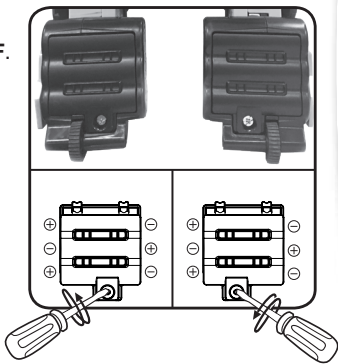

Remote Control

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the controller and use a screwdriver to remove it.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover.

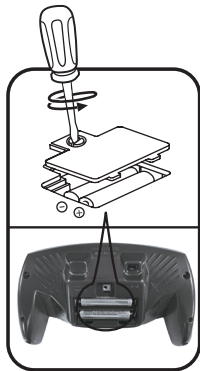

WARNING:

Adult assembly required.
Batteries are to be installed by adult.
Keep batteries out of reach from children.



BATTERY NOTICE

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.





Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.



VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.



 
PRODUCT FEATURES

OVERSEER THE T-REX:

1. POWER ON/OFF SWITCH

To turn **Overseer the T-Rex** on, slide the **Power On/Off Switch** to the **ON** (☀️) position.

To turn **Overseer the T-Rex** off, slide the **Power On/Off Switch** to the **OFF** (☾) position.

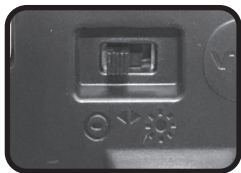

2. SWITCH BUTTON

Press the **Switch Button** to switch between a T-Rex and robot automatically.



 
3. LCD SCREEN

The **LCD Screen** shows T-Rex eye animations in **Dino Mode** and shows robot controller animations in **Robot Mode**.



4. LIGHT UP HEAD

The **Light Up Head** flashes a red light along with the sounds in **Dino Mode**. The **Light Up Head** flashes a green light along with the sounds in **Robot Mode**.

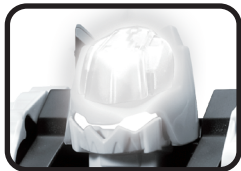

REMOTE CONTROL:

1. OFF/VOLUME SWITCH

To turn the **Remote Control** on and adjust the volume, slide the **Off/Volume Switch** to the **Low Volume** (🔊) position or the **High Volume** (🔊) position.

To turn the **Remote Control** off, slide the **Off/Volume Switch** to the **OFF** (🔇) position.



2. CONNECTION LIGHT

When the **Remote Control** is switched on, the **Red Connection Light** will turn on. If **Overseer the T-Rex** is switched on, the **Red Connection Light** will flash and the **Remote Control** will start to connect to

Overseer the T-Rex. If the connection is successful, the **Red Connection Light** will turn off and a **Green Connection Light** will show once buttons on the **Remote Control** are pressed. If the connection fails and the **Remote Control** cannot connect to **Overseer the T-Rex**, please turn the **Remote Control** and **Overseer the T-Rex** off and on again to try again.



Note:

If the **Connection Light** is off when any of the **Remote Control** buttons are pressed, please install a brand new set of batteries and try switching it off and on again.

3. DIRECTION BUTTONS

Hold the **Direction Buttons** to move **Overseer the T-Rex** forwards, backwards, left or right.



4. TALK BUTTON

Press the **Talk Button** to play wild T-Rex phrases, facts and sound effects in **Dino Mode**. Press the **Talk Button** to play cool robot phrases and sound effects in **Robot Mode**.



 
5. ACTION BUTTON

Press the **Action Button** to see Overseer perform a cool action!



6. SWITCH BUTTON

Press the **Switch Button** to see Overseer automatically switch between T-Rex and robot.

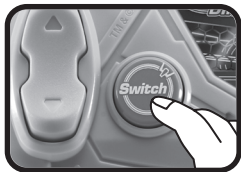

7. AUTOMATIC SHUT-OFF

To preserve battery life, **Overseer the T-Rex** will automatically turn off after several minutes without input. The **Remote Control** can't control **Overseer the T-Rex** during this period. **Overseer the T-Rex** can be turned on again by pressing the **Switch Button**, or by sliding the **Power On/Off Switch** from the **Off** position to the **On** position.

Note:

The lights on the T-Rex's nose will flash red three times and then automatically turn off when battery power is low. Once this occurs, please install a brand new set of batteries and try switching Overseer off and on again.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.





DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5210 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.vtech.com/re-directive

Manufacturer Name: VTech Electronics Europe BV

Manufacturer address: PO Box 10042, 6000 GA Weert, The Netherlands

Frequency Band: 2413MHz – 2473MHz

Maximum RF power: 0.001 W (0 dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5210 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address: www.vtech.com/re-directive

Manufacturer Name: VTech Electronics Europe BV

Manufacturer address: PO Box 10042, 6000 GA Weert, The Netherlands

Frequency Band: 2413MHz – 2473MHz

Maximum RF power: 0.001 W (0 dBm)





CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTech ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2019 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003773-011 