



## Quick Start Guide



### SPIN LEARNING WATCH

By reducing the quantity of paper used for our manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the manual is available online through the following links or by scanning the QR code.



For UK  
***[vtech.co.uk/manuals](https://vtech.co.uk/manuals)***



For AUS  
***[vtech.com.au/support/product\\_manuals](https://vtech.com.au/support/product_manuals)***



## INCLUDED IN THE PACKAGE

- One **Spin Learning Watch**
- One CR2450 battery
- Quick Start Guide

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### NOTE

Please keep this Quick Start Guide as it contains important information.

### Important Note

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.



### WARNING

People with very sensitive skin may notice some irritation after wearing the **Spin Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed. Take the watch off if it's feeling uncomfortable, and keep wrist and band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.



# INSTRUCTIONS

## Power Source



The **Spin Learning Watch** operates using one CR2450 battery. The CR2450 battery included with the product is for demo purposes only.

## GETTING STARTED

### BATTERY REMOVAL AND INSTALLATION

**NOTE:** For best performance, remove the factory-installed battery from the **VTech® Spidey and his Amazing Friends Spin Learning Watch** and use a new battery.

1. Make sure the watch cover is closed.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Use the screwdriver to push the metal piece according to the diagram. Remove the battery when one end of the battery pops up.
4. Follow the diagram inside the battery box to install one new 3V CR2450 battery and press it into the battery room.
5. Replace the battery cover and tighten the screw to secure.

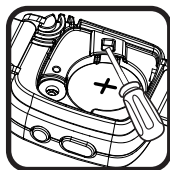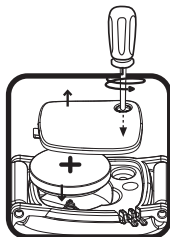

## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



## WARNING!

Contains coin battery.

A coin battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body.

Individual battery is hazardous. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

### Australia

If you think batteries might have been swallowed or placed inside any part of the body, immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.

### IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### RECHARGEABLE BATTERIES

- Remove rechargeable battery (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.



In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)


[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## ACTIVATE NORMAL PLAY

When you use the watch for the first time, you must unlock it from Try-Me mode to play. To unlock from Try-Me mode, open the **Cover**, and press the **Left + Right + OK Buttons** together for approximately five seconds. You will then hear three beeping sounds to indicate you have exited Try-Me Mode and the watch will function as normal. Press any button to activate the watch and set the time.

Press the **Left** or **Right Button** to select, then press the **OK Button** to confirm and move to the next option. A tick will be displayed when the setting is complete.

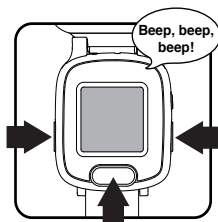

### Note:

- When the battery level is low  , most functions on the watch may not be activated, except for the clock display. It is recommended to install a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### UK Customers:

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

#### Contact VTech

Tel: 0330 678 0149 (from UK)  
+44 330 678 0149 (outside UK)  
1800 862 155 (Aus) / 0800 400 785 (NZ)  
[www.vtech.co.uk](http://www.vtech.co.uk)  
[www.vtech.com.au](http://www.vtech.com.au)