

vtech®

Parent's Guide

**SWITCH&GO®**  
**DiNOS**   
*Dash the T-Rex*



91-003281-010 UK

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

 
### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*

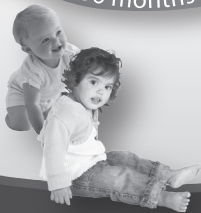

## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

The king is back! Introducing, **Dash the T-Rex**. At the push of a button, you can automatically switch Dash between a cool racer and a fearsome T-Rex! Use the **FORWARD/REVERSE BUTTON** and the **STEERING WHEEL** on the remote control to control Dash's every move! Let's go and show everyone why the Dash is the king of the dinosaurs!

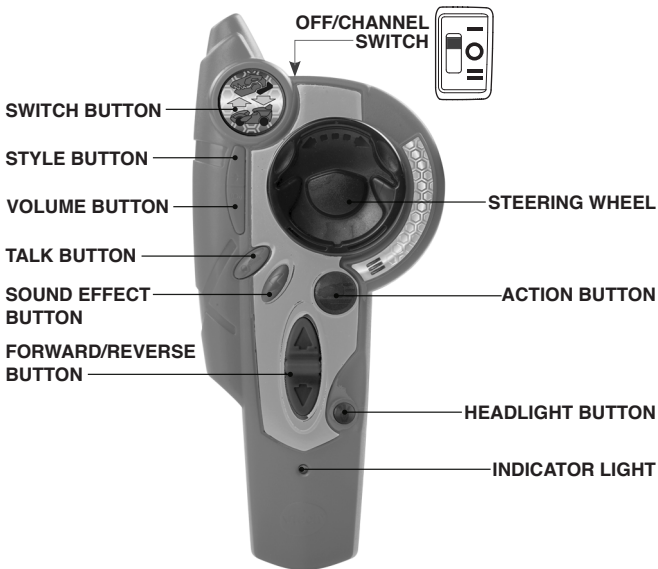

**SWITCH BUTTON**

**LIGHTS**

**LCD SCREEN**

**TALK BUTTON**

(Hold down for a few seconds  
to turn the unit OFF)

 
**LIGHTS**

**SOUND EFFECT  
BUTTON**

(Hold down for a few seconds  
to turn the unit OFF)

**ALIGNMENT  
DIAL**

**OFF/CHANNEL  
SWITCH**

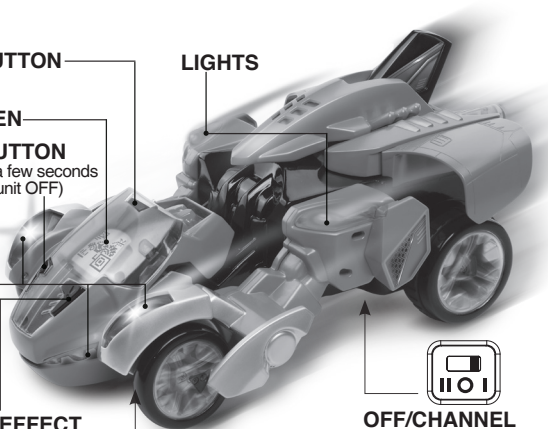

# INCLUDED IN THIS PACKAGE

- One **Dash the T-Rex**
- One remote control
- Parent's guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety

## NOTE:

 
Please keep this parent's guide as it contains important information.



**WARNING :**  
CHOKING HAZARD - small parts.  
Not for children under 3 years.

## IMPORTANT NOTE:


1. For optimal performance, please use **Dash the T-Rex** on a flat, smooth surface.
2. When exposed to electrostatic discharge and radio interference, **Dash the T-Rex** may malfunction. Please turn both Dash and the remote control off and on again to reset them.
3. For your child's safety, do not put **Dash the T-Rex** in either configuration on your clothing, body or hair.

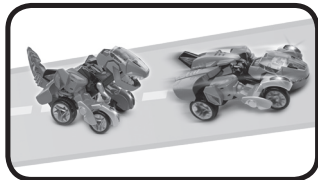

# GETTING STARTED

## BATTERY INSTALLATION

 
1. Make sure that Dash and the remote control are turned **OFF**.
2. Locate the battery covers on the top of Dash (**see next page for details**) and on the back of the remote control. Use a screwdriver to loosen the screws.
3. First, install 6 new AA (LR6/AM-3) batteries following the diagram inside the battery box of Dash. Then, install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box of the remote control. (The use of new alkaline batteries is recommended for maximum performance).
4. Put the battery covers back on Dash and the remote control. For Dash, you will need to press down firmly on the cover to close it, then tighten the screw.

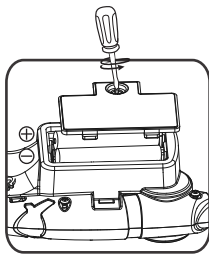


**Remote Control**

**NOTE:** When the batteries run low on power, Dash may no longer respond. If this happens, please replace the batteries with brand new ones.

 
## REMOVING THE BATTERY COVER FROM DASH

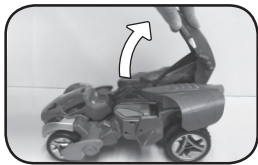

 1. In vehicle mode, lift up Dash's tail.

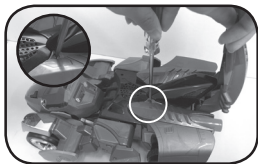

 2. Loosen the screw as illustrated.

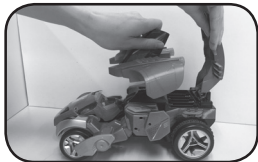

3. Lift up the blue rear wing section to expose the battery box.



4. Install 6 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).

# BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)



# PRODUCT FEATURES

## 1. TURNING DASH THE T-REX ON

Slide the **REMOTE CONTROL OFF/CHANNEL SWITCH** to the **I** or **II** position to turn the **REMOTE CONTROL ON**.



Slide the **OFF/CHANNEL SWITCH** on **Dash the T-Rex** to the same position (**I** or **II**) as the **REMOTE CONTROL**. The **REMOTE CONTROL** and **Dash the T-Rex** must be on the same channel (**I** or **II**) to send and receive signals.



 
 
## 2. INDICATOR LIGHT ON THE REMOTE CONTROL

The **INDICATOR LIGHT** will illuminate anytime a button is pressed or the **STEERING WHEEL** is turned. The light indicates a signal is being sent to **Dash the T-Rex**.



## 3. SWITCH BUTTON

Press the **SWITCH BUTTON** on the **REMOTE CONTROL** or on **Dash the T-Rex** to automatically switch **Dash the T-Rex** from dino to vehicle or from vehicle to dino.

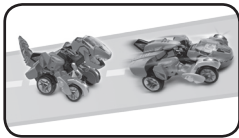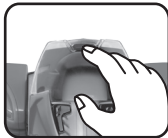

## 4. FORWARD/REVERSE BUTTON

 
By pressing the **FORWARD/REVERSE BUTTON** on the **REMOTE CONTROL** up or down, **Dash the T-Rex** will move forwards or backwards.



**NOTE:** If **Dash the T-Rex** is not moving straight, use the **ALIGNMENT DIAL** to adjust the front wheel alignment.

## 5. STEERING WHEEL

Turn the **STEERING WHEEL** on the **REMOTE CONTROL** to make **Dash the T-Rex** turn left or right.

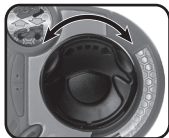


## 6. ACTION BUTTON

Press the **ACTION BUTTON** on the **REMOTE CONTROL** to hear **Dash the T-Rex** make cool sound effects and to see him stomp and dash.



## 7. HEADLIGHT BUTTON

 Press the **HEADLIGHT BUTTON** on the **REMOTE CONTROL** to see the two headlights light up and play sound effects.

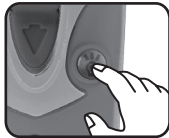

## 8. TALK BUTTON

Press the **TALK BUTTON** on the **REMOTE CONTROL** or on **Dash the T-Rex** to hear **Dash the T-Rex** speak cool phrases and teach dinosaur facts.



## 9. SOUND EFFECT BUTTON

Press the **SOUND EFFECT BUTTON** on the **REMOTE CONTROL** or on **Dash the T-Rex** to hear cool sound effects.



## 10. STYLE BUTTON

Press the **STYLE BUTTON** on the **REMOTE CONTROL** to change Dash's eyes in dino mode, or to select a dashboard function in vehicle mode.




## 11. VOLUME BUTTON

Press the **VOLUME BUTTON** on the **REMOTE CONTROL** to adjust the volume.



## 12. TURNING DASH THE T-REX OFF / AUTOMATIC SHUT OFF


Slide the **OFF/CHANNEL SWITCH** on the **REMOTE CONTROL** to the middle position  to turn it **OFF**.



Slide the **OFF/CHANNEL SWITCH** on **Dash the T-Rex** to the middle position  to turn Dash **OFF**.



To preserve battery life, **Dash the T-Rex** will automatically shut off after several minutes without input. Dash can be turned on again by toggling the **OFF/CHANNEL SWITCH** or by pressing any of the following buttons: **TALK BUTTON**, **SOUND EFFECT BUTTON** or **SWITCH BUTTON** on **Dash the T-Rex**.

**NOTE:** **Dash the T-Rex** and the **REMOTE CONTROL** will automatically shut off when their respective batteries are low on power. For **Dash the T-Rex**, a low power battery indicator  will be shown on screen as a reminder.

## CARE & MAINTENANCE

1. Keep **Dash the T-Rex** and the remote control clean by wiping them with a slightly damp cloth.
2. Keep **Dash the T-Rex** and the remote control out of direct sunlight and away from any direct heat source.
3. Remove the batteries when **Dash the T-Rex** and the remote control are not in use for an extended period of time.
4. Do not drop **Dash the T-Rex** or the remote control on hard surfaces and do not expose either of them to moisture or water.

# TROUBLESHOOTING

If for some reason **Dash the T-Rex** or the remote control stop working or malfunction, please follow these steps:

1. Please turn **Dash the T-Rex** and the remote control **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let **Dash the T-Rex** and the remote control stand for a few minutes, then replace the batteries.
4. Turn **Dash the T-Rex** and the remote control **ON**. **Dash the T-Rex** should now be ready to play again.
5. If **Dash the T-Rex** still does not work, replace the batteries with a brand new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



**IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**DECLARATION OF CONFORMITY**

Hereby, VTech Electronics Europe BV declares that the radio equipment type 1955 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

[www.vtech.com/re-directive](http://www.vtech.com/re-directive)



# PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***



TM & © 2017 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003281-010 (M)