



Instruction Manual

Busy Bee Activity Table



INTRODUCTION

Thank you for purchasing the **VTech® Busy Bee Activity Table!**

The **Busy Bee Activity Table** features seven engaging play zones designed to stimulate visual and tactile development, while enhancing playtime fun. Pressing the buttons and flipping the pages of the animal-themed book reveal delightful phrases, cheerful songs, and exciting sound effects to captivate young learners.



INCLUDED IN THE PACKAGE

- Busy Bee Activity Table
- Quick Start Guide



 
3 Panels



1 Panel Base



4 Table Legs

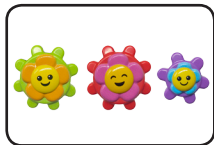


3 Gear Flowers



3 Blocks



 
1 Beehive

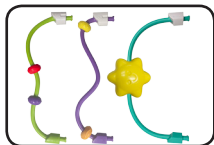

3 Bead Tracks



 1 Label Sheet

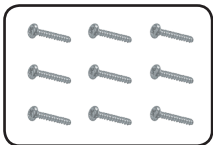

9 Screws

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this Instruction Manual as it contains important information.

Unlock the Packaging Locks

(The packaging locks are not included in a sealed box.)

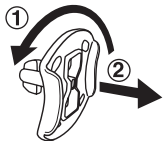

① Turn the packaing locks anticlockwise several times.

② Pull out and discard the packaging locks.



CAUTION:

Adult assembly required.

This package contains small parts.

For your child's safety, do not let your child play with the toy until it is fully assembled.

GETTING STARTED

 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

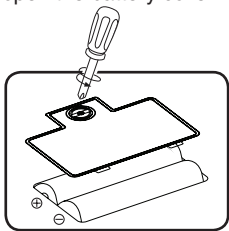

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

 
 
 
www.vtech.com.au/sustainability

ASSEMBLY INSTRUCTIONS

With the **Busy Bee Activity Table** safety comes first. To ensure your child's safety, adult assembly is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

1. Installing the Panels

Combine the 3 panels in order according to the numbers marked on the back, and fasten them with nine screws.

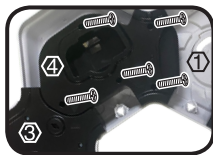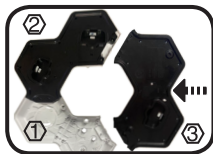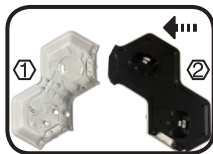

2. Installing the Beehive

Align the top of the beehive to the beehive base and press down to make sure it inserts properly.



 
 
3. Installing the Flowers

Insert the 3 gear flowers according to the size of the holes in the panel.




4. Installing the Bead Tracks

Align the two ends of the three bead tracks with their corresponding holes on the panels and insert them securely.

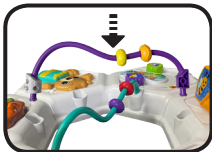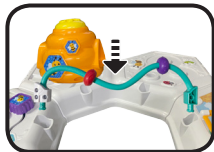


5. Installing the Table Legs

 Attach the table legs by inserting them into the sockets located at the bottom of each panel.

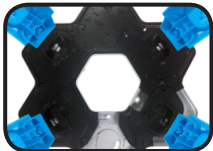


6. Removing the Table Legs

 To disassemble the table legs, please flip the table over, press up on the designated area and gently pull out the table legs from the back of each panel.

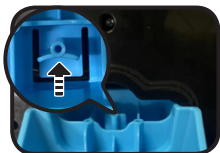




LABEL APPLICATION

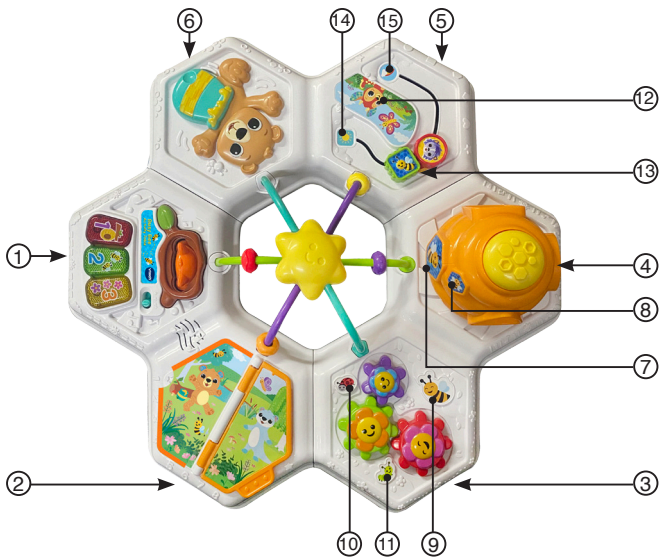 Please securely stick the labels to the table as indicated below:



PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **Off/On/Volume Switch** to the Low volume  or the High volume position . You will hear fun sounds, a phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off** position .



2. Automatic Shut-Off

To conserve battery life, the **Busy Bee Activity Table** will automatically power down after a period of inactivity. To reactivate, simply press any button or turn the storybook.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light Up Buttons

Press the **Light Up Buttons** to see a fox pop-up, hear sounds, melodies, sing-along songs and fun phrases.



2. Storybook

Turn the page of the **Storybook** to hear short tunes, animals sounds and phrases.



3. Flower Gears

Turn and see all the **Flower Gears** spin.



4. Beehive Sorter

Sort the blocks into the **Beehive Sorter**, then pop them out.



5. Forest Friends Maze

Slide the Forest Friends back and forth.



6. Wiggly Honey Bear

Wiggle the honey pot to make Bear dance.



7. Bead Tracks

Slide the beads on the **Bead Tracks** from one side to the other.



MELODIES

1. A-Tisket A-Tasket
2. Bingo
3. Diddle, Diddle Dumpling
4. Do You Know the Muffin Man?
5. Hickory Dickory Dock
6. Incy Wincy Spider
7. London Bridge
8. Looby Loo
9. Oh Where, Oh Where Has My Little Dog Gone
10. One, Two, Buckle My Shoe
11. Skip to my Lou
12. Frère Jacques
13. Good Morning Merry Sunshine
14. Humpty Dumpty
15. Ten In The Bed

SONG LYRICS

Song 1

Bees and foxes, bears and deer,
Otters too, all gather near,
In the woods they play and cheer,
Friends both far and near.

Song 2

Follow the bee, let's go to the forest.
So many animal friends, I can't wait to meet!

Song 3

In the forest, come explore, explore.
Find new wonders, so much more, much more.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

