



Instruction Manual

3-in-1 Mow and Grow Tractor



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **3-in-1 Mow and Grow Tractor**. The **3-in-1 Mow and Grow Tractor** easily transforms from a push mower to a ride-on tractor. Hit the road with the take-along toy driver to hear safety tips and listen to the radio while exploring exciting locations.

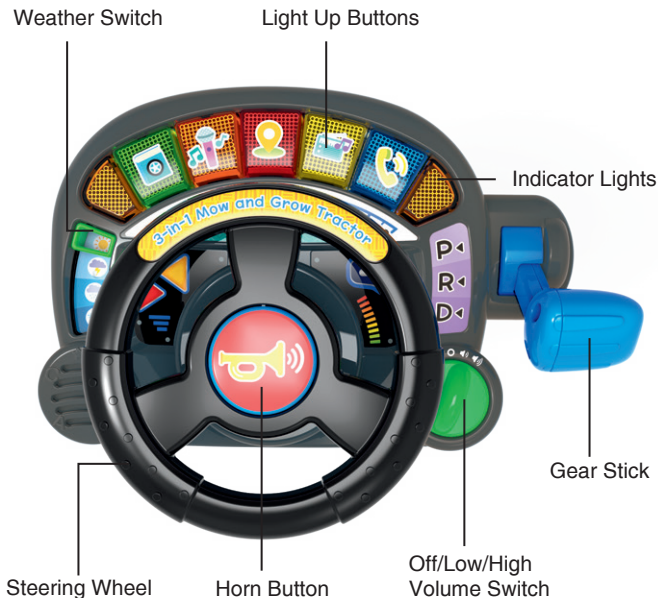


INCLUDED IN THIS PACKAGE


- Toy Driver



- Bonnet

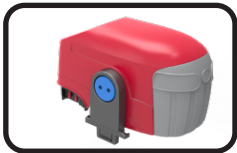


- Seat with Mower Handle

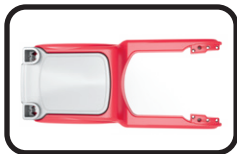

- Front Wheel Bracket



- Tractor Base

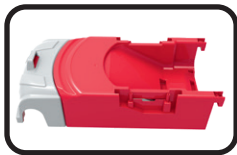

- Engine



- Rear Wheel Bracket



- Backrest




- Left/Right Foot Rest




- Exhaust Pipe



- 20 Screws

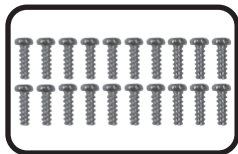

- 1 Label Sheet

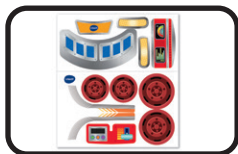

- Engine Support



- 2 Small Front Wheels



- 2 Large Rear Wheels



- Quick Start Guide



WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.



CAUTION:

Adult assembly required. This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.



CAUTION

PINCH HAZARD:

- ALWAYS lock in play mode before allowing use by child.

IMPORTANT:

- The maximum weight limit is 20 kg. Not intended for children older than 36 months.
- Use with adult supervision and KEEP CHILD AWAY from real tractors and lawnmowers.
- Always inspect before use and STOP USING if signs of excessive wear or breakage.



WARNING:

1. This toy requires adult supervision at all times.
2. Use this toy on a flat surface only. Do not use on steps or steep inclines where toy could roll away.
3. Please make sure child has shoes on at all times while using this tractor.
4. Do not use for transportation.
5. This is a toy; do not use as a pushchair.



WARNING:

- This toy should be used in a safe area e.g indoors, in a private garden, on level flat surfaces and away from any hazards such as cars, stairs, water etc.
- Not for use on pavements or in traffic.
- Adult supervision of young children is recommended.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.


INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

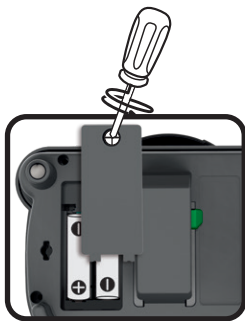

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

ACTIVATING NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. Once the toy is assembled, attach the **Toy Driver** to the top of the unit. Turn the **Off/ Low/High Volume Switch** to start, you will then hear three short “beeps”.



MODES

Toy Driver



Tractor Mode




Mower Mode




TRACTOR ASSEMBLY INSTRUCTIONS




1. Insert the left and right foot rest into the **Tractor Base**.

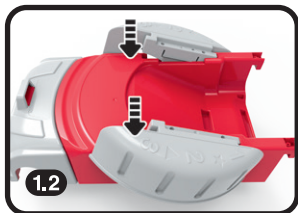


2. Insert the **Engine Support** into the slot in the **Tractor Base**.

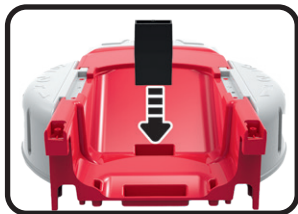


3. Place the **Engine** onto the **Engine Support**. Secure with 4 **Screws**.

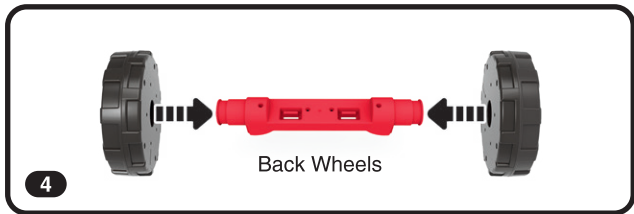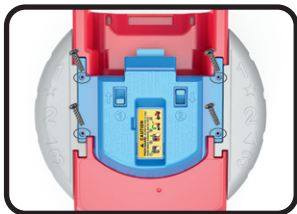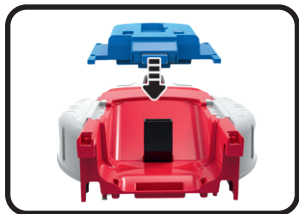


5. Align the slots on the **Rear Wheel Bracket** and insert into the end of the **Tractor Base**.

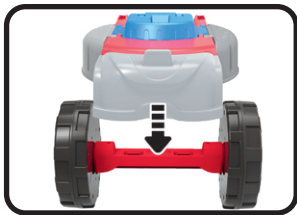

6. Place the **Tractor Base** onto the **Front Wheel Bracket**.

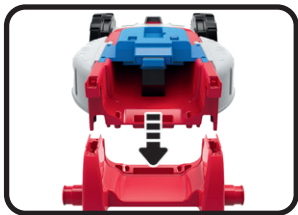

7. Turn the unit upside down and secure with **4 Screws**.


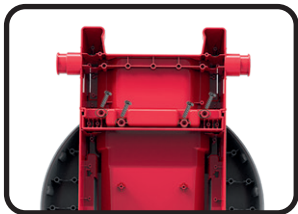


8




Front Wheels

9. Insert the **Seat with Mower Handle** into both sides of the **Bonnet** as shown in the illustrations. Then flip them upside down and use **8 Screws** to secure them.

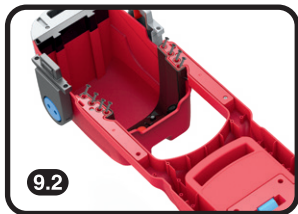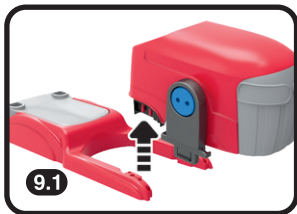


10. Place the **Bonnet** with the **Seat with Tractor Handle** onto the **Tractor Base**. Secure with **4 Screws**.

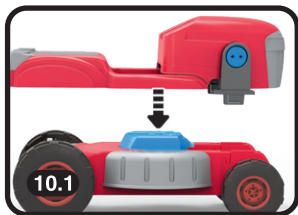

11. Insert the **Backrest** into the **Tractor Base** (it will click in place once fully inserted).



12. Insert the **Exhaust Pipe** onto the side of the **Bonnet**.


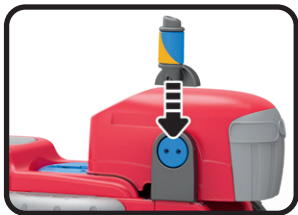


13. Slide the **Toy Driver** up onto the **Bonnet**.



Transforming from Tractor to Mower

Press down the green button and slide the **Toy Driver** off.

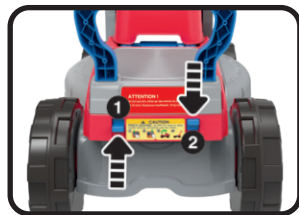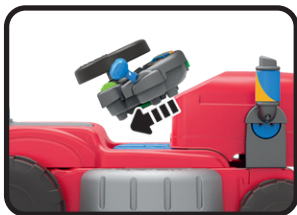


Transforming from Mower to Tractor


1. Press down the green button and lift the **Toy Driver** up.



2. Slide the buttons as shown to release the handle. Lower the handle.

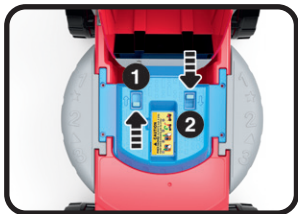

3. Slide the **Toy Driver** onto the **Bonnet**.

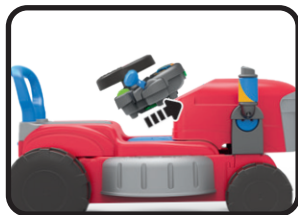

LABEL APPLICATION

Please secure labels onto the vehicle as shown below.



PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the **Off/Low/High Volume Switch** to turn the **Driver** on and adjust the volume to **Low** or **High**.



2. Five Light Up Buttons

Press the **Light Up Buttons** to hear sing-along songs, phrases and fun sound effects.



3. Gear Stick

Move the **Gear Stick** up or down to hear driving sounds.



4. Weather Switch

Slide the **Weather Switch** to hear phrases and sound effects for sunny, stormy, rainy and snowy weather.



5. Horn Button



Press the **Horn Button** to hear horn and mower sounds.

6. Steering Wheel

Turn the **Steering Wheel** left or right to hear indicator sounds and see the matching indicator light up.



7. Automatic Shut-Off


To preserve battery life, the **3-in-1 Mow and Grow Tractor** will shut **Off** automatically after approximately one minute of inactivity. The unit can be turned **On** again by sliding the **Off/Low/High Volume Switch** or by pressing any button. Additionally, when battery power is low, the unit will shut **Off** automatically and a red light will flash three times.

ACTIVITIES


1. Light Up Buttons:

Learning Button  : Hear safety and driving tips.

Music Button  : Play songs about driving and mowing.

Map Button  : Hear fun locations to “drive” to.

Radio Button  : Listen to pretend radio tunes and updates.

Phone Button  : Enjoy playful phone call phrases.

2. Horn Button:

Press to hear horn beeps or mower charge-up sounds.

3. Weather Switch:

Slide to hear weather sounds, facts and phrases.

4. Gear Stick:

Move to hear the tractor/mower start, stop and shift sounds.

5. Steering Wheel:

Turn to activate the indicators, matching lights and driving sound effects.

SONG LYRICS

Song 1

It's lovely out today.
It's time to run and play.
Driving here and driving there.
What a perfect day.

Song 2

It's lovely out today.
It's time to bale the hay.
Hauling here and hauling there.
What a perfect day.

Song 3

It's lovely out today.
It's time to mow the lawn.
Mowing here and mowing there.
What a perfect day.

Song 4

Racing and Roaming,
Let's go and explore again.
Where should we go? What should we see?
Let's play, you and me!

Song 5

Driving and Roaming,
Let's go and explore again.
We'll round up the sheep, into the shed,
To keep them safe and warm.

Song 6

Running and Roaming,
Let's go and explore again.
We'll jump in puddles, and splash and play.
So much fun! Hip-hip Hooray!

Song 7

I have a car.
It makes this sound.
I love to drive all around, all around.
I love to drive all around.

Song 8

My tractor's big.
It makes this sound.
I love to work all around, all around.
I love to work all around.

Song 9

My mower's fast.
It makes this sound.
I love to mow all around, all around.
I love to mow all around.

Song 10

Let's all go outside today,
The road will take us on our way.
Let's all go outside today,
Driving in the town.

Song 11

Let's all go outside today,
Feed the cows and haul the hay.
Let's all go outside today,
Working on the farm.

Song 12

Let's all go outside today,
Trim the grass and run and play.
Let's all go outside today,
Mowing in the yard.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the switch to turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the switch to turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

