

Disney

User's Manual

Jake Learn & Go



3-6
Years

vtech®

© Disney
Visit DisneyJunior.com

© 2012 Vtech
Printed in China
91-001655-001



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Jake Learn & Go**. Learn letters, numbers, logic and music in Learning Mode, or sail the Never Land Sea in Sailing Mode. Explore all 10 activities with Jake and his crew!

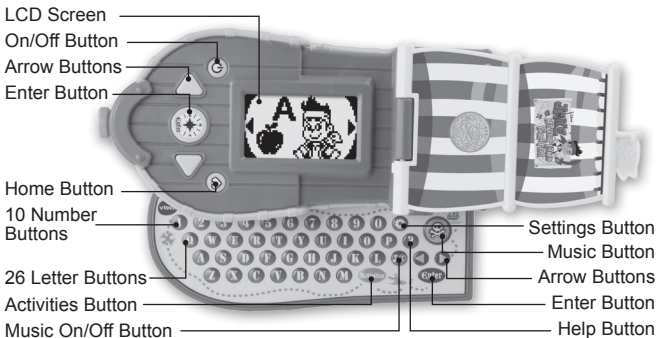

INCLUDED IN THIS PACKAGE

 
- One **VTech® Jake Learn & Go**
- One User's Manual
- One Sail

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

Unlock the packaging locks:

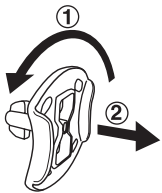


① Rotate the packaging lock 90 degrees anti-clockwise.

② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is OFF.
2. Locate the battery cover on the bottom of the unit.
3. Open the battery cover.
4. Install 2 new “AA” Size (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover.

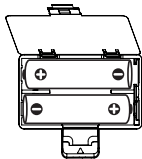

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

ATTACH THE SAIL

Before you play with the **Jake Learn & Go**, attach the sail. Refer to the picture to see how to attach this separate piece.



PRODUCT FEATURES

The VTech® **Jake Learn & Go** features two switchable modes of play.

Vertical: Sailing Mode

The player can enjoy two fun sailing games in vertical mode. Choose a game and use the left and right arrow buttons to help Jake and his crew complete their mission. Watch out for the obstacles!

Horizontal: Learning Mode

By sliding out the QWERTY keyboard, the player can enjoy eight learning games that teach letters, numbers, logic and music.

1. ON/OFF BUTTON

Press this button to turn the unit on or off.

 
2. HOME BUTTON

Press this button to enter the main menu. This button is only available in Sailing Mode.

3. ACTIVITIES BUTTON

Press this button to enter the main menu. This button is only available in Learning Mode.

4. LETTER BUTTONS

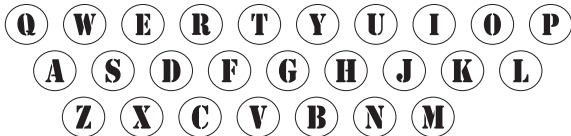

Press the letter buttons to learn letters or to answer letter-related questions.

5. NUMBER BUTTONS



Press the number buttons to learn numbers or to answer number-related questions.

6. ENTER BUTTON

Press these buttons to confirm your choice in Sailing Mode or Learning Mode.

7. HELP BUTTON

Press this button to repeat the current question or instructions, or hear hints in some activities.

8. ARROW BUTTONS

Press these buttons to make a selection in Sailing Mode or Learning Mode.

9. MUSIC BUTTON

Press this button to hear fun songs and watch Jake, Izzy, Cubby, and Skully dance.

10. SETTINGS BUTTON

Press this button to adjust the volume or screen contrast. Use the arrow buttons to select which item to adjust. Then, press the left and right arrow buttons to make adjustments. Press the Enter button to confirm and exit the Settings menu.

11. MUSIC ON/OFF BUTTON

Press this button to turn the background music on or off.

12. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the On/Off button. The unit will also automatically shut off when your batteries are very low. A warning will be displayed on screen as a reminder to change your batteries.

TO BEGIN PLAY

When the keyboard is closed, press the On/Off button to turn the unit on.

1. A short animation will play and then the unit will enter the Sailing Mode main menu.
2. Use the arrow buttons to select an activity and press the Enter button to confirm your choice.
3. Slide the keyboard out to switch from Sailing Mode to Learning Mode.

When the keyboard is open, press the On/Off button to turn the unit on.

1. A short animation will play and then the unit will enter the Learning Mode main menu.
2. Use the arrow buttons to select an activity and press the Enter button to confirm your choice.
3. Slide the keyboard in to switch from Learning Mode to Sailing Mode.

ACTIVITIES

The VTech® Jake Learn & Go offers a total of 10 activities to play.

Learning Mode

1. Pirate Picnic

One sunny day, Jake and his crew have a pirate picnic. Let's see what they brought! Press a letter button to see and hear that letter and a word that begins with that letter.

2. Letter Key

Jake needs to find the special pirate key he got from Captain Hook. Choose the key with the correct letter. Use the arrow buttons and Enter button to answer, or press the correct letter button.

3. Never Land Games

It's time for the Never Land Games! Help Cubby guess what Captain Hook is thinking of. Use the arrow buttons and Enter button to answer.

4. Count Seashells

Jake and Izzy are making sandcastles, and they want to decorate with seashells. Press a number button to collect and count that number of seashells.

5. Cubby's Treasures

Cubby wants to take some pictures for his collection. Help Cubby find some special objects! Use the arrow buttons and Enter button to answer.

6. Key Match

Jake found a treasure chest on the beach, but it's locked! Help Jake open the treasure chest before a big wave washes it back out to sea. Use the arrow buttons and Enter button to find the key with the correct shape.

7. Add it Up

Jake and his crew got some special seashells. Add up the seashells to see how many they have. Use the number buttons to answer.

8. Music Party

Jake and his crew are dancing around Never Land! Choose from five different melodies and watch the crew dance. There are 2 characters on the screen at a time. Use the arrow buttons to change characters and press the Enter button to add some special effects.

Sailing Mode

9. Surf's Up!

Jake's crew are surfing on their raft. Help them arrive at their destination safely and quickly! Use the arrow buttons to avoid obstacles.

10. Sail On!

Jake's crew are sailing the Never Land Sea with Bucky. They want to find more treasure, but obstacles keep getting in their way! Use Bucky's water cannon to get rid of the obstacles. Use the arrow buttons to move the water cannon and press the Enter button to shoot water.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.
5. This product is not intended for use in water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK), or +44 1235 546810 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE

Creating and developing **VTech® Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK), or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

COPYRIGHT NOTICES

Copyright ©2012 **VTech®** Electronics Europe PLC. All Rights Reserved. **VTech®** and the **VTech®** logo are registered trademarks of **VTech®** Electronics Europe PLC. All other trademarks are property of their respective owners.



vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

