


vtech[®]

User's Manual

Little Gadget, Letter Friend



2013 VTech[®]
Printed in China
91-001659-008 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing **Little Gadget, Letter Friend** from **VTech®**. **Little Gadget, Letter Friend** is a funny, friendly robot pal who loves to talk, teach, play and dance. He has five different modes of play that introduce letters, letter sounds, vocabulary words, telling the time, creativity, music and more. There's always something fun to do when **Little Gadget, Letter Friend** is around.

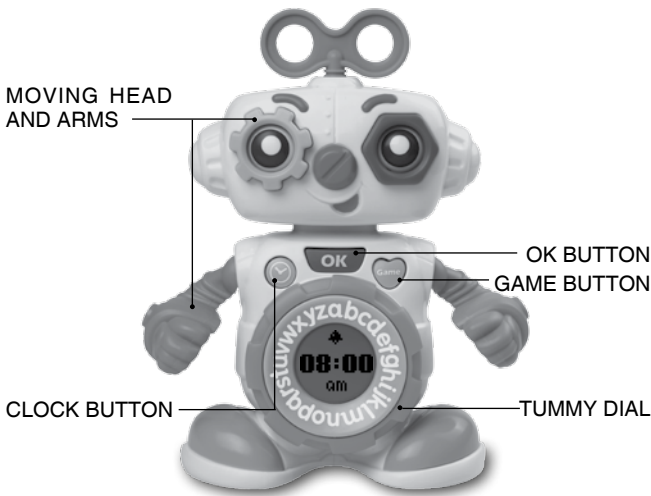


INCLUDED IN THIS PACKAGE

- One VTech® Little Gadget, Letter Friend
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

Note: Please keep this user's manual as it contains important information

 Unlock the packaging locks:

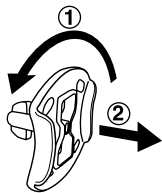


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is OFF.
2. Locate the battery cover at the back of the unit.
3. Use a screwdriver to open the battery cover.
4. Install 2 new "AA" size (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover.

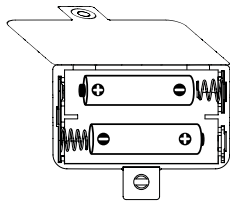

Important Note: When changing the battery, the clock will be reset. Please adjust the time display within the Settings menu.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

PRODUCT FEATURES

1. GAME BUTTON

Press the **GAME BUTTON** to switch from Clock mode to Game mode and then select a game.



2. CLOCK BUTTON

Press the **CLOCK BUTTON** to switch from Game mode to Clock mode.



3. OK BUTTON

Press the **OK BUTTON** to confirm your choice.



4. TUMMY DIAL

Turn the **TUMMY DIAL** to scroll through the menu or make a selection in a game. Spin it quickly to see some surprise reactions from **Little Gadget, Letter Friend**.



5. MOVING HEAD AND ARMS

Little Gadget, Letter Friend will shake his head and arms while playing. Please avoid holding his head or arms while he shakes.

6. ALARM CLOCK

Set the alarm clock within Settings. When the alarm sounds, press any button to turn it off. You can then reset the alarm inside the Settings menu.

7. AUTOMATIC SWITCH TO CLOCK MODE

To preserve battery life, the unit will automatically switch to clock mode after several minutes without input.

ACTIVITIES:

1. Letter Learning

Little Gadget, Letter Friend is going to teach you letters and phonics! Turn the **TUMMY DIAL** to choose a letter and press the **OK BUTTON** to confirm.

2. What's That?

Little Gadget, Letter Friend is trying to learn some earth objects, but the smoke from his spaceship is blocking his view. Help him to clear the smoke by turning the **TUMMY DIAL** so he can see the objects and learn.

3. Spaceship Maker

Little Gadget, Letter Friend wants to make a brand new spaceship! Turn the **TUMMY DIAL** to find the top and bottom parts for the spaceship. Press the **OK BUTTON** to select each part.

4. Tick Tock

Little Gadget, Letter Friend has a daily schedule. Turn the tummy dial to choose a time and press the **OK BUTTON** to see what **Little Gadget, Letter Friend** is doing at different times of the day.

5. Robot Rock

Let's dance with **Little Gadget, Letter Friend!** Turn the tummy dial to choose from five fun melodies. When listening to the melody and watching **Little Gadget, Letter Friend**, turn the tummy dial to make funny sounds!

6. Settings

Enter Settings in order to set the clock time and alarm, or adjust the LCD contrast and volume. When the alarm has been set, an alarm icon will appear on the LCD in Clock mode.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.
5. Do not hold the arms or head of the robot when it is in motion.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK), or +44 1235 546810 (outside UK), and a service representative will be happy to help you.

TECHNICAL SUPPORT:

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE

Creating and developing VTech® Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK), or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

