 



vtech[®]

User's Manual

SWITCH & GO
DiNOS 
MEGA T-REX

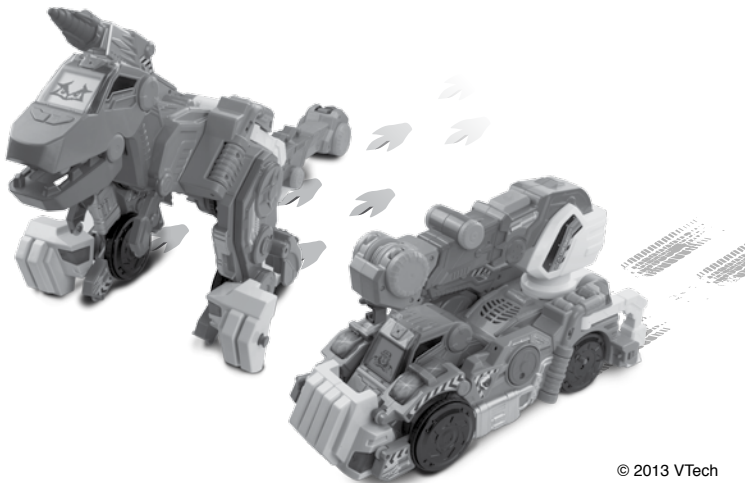

© 2013 VTech
Printed in China
91-009654-009 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

I am **Mega T-Rex** and my power is yours to command! Tell me to “go”, and I’ll make the earth shake with my powerful legs! Or tell me to “eat”, and my spike-like teeth and super-strong jaws will leave nothing behind!

Turn me into a building crane for even more excitement! Hear me rev my engine and blast my horn! Or fire my drill for some demolition fun! There’s so much we can do together. Just say the word!

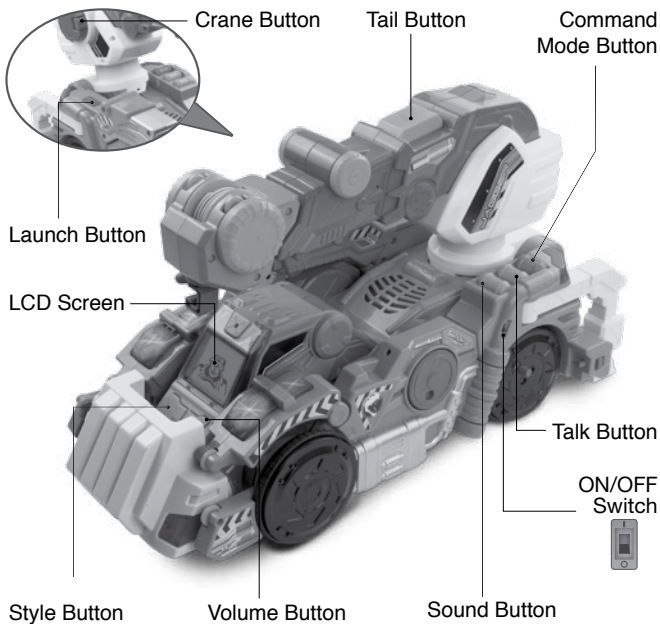

INCLUDED IN THIS PACKAGE

- One VTech® Switch & Dinos® Mega T-Rex
- One Switch & Dinos® poster
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
NOTE:

Please keep the user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 4 new AA (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

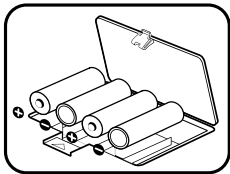

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.

- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. TURNING THE UNIT ON



Slide the **ON/OFF Switch** to **ON** to turn the unit **ON**.

2. Style BUTTON



Press the **Style Button** to choose a driver or change the dino eyes.

3. TALK BUTTON



Press the **Talk Button** to hear the dino or driver talk.

4. SOUND BUTTON



Press the **Sound Button** to hear great sound effects.

5. VOLUME BUTTON



Press the **Volume Button** to adjust the volume.

6. LAUNCH BUTTON



Press the **Launch Button** to fire the drill.

7. TAIL BUTTON



Press the **Tail Button** to turn on the truck's headlights or make the dino roar. The T-Rex will also roar if you lift his tail.



8. CRANE BUTTON



To adjust the crane's height, hold down the Crane Button and move the crane up to one of three positions. Release the button to lock the crane in place.

9. COMMAND MODE BUTTON



Press the **Command Mode Button** to enter Command Mode and Mega T-Rex will teach you how to command him. For more details about Command Mode, please see the How to Use Voice Commands section.

10. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF

Slide the **ON/OFF** switch to **OFF** or hold the **Talk Button** for a few seconds to turn the unit **OFF**.

To preserve battery life, the unit will automatically power-off after several minutes without input.

HOW TO USE VOICE COMMANDS

Mega T-Rex responds to 12 different commands in each mode.

Before you can give a command, you have to get his attention. Say “Hello T-Rex” if he’s a dino, or “Hello Truck Driver” if he’s a truck. Wait for him to respond, then say one of the commands. If he hears you, he’ll follow your command. But if he says “Let’s try again later”, he didn’t hear you and you should try saying the command again.

COMMAND MODE

If you don’t have the Command List with you and you don’t know the commands, you can press the Command Mode button to have Mega T-Rex give you a reminder.


In Command Mode, he will tell you what command to say. Just repeat the command after him. You don’t have to say “Hello T-Rex” or “Hello Truck Driver” first.

If you want to choose a different command, press the Command Mode button again. Keep pressing the button until Mega T-Rex tells you the command you’re looking for.


COMMAND LIST:

	DINO MODE	TRUCK MODE
Command 1	Go forward!	Go forward!
Command 2	Go back!	Go back!
Command 3	Roar with me!	Start your engine!
Command 4	Fire the drill!	Fire the drill!
Command 5	Change your voice!	Turn on the lights!
Command 6	Go wild!	Let's make some noise!
Command 7	Snack time!	Let's race!
Command 8	Make me laugh!	Sound the alarm!
Command 9	Talk to me!	Talk to me!
Command 10	Teach me something!	Wrecking machine!
Command 11	Go to sleep!	Monster truck!
Command 12	You're not so tough!	It's finishing time!

 HOW TO SWITCH THE TRUCK TO A DINO

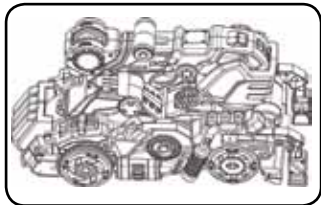

 
1. Truck shape.

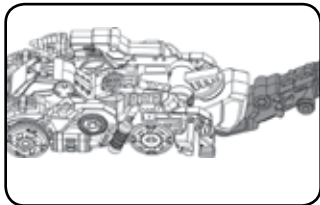


2. Move the crane back.



 
3. Separate the grill on the front of the truck.

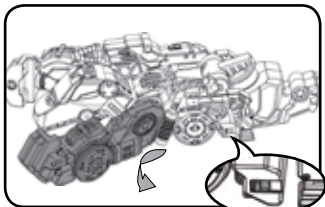

 
4. Turn Mega T-Rex over onto his side and flip his leg back. Make sure it locks into place.

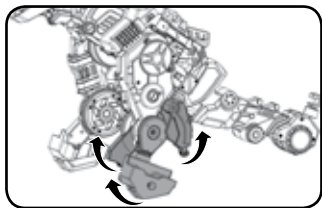

 
5. With Mega T-Rex still resting on his side, turn his foot and his big toe up towards the front and turn his heel up towards the back.

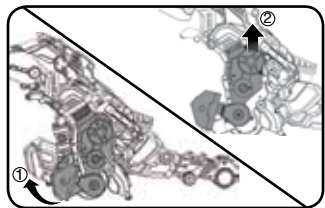

 6. Slide the grey cover on the leg forward as far as it will go. Then push the cover up until it locks into place.

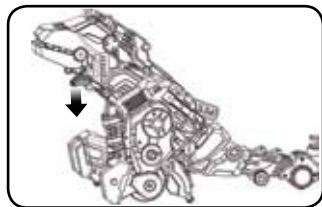

 
7. Turn Mega T-Rex over onto his other side and repeat steps 4, 5, and 6 with the other leg. Stand Mega T-Rex up when you're done. Move his arms down.

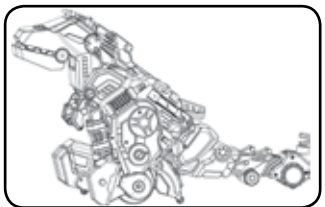

8. Dino shape.

Note: To change the dino back into a truck, reverse the order of the steps above.

 Before you can transform the dino's legs, you have to unlock them. Pull back the release switch behind each leg to unlock it. The leg can then move forward.

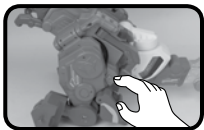

TIPS TO IMPROVE THE DINO'S WALKING MOTION

Mega T-Rex's legs will move up and down as he walks along the ground. In order to keep the legs moving smoothly, please make sure that the grey cover on the outside of each leg is in the proper position.

When Mega T-Rex turns into a dino, slide the cover forward first. Then slide it up until it locks in place in the top position. (See step 6 in the How to Switch section.)



Top position

When you turn Mega T-Rex into a truck, slide the cover down to unlock it. Then slide it back into the bottom position.



Bottom position

NOTE: If the leg cover is not fixed in either the top or bottom position, Mega T-Rex might not be able to move forward or backward in response to voice commands in Dino Mode. If this happens, please adjust the cover before trying the command again.

For best results, place Mega T-Rex on a hard surface.

If the rope has been cut off and drawn out of the unit, please follow the steps below to fix it into the right place.



1. Tie a small knot at one end of the string.



2. Feed the knot through the hole on the crane wheel.



3. Pull the string over to the side so the knot cannot slip back out the hole.

INSTRUCTIONS FOR THE DINO POSTER

This product comes with a special dino poster that works with the **VTech® Switch & Go Dinos®** App for Apple devices to give you a 3D prehistoric adventure! To use the poster, please follow the instructions below.

1. Place this poster on a wall or flat vertical surface.
2. Download or update the **VTech® Switch & Go Dinos®** App from the App StoreSM for iPhone® and iPad®.



3. Hold your device up to the poster until you see the dino's appearance change. Tap on the dino and watch it come to life!



More dino posters are available on www.vtechuk.com/switchandgo
Have a roaring good time!

Apple, the Apple logo, iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com

