 


vtech®

User's Manual

**SWITCH&GO®**  
**DiNOS**   
*Span the Spinosaurus*

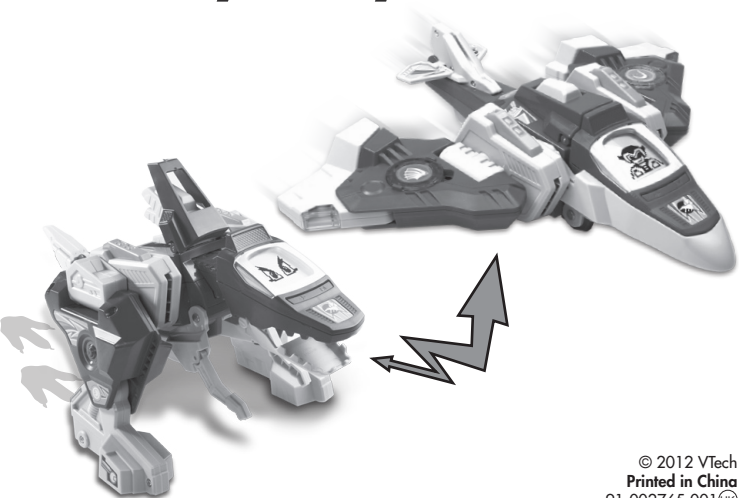

© 2012 VTech  
Printed in China  
91-002765-001 UK

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

## **vtech Baby**

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



**4-10 years**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 


To learn more about this and other VTech® products, visit [www.vtechuk.com](http://www.vtechuk.com)

# INTRODUCTION

I'm **Span the Spinosaurus**, and I'm the biggest carnivore of all time. My huge size, long jaws and sharp teeth make me a meat-eating machine. And if that doesn't scare you, the spines on my back will!

As a dinosaur I rule the land and water, as a plane I rule the skies. I can turn into a super-fast jet fighter and fly faster than the speed of sound!

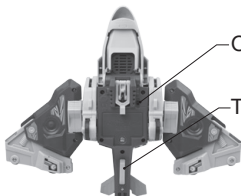

ON/OFF Switch

Tail Button

Volume Button

Style Button

LCD Screen

Launchers

Talk Button

Sound Button

# INCLUDED IN THIS PACKAGE

- One VTech® SWITCH & GO DINOS®: Span the Spinosaurus
- One user's manual

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
## NOTE:

Please keep the user's manual as it contains important information.

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AA (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

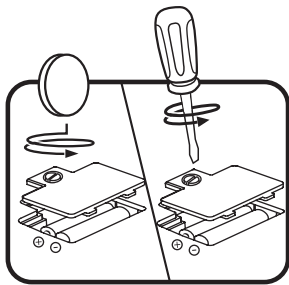

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.

- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

### Disposal of batteries and product




The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product  or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# PRODUCT FEATURES

## 1. TURNING THE UNIT ON

Slide the **ON/OFF Switch** to **ON** to turn the unit **ON**.

## 2. MOTION SENSOR

Move the plane to hear awesome flying sounds.



## 3. STYLE BUTTON

Press the **Style Button** to choose a pilot or change the dino eyes.



## 4. TALK BUTTON

Press the **Talk Button** to hear the dino or pilot talk.



## 5. SOUND BUTTON

Press the **Sound Button** to hear great sound effects.



 
## 6. VOLUME BUTTON

Press the **Volume Button** to adjust the volume.



## 7. TAIL BUTTON

Press the **Tail Button** to make the dino chomp and roar.

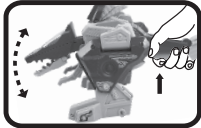


## 8. DISCS

Load the **Discs** into the launchers and press the buttons to watch them fly.



## 9. LAUNCHERS

 Press the **Launchers** to launch the discs.

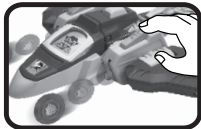

## 10. DINO CAGE AND BABY DINO

Press the button to open the **Dino Cage** and free the **Baby Dino**.



## 11. RESCUE LIFT

Use the **Rescue Lift** to carry the cage and other Switch & Go Dinos too.



## 12. REATTACHING THE DINO JAW

If the lower jaw falls off, please follow the steps below to reattach it.

1) Turn the Dino upside down and insert the cylinder on the side of the jaw into the hole on the underside of the head.

2) Fit the holes on each side of the jaw over the blue protrusions located under the head.

 


## 13. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF


Slide the **ON/OFF Switch** to **OFF** or hold the **Talk Button / Sound Button** for a few seconds to turn the unit **OFF**.

To preserve battery life, the unit will automatically power-off after several minutes without input.


## HOW TO SWITCH THE PLANE TO A DINO

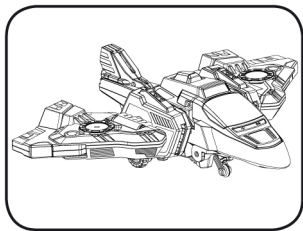

 
1. Plane shape.

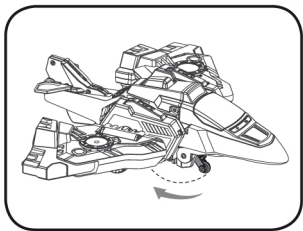

 
2. Move the landing gear on the bottom of the plane back.

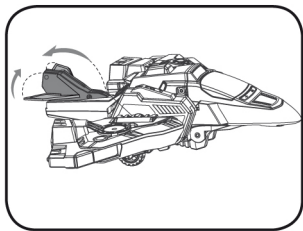

 
3. Move the sides of the tail in. Then move the whole tail down.

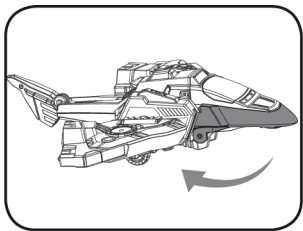

 4. Rotate the nose of the plane down.

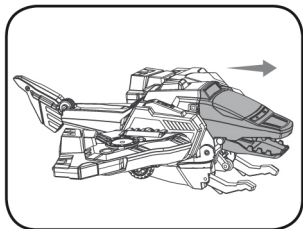


 5. Pull the head out.

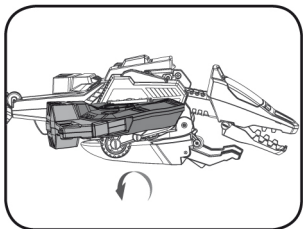


6. Rotate each of the wings 180 degrees so that they're facing backwards.



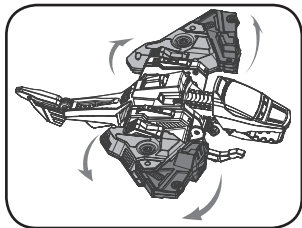

7. Flip each of the wings down and pull the feet down.

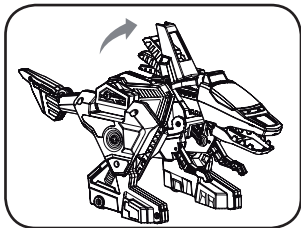

8. Move the spine up.

**Note:** To change the dino back into a plane, reverse the order of the steps above.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
  2. Interrupt the power supply by removing the batteries.
  3. Let the unit stand for a few minutes, then replace the batteries.
  4. Turn the unit **ON**. The unit should now be ready to play again.
  5. If the product still does not work, replace with a new set of batteries.
- If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

## **IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



## PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

Join the VTech club online at [www.vtechuk.com](http://www.vtechuk.com)

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).  
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

