

vtech[®]
Baby

User's Manual

Baby's Laptop



© 2013 VTech
Printed in China
91-002817-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years

To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Baby's Laptop!**

Baby's Laptop by **VTech®** encourages little ones to discover and learn letters, numbers, shapes, animals and more. Six colourful shape buttons light up the screen to teach letters and numbers. The white and black piano keys create an entertaining musical response. **Baby's Laptop** also comes with a cute little mouse that moves in four directions for more learning fun!

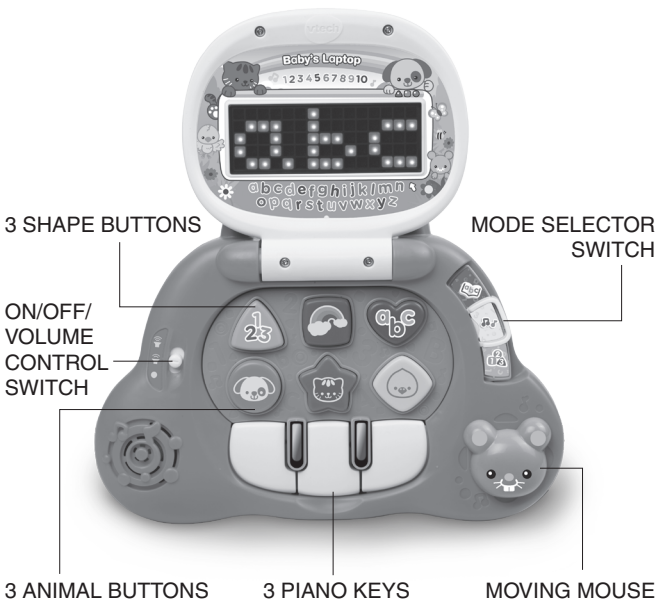

INCLUDED IN THIS PACKAGE

- One VTech® Baby's Laptop
- One user's manual

 
WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this instruction manual as it contains important information.

Unlock the packing locks:

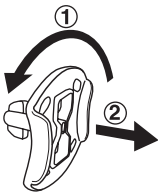


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packing locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 3 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

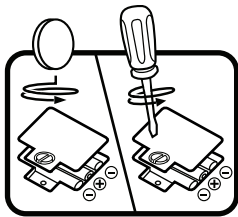

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.


 

For more information, please visit:


www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

 To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (), or the **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

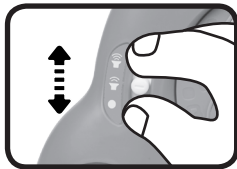


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Baby's Laptop** will automatically power-down after approximately 35 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

 
1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a fun sing-along song and a phrase. The screen will display a variety of animations with the sounds.

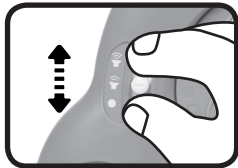

 
2. Select a mode by sliding the **mode selector switch** to the **Learning Mode**, **Music Mode** or **Discovery Mode**.

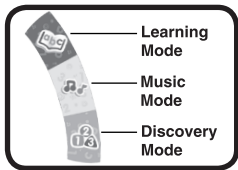

 
3. Press the **shape buttons** to learn the colour and name of the shapes and hear playful songs in the **Learning Mode**. In the **Music Mode** you will hear playful songs. In the **Discovery Mode** you will hear sounds and learn shapes. The screen will display a variety of animations with the sounds.

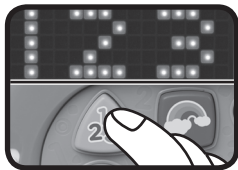

 
4. Press the **animal buttons** to learn colours, shapes, animal names and sounds and hear short tunes in the **Learning Mode**. In the **Music Mode** you will hear playful songs. In the **Discovery Mode** you will learn shapes, animal names and sounds and hear short tunes. The screen will display a variety of animations with the sounds.

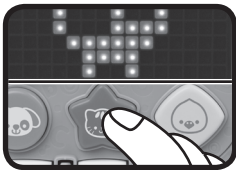

 5. Press the **piano keys** to hear sung music notes in the **Learning Mode** and **Discover Mode**. In the **Music Mode** you will hear music notes. When a melody is playing, press the piano keys to hear the melody played note by note. Stop pressing the piano keys and the melody will start playing from the beginning. The screen will display a variety of animations with the sounds.

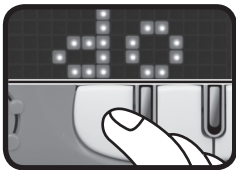

 6. Move the **mouse** to learn letters in the **Learning Mode**. In the **Music Mode** you will learn direction. In the **Discovery Mode** you will learn numbers. The screen will display a variety of animations with the sounds.

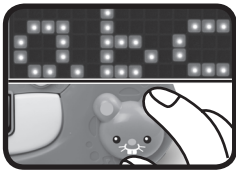

7. Open or close the laptop to hear fun sounds and encouraging phrases. The screen will display a variety of animations with the sounds.



8. If there is no input to the unit after approximately 5 seconds, you will hear a fun sing-along song or encouraging phrases. If there is still no input after another 5 seconds, you will hear another phrase. If there continues to be no input after another 5 seconds, you will hear a short tune and the unit will automatically power-down.

MELODY LIST

1. Alphabet Song
2. This Old Man
3. Twinkle, Twinkle Little Star
4. Row, Row, Row Your Boat
5. The Bear Went Over the Mountain
6. Hey Diddle Diddle
7. London Bridge
8. Peas Porridge Hot
9. Skip To My Lou
10. Three Blind Mice
11. Hickory Dickory Dock
12. Humpty Dumpty

SING-ALONG SONGS

Sing-along song 1

A, B, C, D, E, F, G.

Red, blue, green,

Learn colours with me!

Sing-along song 2

1-2-3-4-5,

Circle, triangle, square.

Numbers and shapes - learning everywhere!

Sing-along song 3

Hello, it's time to sing a song,

Let's have fun and sing-along!

Sing-along song 4

A, B, C, D,

E, F, G.

H, I, J, K,

L, M, N, O, P.

Q, R, S,

T, U, V.

W, X,

Y and Z.

Sing-along song 5

Red, orange, yellow, green, blue and purple!

The colourful rainbow is wonderful!

Sing-along song 6

1-2-3-4-5,

6-7-8-9-10,

Counting is fun.

Let's count again from one.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

