

vtech[®]
Baby

User's Manual

Toot-Toot Drivers[®]
Train Station



© 2013 VTech
Printed in China
91-002858-006^(K)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com


INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers® Train Station** learning toy!

The **Toot-Toot Drivers® Train Station** from **VTech®** lets your child play like a real conductor! Spark your child's imagination as they combine 32 track pieces into different configurations. Watch the motorised train and its cargo car chug along the tracks and go into the station, under the bridge and through the tunnel. The train and other **Toot-Toot Drivers®** vehicles (**SmartPoint™** vehicles only, each sold separately) respond to the 10 **SmartPoint™** locations that introduce early language skills. All Aboard!

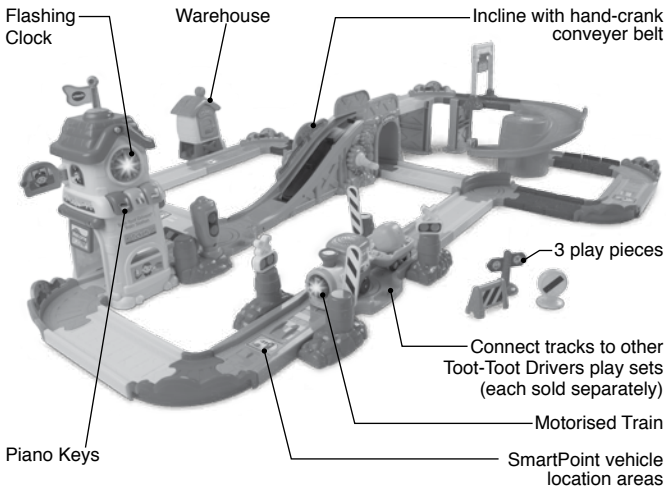


INCLUDED IN THIS PACKAGE

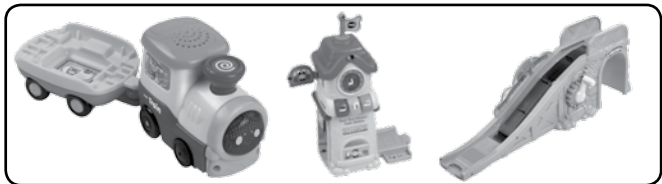 

- One **VTech® Toot-Toot Drivers® Train**
- One **VTech® Toot-Toot Drivers® electronic station**
- One incline




 - One warehouse
- 2 **SmartPoint™** tracks with traffic light
- One **SmartPoint™** track with road sign
- Two bridge supports

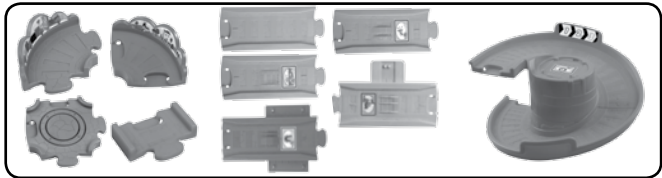

- 4 convex curved tracks

 - 3 concave curved tracks
- 4 crossroad tracks
- 8 short tracks
- 5 straight tracks
- 2 straight **SmartPoint™** tracks
- One **SmartPoint™** track for the warehouse
- One **SmartPoint™** track for the tunnel
- One spiral track

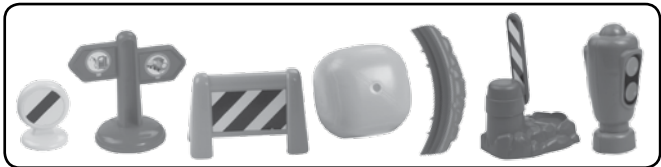


- One circle sign
- One destination board
- One road block
- One block for the warehouse
- One curve block for closing tracks
- One gate railing with base for station
- One traffic light
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

 Unlock the packaging locks:

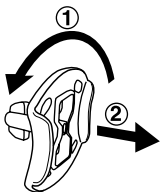



- ① Rotate the packaging lock 90 degrees anti-clockwise
- ② Pull out the packaging lock

ASSEMBLY INSTRUCTIONS

With the VTech® Toot-Toot Drivers® Train Station, safety comes first. To ensure your child's safety, adult assembly is required.


Electronic station

  1. Attach the gate railing base to the Smartpoint™ track of the electronic Station. Once securely in place, you will hear a loud 'click' sound.
2. Place the traffic light on the gate railing.

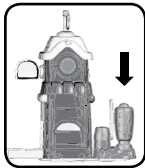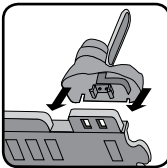


Tunnel

 1. Lift up the incline, attach it with the Smartpoint™ track of the tunnel, you will hear a loud 'click' sound to indicate the track is securely connected to the incline.

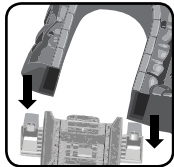


Warehouse

 1. Lift up the warehouse, attach it with the Smartpoint™ track of the warehouse, you will hear a loud 'click' sound to indicate the track is securely connected to the warehouse.

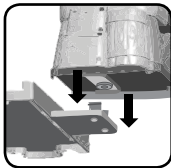

 
After the above steps, connect these pieces to the included track pieces. You can configure them into different shapes.

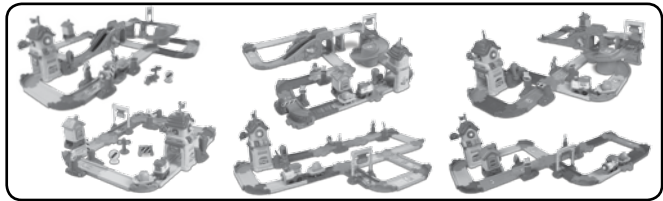

GETTING STARTED


BATTERY INSTALLATION - TRAIN

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

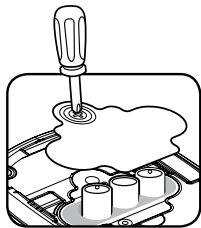

BATTERY INSTALLATION – STATION

 1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the station. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

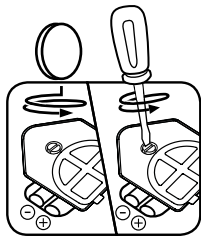

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES - Train


1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** position.

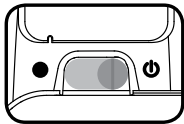

2. MOTOR CONTROL BUTTON



 
Press down the funnel button to activate the motor, press the button again to make it release and stop the motor.

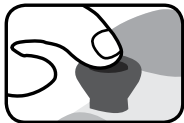

3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Toot-Toot Drivers® Train** will automatically power-down after approximately 30 seconds without input when the motor is off. The unit can only be turned on again by pressing the light-up screen button or pushing the train quickly.

   ACTIVITIES - TRAIN

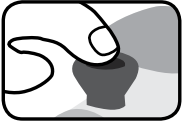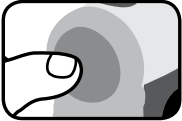1. Slide the **ON/OFF SWITCH** to the **ON** position to turn the unit **ON**. You will hear train sounds, a song and a phrase. The light will flash with the sounds.

2. Press down the **MOTOR CONTROL BUTTON** to start the motor. The train will move forward automatically and you will hear train sounds. The light will flash with the sounds.

3. Press the **LIGHT-UP BUTTON** to hear train sounds, songs and phrases. Press and hold the **LIGHT-UP BUTTON** to stop the motor. The motor will restart after the button is released. The light will flash with the sounds.

4. When the motor is off, push the train over the 10 **SmartPoints™** included in the play set to hear greetings, fun sounds, short tunes and sing-along songs. The light will flash with the sounds. The train also interacts with **SmartPoints™** on other **VTech® Toot-Toot Drivers®** play sets (each play set sold separately). Push the Train when there is no response to hear a random melody, push it 4 times to jam train sounds in to the melody. The light will flash with the sounds.
5. When the motor control button is pressed down, let the train run through the SmartPoints of different themes on the tracks to hear greetings, fun sounds, short tunes, and sing-along songs.
6. When the motor is off, if there is no input after approximately 8 seconds, you will hear an invitation and a sound effect. After another 8 seconds of no input, a song will play. If there is no input for a further 8 seconds, the unit will play a short tune and then go into sleep mode. When the motor is running, you'll hear all of the above, then the train will enter sleep mode after 5 minutes of no input. The train can be re-activated by pressing the light-up button, pressing down the motor control button or pushing the train quickly.

SING-ALONG SONG LYRICS

Sing-Along Song 1

I am a little train,
let's start our journey!
Choo, choo, toot, toot.
Chug along with me!

Sing-Along Song 2

I'm a powerful train.
Chugging along is wonderful!

Sing-Along Song 3

Carrying cars short and long,
this train is really strong!

 
MELODY LIST:

1. I've Been Working on the Railroad
2. Jack & Jill
3. It's Raining, It's Pouring
4. Old King Cole
5. London Bridge
6. Hey Diddle Diddle
7. Polly Wolly Doodle
8. Humpty Dumpty
9. Here We Go 'Round the Mulberry Bush
10. The Glow Worm
11. This Old Man
12. Hickory Dickory Dock
13. Frere Jacques
14. Pop! Goes the Weasel
15. Hot Cross Buns
16. Pease Porridge Hot
17. Alouette

PRODUCT FEATURES – Train Station

1. Off/Volume Control Switch

To turn the unit **ON**, slide the **Off/Volume Control Switch** to the **Low** (🔊) or the **High** (🔊) Volume position. To turn the unit **OFF**, slide the **Off/Volume Control Switch** to the **OFF** (🔇) position.




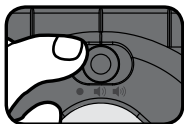


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Toot-Toot Drivers® Train Station** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by any input.

ACTIVITIES

    1. Switch the **ON/OFF** Button to the **ON** position to turn the unit **ON**. You will hear a song and a greeting phrase. The light will flash with the sounds.
2. Press the **LIGHT-UP BUTTON** to hear clock sounds, songs, phrases and a short tune. The light will flash with sounds.
3. Press the **COLOUR BUTTONS** to learn colours and hear phrases in English, German, Spanish and French with fun sounds, phrases and short tunes. The light will flash with sounds.
4. Push the train or let the train run through the station to activate the **FLIP- UP BOARD**. You'll hear fun sounds and greetings in different languages. The light will flash with the sounds.

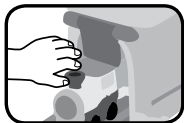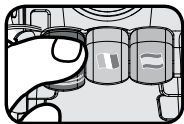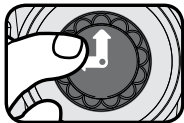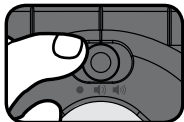

5. If there is no input after approximately 10 seconds, you will hear a sound effect and a reminder that the train is coming. After another 10 seconds of no input, the unit will play a short tune and then go into sleep mode. The unit can be re-activated by pressing any button.

SING-ALONG SONG LYRICS

Sing-Along Song 1

I am a little station, welcoming the train,
Journey here, journey there,
Journey everywhere!
Toot toot chug chug hello train!

Sing-Along Song 2

Chug, Chug, Toot-Toot,
the train is coming!
Hello, hello,
tickets at the ready!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

