

**TREEFU
TOM**

User's Manual

Twist & Learn Watch



vtech[®]

TREE FU TOM™ BBC & FremantleMedia Ltd.

© 2014 VTech
Printed in China
91-002604-027 ^{UK}

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

 
I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

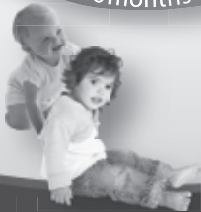

Pre-School

Interactive toys to develop their imagination and encourage language development

 
I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years

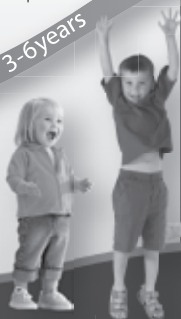

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

 
INTRODUCTION


Thank you for purchasing the VTech® Twist & Learn Watch!


With the Tree Fu Tom Twist & Learn Watch, you can hear the current time at the press of a button! Switch between digital or analogue style displays and personalise your watch by changing the display to one of 10 stylish options. The watch also features a sand glass timer function, an alarm, a stopwatch and three fun games. It's time for fun with Tree Fu Tom and his friends, Tree Fu Go!

PRODUCT FEATURES

PRODUCT LAYOUT AND BUTTONS

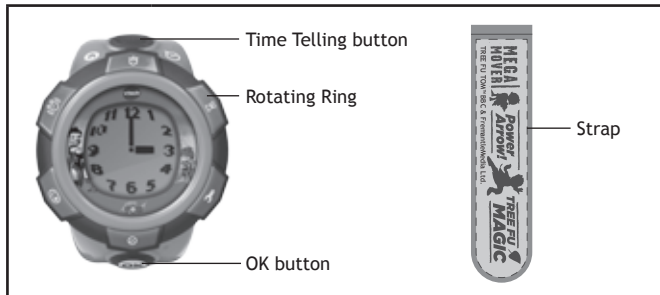

Button name	Description
OK button 	Clock mode: Press the OK button to switch the time display between analogue and digital styles. The backlight will be on automatically when switching the time display. Other modes: Confirm your selection or go to the next setting.

<p>Time Telling button</p> 	<p>Clock mode: Press this button to hear the time said aloud.</p> <p>Other modes: Return to clock mode. If any settings have been changed, they will automatically save before returning to clock mode.</p>
<p>Rotating Ring</p>	<p>Clock mode: Rotate the ring to show the main menu for activity selection.</p> <p>Other modes: Rotate the ring to move through options or adjust the displayed values</p>
<p>OK button + Time Telling button</p>	<p>Mute mode: Hold the OK button and the Time Telling button for a few seconds to activate or deactivate mute mode.</p> <p>When mute mode is activated, no sounds will be heard from the watch.</p> <p>(no alarm, no time telling announcements, etc.)</p>

INCLUDED IN THIS PACKAGE

- One VTech® Twist & Learn Watch
- One Strap
- One User's Manual
- One CR2450 button battery (installed in the watch)

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

Note: Please keep instruction manual as it contains important information.

PRODUCT SPECIFICATIONS

Batteries	1 CR2450 button battery
Time Format	12-hour and 24-hour formats selectable
Time Display Style	Both Digital and Analogue styles available
Operation Temperature	0 - 40 °C

Note: The Twist & Learn Watch is not waterproof, please do not immerse the watch in water.

GETTING STARTED


BATTERY REPLACEMENT

Note: Adult assembly is required for battery installation.

The Twist & Learn Watch uses 1 CR2450 button battery.

- Remove the strap and locate the battery cover on the back of the watch.
- Loosen the screw using a screwdriver and remove the battery cover as illustrated.
- Replace the battery with the new CR2450 button battery and reinstall the battery cover.

Note: When the battery has been changed all settings will be returned to the default factory settings.

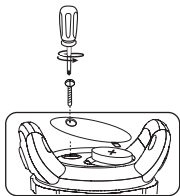

BATTERY NOTICE

- As with all small batteries, the button battery used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a doctor immediately.
- Only use a CR2450 button battery.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The black bar indicates that the product was placed on the market after August 13, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

 
For more information, please visit:

www.recycle-more.co.uk


www.recyclenow.com

ATTACHING THE STRAP

Step 1

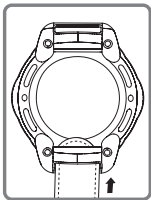

 Step 2

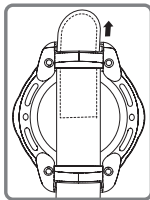

TO BEGIN USING THE WATCH

There are different activities in the watch to choose from; turn the **Rotating Ring** in clock mode to select and press the **OK** button to confirm. When the watch isn't in clock mode, press the **Time Telling** button to go back to this mode.

Note: The images on the **Rotating Ring** do not correspond with the images on the screen.

Turning on for the first time or after changing the battery

If you've just taken the **TWIST & LEARN WATCH** out of the packaging for the first time or have changed the battery, it will prompt you to set the time.

In the time settings screen, turn the **Rotating Ring** to change the value and press the **OK** button to go to the next setting. When you have finished setting the time, press the **Time Telling** button to save and exit.

In clock mode, turn the **Rotating Ring** to show the main menu for activity selection. Turn the ring again to choose your option and press the **OK** button to confirm.



ACTIVITIES

1. Clock

In this mode you can view the current time or change to another activity. Press the **OK** button to switch the time display between the digital and analogue styles. Press the **Time Telling** button to hear the current time said aloud.




Note: The backlight will be on automatically when toggling the time display between digital and analogue styles.

There are 10 different clock displays that you can choose from. For more details, please refer to Setup on page 11.



2. Alarm Clock

Here you can set the alarm to be on or off, the alarm time and alarm tune.


In clock mode, turn the **Rotating Ring** to show the menu. Rotate the ring until Alarm  shows on the screen. Press the **OK** button to enter the alarm settings.

Firstly, rotate the ring to set the alarm on or off. If the alarm is already set to on, press the **OK** button to continue to set the time and alarm tune. Rotate the ring to set the hour, minutes and alarm tunes. Press **OK** to continue to the next setting.

When you have finished setting the alarm, press the **Time Telling** button to save the settings and return to clock mode.

Note: If mute mode is turned on, there will be no audible alarm reminder. Please make sure mute mode is turned off to hear the alarm.

3. Stopwatch

In clock mode, turn the **Rotating Ring** to show the menu. Rotate the ring until Stopwatch  shows on the screen. Press the **OK** button to go into the Stopwatch.


Press the **OK** button to start running the Stopwatch, press the **OK** button again to pause it. Press the **OK** button again to continue from the time you stopped at. Turn the **Rotating Ring** to reset the timer to zero.

Press the **Time Telling** button to stop the Stopwatch and return to clock mode.

Note: The Stopwatch will run up to a maximum time of 59:59.99.



4. Timer

The Sand Glass Timer helps you keep track of time. In clock mode, turn the **Rotating Ring** to show the menu. Rotate the ring until the Sand Glass Timer  shows on the screen, then press the **OK** button. Rotate the ring to adjust the timer to up to 60 minutes.



Press the **OK** button and the sand glass will begin counting down. When time is almost up, a 10 second countdown will be heard, then an alarm will sound to signal time running out.

Note: If the mute function is turned on, there will be no audible alarm reminder.

5. Games

There are three games to choose from, the Matching Game, the Squizzle Game and the Time Matching Game. Turn the **Rotating Ring** and press the **OK** button to select a game.

5.1 Matching Game



Help match Tom and his friends with the objects that belong to them. You will be shown a character randomly then asked to find the object that belongs to them. Turn the **Rotating Ring** to choose an object then press the **OK** button to confirm.



5.2 Squizzle Game



Learn numbers and counting as you play Squizzle with Tom and his friends.

Turn the **Rotating Ring** to choose a character then press the **OK** button to see them throw the Squizzle. Watch and count how many Wingseeds are hit then hear the number announced at the end.



5.3 Time Matching




The Time Matching game helps develop time reading skills.

There are 5 levels in total. For the first 3 levels, a time will be displayed on the analogue style clock face. Choose the matching time on the digital display by rotating the ring then press the **OK** button to confirm.

For the last 2 levels, a digital style display will show a time. Select the matching time on the analogue style clock face by rotating the ring to move the arms to the correct time then press the **OK** button to confirm.



6. Setup

Turn the **Rotating Ring** in clock mode to choose Setup . Press the **OK** button to go into Setup. There are three different options you can choose from - clock style, cuckoo clock and time selection. Turn the **Rotating Ring** then press the **OK** button to select.



6.1 Stylish Clock

Here you can choose from 10 different styles of clock to be displayed in clock mode. Turn the **Rotating Ring** to choose the one you like. Press the **OK** button or the **Time Telling** button to save your selection and return to clock mode.



6.2 Cuckoo Clock

The Cuckoo Clock gives an hourly cuckoo sound and time announcement. If the Cuckoo Clock is turned on, the hourly alert will work from 7:00 am to 7:00 pm.

Rotate the ring to set the cuckoo on or off and press the **OK** button or the **Time Telling** button to save your selection and return to clock mode.

Note: If mute mode is turned on, there will be no audible cuckoo or voice.



6.3 Time Settings

Here you can change the time to either 12 hour or 24 hour modes and adjust the time.

Turn the **Rotating Ring** to change the value and press the **OK** button to go to the next setting. When you have finished, press the **Time Telling** button to save and return to clock mode.



CARE & MAINTENANCE

1. Keep the screen clean by wiping it with a slightly damp cloth.
2. Handle the device carefully.
3. Keep the device out of dusty or dirty areas.
4. Keep the device out of moisture or extreme temperature.
5. Do not disassemble the device. If a problem occurs, remove and replace the batteries to reset the device, or try new batteries.
6. Do not drop the device on a hard surface and do not expose it to or immerse it in water.

TROUBLESHOOTING

Check this section if you experience difficulty with operating the **Twist & Learn Watch**.

Problem	Solution
Your Twist & Learn Watch has stopped working or the LCD does not display.	<ol style="list-style-type: none">1. Ensure that the button battery is installed correctly.2. Replace with a new button battery.
No sound or voice can be heard.	<ol style="list-style-type: none">1. Ensure mute mode is not activated. Hold the OK and Time Telling buttons to deactivate mute mode.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

