

vtech[®]
Baby

User's Manual

Tiny Touch Remote



© 2014 VTech
Printed In China
91-002885-001 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

The **Tiny Touch Remote** by **VTech®** looks just like mum and dad's remote control! It has songs and melodies for sing-along fun and pretend channels to keep your child entertained. Press the buttons for fun channel changing role-play while learning numbers, colours and shapes.

3 LED LIGHTS

10 NUMBER
BUTTONS

MUSIC
BUTTON

CHANNEL
UP/DOWN
BUTTON

RECORD/PLAY BACK
BUTTON

OFF/VOLUME
CONTROL
SWITCH

ROLLER BALL

VOLUME UP/DOWN
BUTTON TO INCREASE/
DECREASE VOLUME



INCLUDED IN THIS PACKAGE

- One VTech® Tiny Touch Remote learning toy
- One user's manual

 
WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

GETTING STARTED



BATTERY INSTALLATION

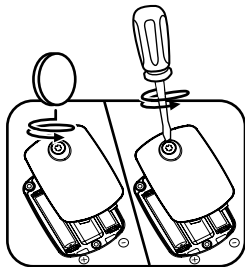1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the **Tiny Touch Remote**. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.

- 
- 
- Do not use damaged batteries.
 - Insert batteries with the correct polarity.
 - Do not short-circuit the battery terminals.
 - Remove exhausted batteries from the toy.
 - Remove batteries during long periods of non-use.
 - Do not dispose of batteries in fire.
 - Do not charge non-rechargeable batteries.
 - Remove rechargeable batteries from the toy before charging (if removable).
 - Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:




www.recycle-more.co.uk

 
www.recyclenow.com



PRODUCT FEATURES

1. OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **OFF/VOLUME CONTROL SWITCH** to the low volume () or high volume () position. To turn the unit **OFF**, slide the **OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

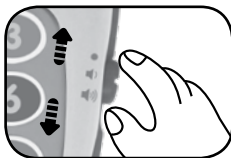

2. SMART REMOTE DESIGN

 
The **Tiny Touch Remote** resembles a modern day remote control. Its different buttons simulate fun activities like changing channels, watching different programs, using a DVD, and more.

3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Tiny Touch Remote** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **OFF/VOLUME CONTROL SWITCH** to the low or high volume position to turn the unit on. You will hear fun sounds and an entertaining sing-along song. The lights will flash along with the sounds.
2. Press the **NUMBER BUTTONS** to hear fun sounds, short tunes, sing-along songs or talking phrases about numbers, colours and pretend channels.

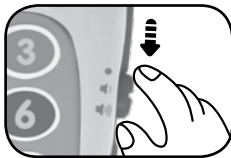




3. Press the **CHANNEL UP/DOWN BUTTON** to hear fun sounds and to change to one of the fun pretend channels. The lights will flash with the sounds.



 4. Press the **VOLUME UP/DOWN BUTTON** to hear fun sounds and to learn about loud volume and quiet volume. The light will flash with the sounds. If the **VOLUME UP/DOWN BUTTON** is pressed while a melody is playing, it will alter the volume of the melody.

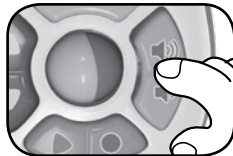


5. Press the **CHANNEL RECORD/PLAY BACK BUTTON** to hear fun sounds and talking phrases, and to learn about colours and shapes.



6. Press the **MUSIC BUTTON** to hear fun sing-along songs and lively melodies. The lights will flash along with the sounds.



 7. Press and roll the **ROLLER BALL** to hear fun sounds. The lights will flash along with the sounds.

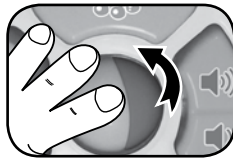



MELODY LIST:

1. Camptown Races
2. My Bonnie Lies Over the Ocean
3. Take Me Out to the Ball Game
4. Clementine
5. I've Been Working on the Railroad

Sing-Along Song Lyrics

Sing-Along Song 1

Gather 'round to pretend
Time to enjoy TV shows with some friends!

Sing-Along Song 2

1-2-3-4-5,
So many fun channels to watch live,
6-7-8-9,
So many to watch, so little time!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com