

vtech[®]

Parent's Guide

3-in-1 Ride with Me Motorbike




91-003840-001 UK

INTRODUCTION

Thank you for purchasing the **3-in-1 Ride with Me Motorbike**.

Hop on the motorbike that's packed with fun and learning! Pretend to visit places in the community while learning about colours with songs and music. Walk, ride and balance with the **3-in-1 Ride with Me Motorbike**.

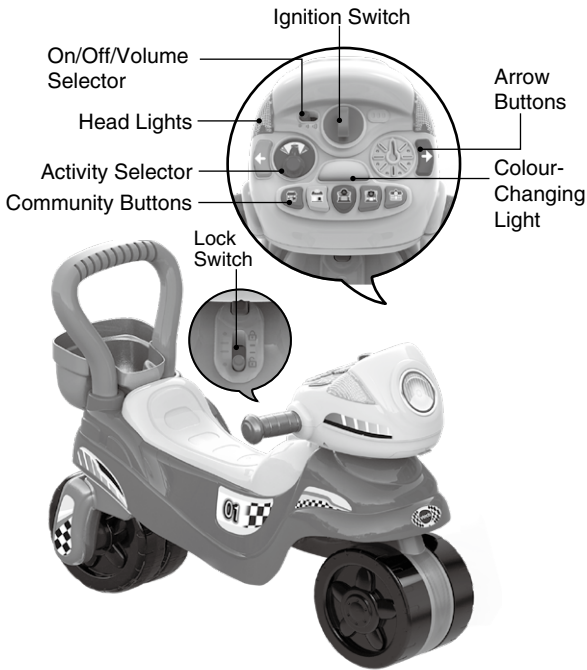


INCLUDED IN THIS PACKAGE

- 3-in-1 Ride with Me Motorbike



- Interactive Dashboard

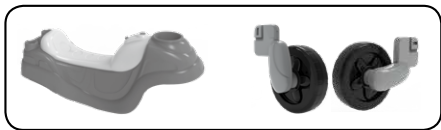

- Vehicle body
- Two back wheels



- Back handle
- Front wheel
- Storage basket




- Label sheet
- Parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this Parent's Guide as it contains important information.

Unlock the Packaging Lock

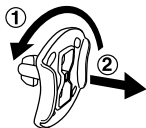

- ① Rotate the packaging lock anticlockwise 90 degrees.
- ② Pull out the packaging lock and discard.

WARNING!

Not to be used by children over 36 months. Insufficient strength. Protective equipment should be worn. 20kg Max. Regularly check for signs of wear or tear on the snap in or locking devices. If damaged do not use until repaired or replaced. Only to be used under the direct supervision of a competent adult.


- This toy should be used in a safe area e.g indoors, in a private garden, on level flat surfaces and away from any hazards such as cars, stairs, water etc.
- Not for use on pavements or in traffic.
- Adult supervision is advised.
- Please help your child to sit properly on the seat and to use the toy correctly.
- Since skill is required this toy should be used with caution to avoid falls or collisions that could cause injury to the user or third parties.

WARNING! Protective equipment should be worn. Not to be used in traffic. 20kg Max. Please wear helmet, gloves, knee pads and elbow pads.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the interactive dashboard and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

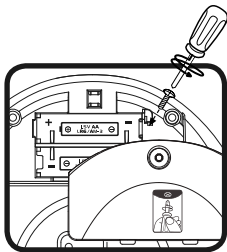

BATTERY NOTICE

- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).

- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:



www.recycle-more.co.uk

www.recyclenow.com

LABEL APPLICATION


Please securely stick the labels to the toy as indicated below:



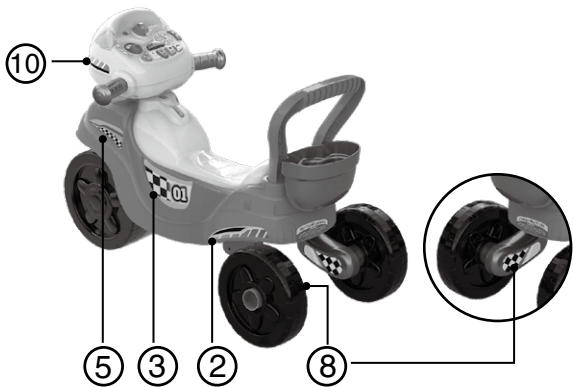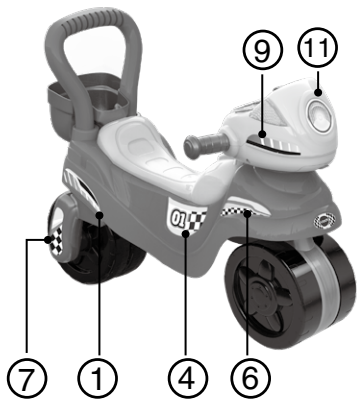

Three Ways to Play and Ride

Use the back handle as a grip for little ones learning to walk. Progress to a three-wheeled motorbike and then to a two-wheeler when they are ready to balance.

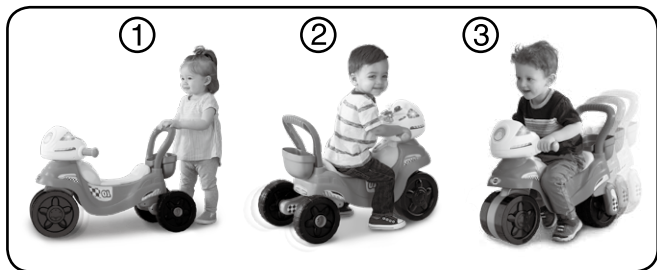


ASSEMBLY INSTRUCTIONS

With the **3-in-1 Ride with Me Motorbike**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.


1. To assemble the front wheel, insert the wheel into the slot on the bottom of the vehicle body. You will hear the pieces snap together when connected properly.




2. Insert the **Interactive Dashboard** into the slot on the top of the vehicle body. You will hear the pieces snap together when connected properly.

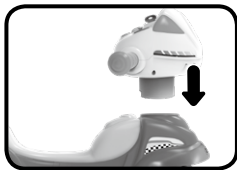

3. To assemble the back wheels in the tricycle position, insert each of the wheels into the slots on the bottom of the vehicle body so the tricycle labels are visible. You will hear the pieces snap together when connected properly.

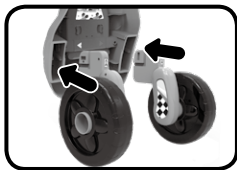


4. To assemble the back wheels in the motorbike position, insert each of the wheels into the slots on the bottom of the vehicle body so the motorbike labels are visible. You will hear the pieces snap together when connected properly.

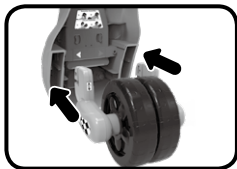


5. To use the motorbike as a push-along walker with the wheels in tricycle position, slide the **Locking Switch** to the locked position so the front wheel does not turn left or right, providing a more stable walker. When using the motorbike as a ride-on toy, slide the **Locking Switch** to the unlocked position.




6. To remove the back wheels, slide the wheel locks inwards to unlock the wheels.

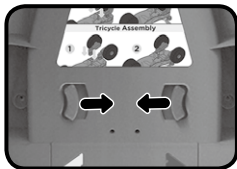

7. Insert the back handle into the two slots on the back of vehicle body. You will hear the pieces snap together when connected properly.

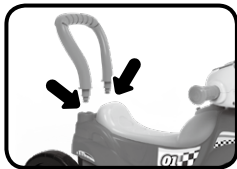

8. Insert the storage basket into the slot between the back handle as illustrated.

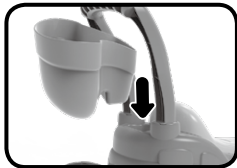


Once you've completed the above steps, you are ready to play!

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume (🔊) or the High volume (🔊) position. You will hear a sound and a phrase. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the Off (🔇) position.

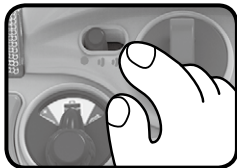

2. Activity Selector

Turn the **Activity Selector** to choose a mode of play. The three modes of play include Learning mode, Adventure mode and Music mode.



3. Automatic Shut-Off

To preserve battery life, the **3-in-1 Ride with Me Motorbike** will automatically shut off after several minutes without input. The unit can be turned on again by adjusting the **Activity Selector** or sliding the **On/Off/Volume Selector** or turning the **Ignition Switch**.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Community Buttons

Press the **Community Buttons** to learn about colours and locations around town in Learning mode. In Adventure mode you will hear a variety of phrases to encourage imaginative play. In Music mode you will hear songs. The lights will flash with the sounds.



2. Ignition Switch

Turn the **Ignition Switch** to hear realistic engine sounds and imaginative phrases. The lights will flash with the sounds.



3. Arrow Buttons

Press the **Arrow Buttons** to learn about colours and hear interactive phrases and melodies. The lights will flash with the sounds.



MELODIES

1. Oh My Darling Clementine
2. Did You Ever See a Lassie?
3. Humpty Dumpty
4. London Bridge Is Falling Down

SONG LYRICS

Song 1

To market, to market,
To buy some fresh fruit.
Apples and oranges
Pears all taste good.

Song 2

Let's go to the grocery store,
The grocery store, the grocery store.
Let's go to the grocery store.
I need to buy some food.

Song 3

A-Tisket, a-tasket,
A letter in my basket.
I zoom around town, I deliver the post,
To all my friends and family.

Song 4

Look at me, I'm going to town,
Riding on my motorbike.
First stop is the post office,
Where I'll post a letter.

Song 5

Jump on to the fire engine,
Don't forget to grab the hose,
Spray the water on the fire,
Out it goes!

Song 6

Hurry, hurry, hurry, hurry!
Ding, ding, ding! Ding, ding, ding!
Someone needs our help,
Someone needs our help!
Off we go! Off We go!

Song 7

I'm zooming down the road,
On my motorbike.
Hi-ho, the derry-o, off to work I go!
Someone needs my help,
I'm rushing to the scene,
Hi-ho, the derry-o, I am here to help!

Song 8

Oh, I jumped into my police car,
I'm zooming down the road.
Have my siren on and my lights flashing,
I'm going to save the day.

Song 9

A-B-C-D-E-F-G,
H-I-J-K-L-M-N-O-P,
Q-R-S, T-U-V,
W-X-Y and Z.

Song 10

1-2-3-4-5,
6-7 and 8,
9-10, let's count again.
I love to learn each day!

Song 11

Stop, stop, stop!
Go, go, go!
Rev my engine,
Zoom, zoom, zoom, zoom.
Off I go!

Song 12

Cruising around on my motorbike,
Driving through the town.
I shout hello, I wave good-bye,
To everyone I know!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty / Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



CLASS 1
LED PRODUCT

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2020 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003840-001 