



Instruction Manual

Stitch Learning Watch



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Stitch Learning Watch**. This full-function watch includes ten digital clock faces, time tools and four games. Hear Stitch say fun phrases and follow the instructions to play learning games with Stitch and friends.

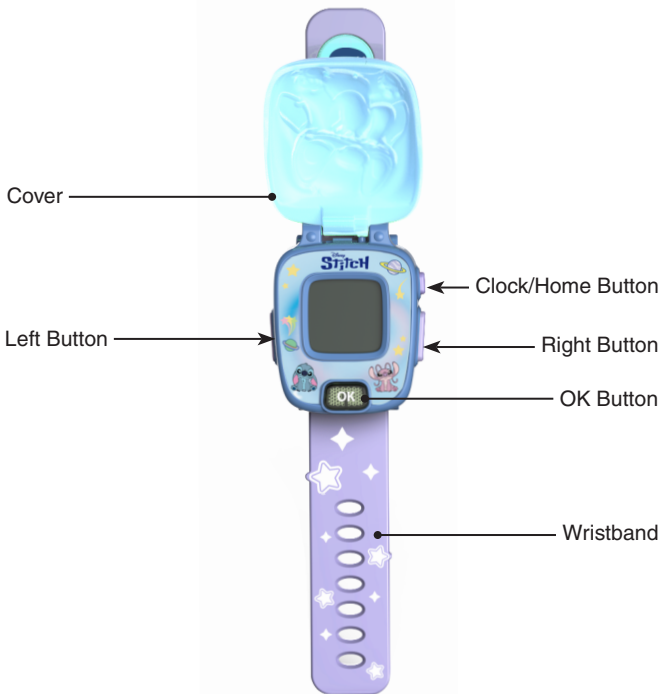

INCLUDED IN THE PACKAGE

- One **Stitch Learning Watch**
- One CR2450 battery
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

PRODUCT SPECIFICATIONS

Battery	One CR2450 battery
Time Format	12h or 24h
Display	Digital
Optimum Operating Temperature	0°C - 40°C (32°F - 104°F)

Important Note

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

WARNING

People with very sensitive skin may notice some irritation after wearing the **Stitch Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed. Take the watch off if it's feeling uncomfortable, and keep wrist and band clean and dry. In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling or other irritation, you may want to consult a doctor before wearing the watch again.

INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

POWER SOURCE

The **VTech® Stitch Learning Watch** operates using a CR2450 battery. The CR2450 battery included with the product is for demo purposes only.



Read operator manual.



WARNING!

Contains coin battery.

A coin battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body. Individual battery is hazardous. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Australia

If you think batteries might have been swallowed or placed inside any part of the body, immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice.



- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



If the battery compartment does not close securely, stop using the product and keep it away from children.

If a battery has been ingested, or there is a possibility one might have been ingested, please seek medical attention and inform the medical authorities that you suspect battery ingestion.

It's not always clear when a child has swallowed a button battery, as there are no specific symptoms. However, they might:

- cough, gag, or drool;

- seem to have a stomach bug or virus;
- vomit;
- complain of pain in their stomach, chest, or throat;
- appear tired or sluggish;
- lose their appetite.

 
Since the signs aren't obvious, it's important to keep a close eye on loose, used, or spare button batteries in your home, as well as the products that contain them.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

NOTE: For best performance, remove the factory-installed battery from the **VTech® Stitch Learning Watch** and use a new battery.

1. Make sure the watch cover is closed.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Use the screwdriver to push the metal piece according to the diagram. Remove the battery when one end of the battery pops up.
4. Follow the diagram inside the battery box to position one new 3V CR2450 battery and then press it into the battery case.
5. Replace the battery cover and tighten the screw to secure.

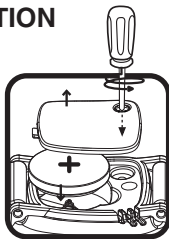

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

EXIT TRY-ME MODE

When you use the watch for the first time, you must unlock it from Try-Me mode to play. To unlock from Try-Me mode, open the **Cover**, and press the **Left + Right + OK Buttons** together for approximately five seconds. You will then hear three beeps to indicate you have exited Try-Me mode and the watch will function as normal.

Press any button to activate the watch and set the time. Press the **Left or Right Button** to select, then press the **OK Button** to confirm and move to the next option. A tick icon will be displayed when the setting is complete.

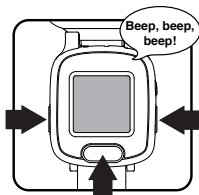

Note:

- When the battery level is low  , most functions on the watch may not be activated, except for the clock display. It is recommended to install a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

PRODUCT FEATURES

1. Cover

Open the **Cover** to view the time. When the **Cover** is closed, press the bottom of the **Cover** to activate Stitch's voice and light effects.

2. Left/Right Buttons

Use the **Left or Right Button** to select an activity or option.

3. OK Button

Press the **OK Button** to confirm a selection and move to the next option in different activities.

4. Clock/Home Button

Press the **Clock/Home Button** to return to the clock from any other function or to select other activities.

4.1 Clock Display

When the **Clock/Home Button** is pressed, the time will be displayed. Press the **Left** or **Right Button** to display the Home Menu.

4.2 Home Menu

There are five activities in the **Home Menu** to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Button** to scroll through the menu options.
- Press the **OK Button** to enter the chosen activity.

5. Alarm Clock

- Press the **Left** or **Right Button** to select the time and choose between three alarm tones.
- Press the **OK Button** to confirm and move to the next setting.
- Press the **Clock/Home Button** to automatically save the current setting.



6. Stopwatch

- Press the **OK Button** to start the Stopwatch. Press again to stop.
- When the Stopwatch is stopped, you can press the **Left** or **Right Button** to reset.



7. Timer

- Press the **Left** or **Right Button** to change the time.
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current setting.
- Press the **OK Button** to confirm the Timer duration and the countdown will start immediately.
- While the Timer is running, press the **OK Button** to pause/resume or press the **Left** or **Right Button** to reset.



8. Settings

In the **Settings** menu, press the **Left** or **Right Button** to scroll through the various options:

8.1. Setting the Time

- Press the **Left** or **Right Button** to change the options (the AM/PM setting is only applicable in a 12-hour time format).
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current setting.



8.2. Clock Face

- Press the **Left** or **Right Button** to select from ten different clock faces.
- Press the **OK Button** or **Clock/Home Button** to confirm and save the setting.



8.3. Cuckoo Clock

- Press the **Left** or **Right Button** to turn the Cuckoo Clock on or off.
- Press the **OK Button** or **Clock/Home Button** to confirm and save the setting.
- Please note that when the Cuckoo Clock is activated, the watch will chime at the top of each hour between 7 AM and 7 PM, unless a game is currently in progress.



 
9. Automatic Shut-Off

To preserve battery life, the **Stitch Learning Watch** will automatically shut **Off** and switch to clock mode after approximately 30 seconds without input. The unit can be turned **On** again by pressing any button or opening the cover.

Note:

The **Stitch Learning Watch** will not automatically power **Off** when the Stopwatch is running.

The unit will automatically turn **Off** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.

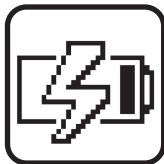


ACTIVITIES

1. Games

In the Games menu, press the **Left** or **Right Button** to scroll through the different learning game options:

1.1 Picture Puzzle

Pictures of Stitch and friends are mixed up. Use the **Left** or **Right Buttons** to find the correct pieces, then press the **OK Button** to select them and solve the puzzles.

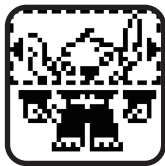 

1.2 Flowers for Angel

Stitch would like to pick some flowers for Angel. Help Stitch pick flowers using the **Left** or **Right Buttons** to move and the **OK Button** to pick. Try to avoid the butterflies!



1.3 Thermo Detection

Jumba is using his thermo detector to see who's hiding! Use the **Left** and **Right Buttons** to match the silhouette to the correct character pose, then press the **OK Button** to confirm.



1.4. Chef Stitch

Help Chef Stitch make smoothies by following the recipe. Use the **Left** and **Right Buttons** to choose the correct amounts of each ingredient and set the time, then press the **OK Button** to confirm.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

