


vtech[®]

Parent's Guide

Rock & Ride Unicorn



91-003259-024 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Rock & Ride Unicorn**.

The **Rock & Ride Unicorn** easily transforms from a rocker to a ride-on. The two chunky handles are easy for toddlers to grasp when riding on the Unicorn. Press one of the two light up buttons to learn about colours and to hear playful songs & imaginative phrases. Rocking or riding on the Unicorn triggers the motion sensor which responds with fun melodies and sounds.

 
2 LIGHT UP
BUTTONS

TURNING DISC

2 HANDLES

ON/OFF/MODE
SWITCH

VOLUME
CONTROL
SWITCH

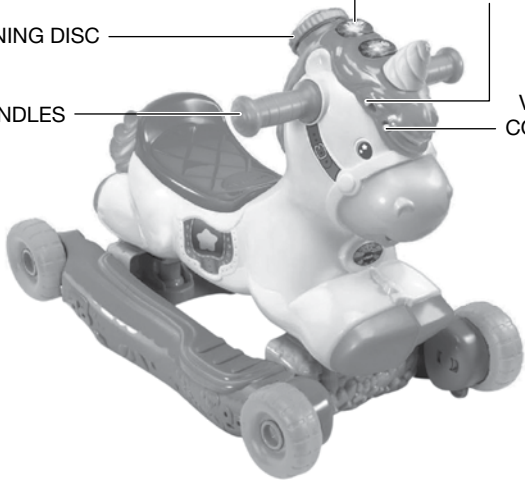

INCLUDED IN THIS PACKAGE



One **Rock & Ride Unicorn**



Four wheels



Two rockers



One front link bracket



Two handles



One back link bracket



8 small screws



Two plastic screws

- One parent's guide
- One sheet of labels

 
WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

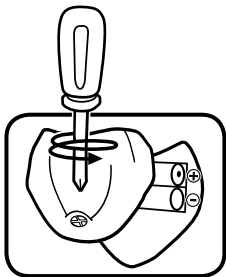

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.

- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

WARNING!

 
With the **VTech® Rock & Ride Unicorn** safety comes first:

Adult assembly required. Protective equipment should be worn whilst riding on the Unicorn. Please wear a helmet, gloves, knee pads and elbow pads. This toy should not be used near traffic or on pathways. The maximum weight limit is 20kg. Children over this weight should not use the ride on. Not to be used by children over 36 months. Insufficient strength. This product includes electronics and is not waterproof.

This package contains 8 small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.


- This toy should be used in a safe area e.g. indoors, in a private garden, on level flat surfaces and away from any hazards such as cars, stairs, water etc.
- Not for use on pavements or near traffic.
- Adult supervision is advised.
- Regularly check if the 8 screws are securely tightened to link the brackets and rockers.

Please stick the labels to the Unicorn securely as indicated below:


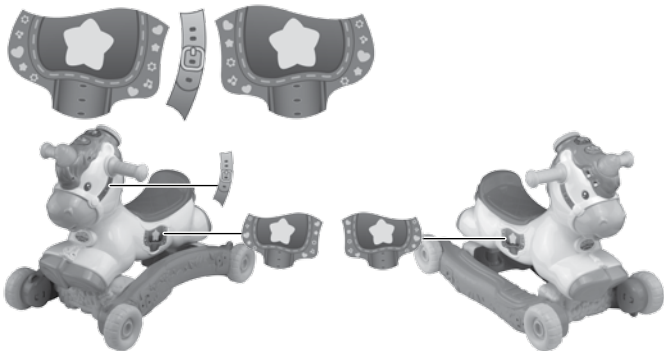


ASSEMBLY INSTRUCTIONS

 
1. Insert the 4 wheels into the two rockers as shown. You will hear the wheels click into place to indicate they are attached securely.

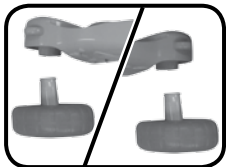

  
2. Insert the front link bracket and the back link bracket onto the inside of the rockers. Secure the brackets to the rockers with the small screws provided.

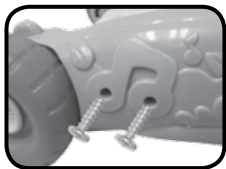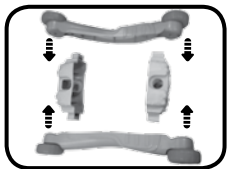

 3. Insert the **Rock & Ride Unicorn** onto the support brackets as shown.

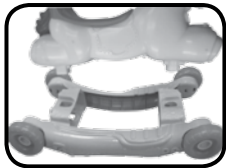

 4. Insert the two plastic screws into the holes in the front link and back link brackets. Turn the screws clockwise to secure. You will hear the locks click into place to indicate they are attached securely.

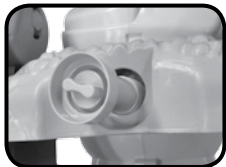

5. Insert the two handles into the side of the Unicorn's head. You will hear the handles click into place to indicate the handles are attached securely.



TRANSFORM FROM ROCKER TO RIDE-ON MODE

 
6. To change the Unicorn from rocker mode to ride-on mode, press and hold the lock next to the plastic screws and turn the screws anticlockwise. Remove the rocker panel and turn it over so the wheels are on the ground. Re-insert the two plastic screws into the holes in the front link and back link brackets. Turn the screws clockwise to secure.



PRODUCT FEATURES


1. ON/OFF/MODE SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SWITCH** to the **LEARNING & MUSIC MODE** 🎵 or the **ADVENTURE MODE** 🔍 position. To turn the unit **OFF**, slide the **ON/OFF/MODE SWITCH** to the **OFF** (●) position.

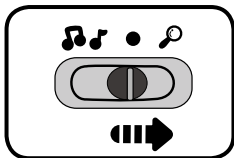

2. VOLUME CONTROL SWITCH

 To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or the **HIGH VOLUME** (🔊) position.

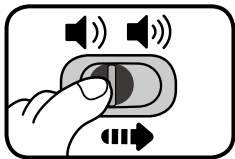


3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Rock & Ride Unicorn** will automatically shut-off after approximately 65 seconds without input. The unit can be turned on again by pressing any button, or by turning the disc.

Note: If the unit repeatedly shuts off quickly, we suggest changing the batteries.

ACTIVITIES

 1. Slide the **ON/OFF/MODE SWITCH** to turn the unit on. You will hear a playful song and a friendly phrase. The lights will flash with the sounds.

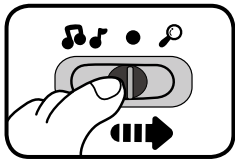

2. Press the **LIGHT UP BUTTONS** to learn about colours and to hear fun songs & music in Learning & Music Mode. In Adventure Mode you will hear playful phrases, sounds and songs. When a melody is playing, press the **LIGHT UP BUTTONS** to play the melody one note at a time. The lights and horn will flash with the sounds.



3. Spin the **TURNING DISC** to hear fun sounds and short tunes in Learning & Music Mode and Adventure Mode. The lights and horn will flash with the sounds.



4. Rock or ride the Unicorn to activate the **MOTION SENSOR**. In Learning & Music Mode you will hear playful melodies. In Adventure Mode you will hear a variety of fun sounds. The lights and horn will flash with the sounds. The faster you ride, the faster the lights will flash.

MELODY LIST

1. Bicycle Built for Two
2. A-Ticket, A-Tasket
3. Little Miss Muffet
4. Roses Are Red
5. Beautiful Dreamer
6. All The Pretty Little Horses
7. Little Robin Redbreast
8. Riddle Song
9. White Coral Bells
10. Ring Around the Rosie

SING-ALONG SONG LYRICS

SONG 1

I'm a beautiful Unicorn with a gold horn, shining bright.
Colourful mane and tail, like a gorgeous rainbow!

SONG 2

How amazing our journey was.
Riding to the end of the rainbow.
On our way to the mystery wonderland!

SONG 3

How amazing our journey was.
Flying in the blue clear sky.
With beautiful colours everywhere.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 03306780149 (from UK) or +44 3306780149 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003259-024 