

Parent's Guide



Flare the Tflex



91-003971-001 (4)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

vtech Baby

stimulate their interest

in different textures, sounds and colours

...responding to colours,

sounds and textures

...understanding cause

...learning to touch, reach,

grasp, sit-up, crawl and

Toys that will

lam...

and effect

toddle






To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Time for some roaring fun with **Switch & Go Dinos® Flare the T-Rex**. Switch this ferocious T-Rex into a powerful Race Car and back again in just a few simple steps. 30+ sounds and phrases bring the action to life in your very own dino universe.

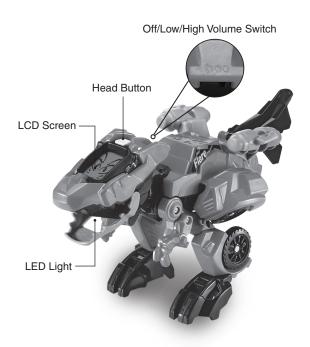

INCLUDED IN THIS PACKAGE

- SWITCH & GO DINOS® Flare the T-Rex
- · Parent's Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw. Then, remove the cover.
- 3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 5. Replace the battery cover and tighten the screw to secure.



IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On** or to adjust the volume, slide the switch to the Low (p or High Volume (p position. To turn the unit **Off**, slide the switch to the Off **O** position.



2. Head Button

Press the **Head Button** to hear fun phrases and cool dinosaur sounds in Dino mode. In Vehicle mode, press the **Head Button** to hear fun phrases and great vehicle sounds. The light projection will show with the response.



3. LCD Screen

The **LCD Screen** shows dino eye animations in Dino mode and shows driver animations in Vehicle mode.



4. LED Lights


The **LED Lights** flash along with the sounds in Dino mode and Vehicle mode.




5. Automatic Shut-off

To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. Flare the T-Rex can be woken up again by pressing the Head Button or by switching between Dino and Vehicle modes. Flare the T-Rex will also automatically turn off when battery power is very low.


SWITCHING FLARE THE T-REX

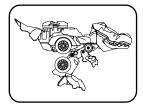


1. Dino mode.

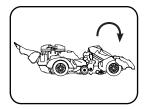

3. Flip down the dino's feet.

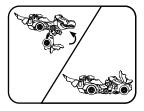

2. Push the legs forward and up toward the dino's head.

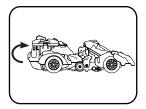

4. Flip the dino's tail down. The unit is now in Vehicle mode.

NOTE

To switch the vehicle back into a dinosaur, follow the above steps in reverse order.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play with again.
- 5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services
Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

