Quick Start Guide

3-in-1 Mow and Grow Tractor





The full version of the Manual is available online through the following links or by scanning the QR code.

VT-UK

For UK

vtech.co.uk/manuals

VT-AUS

For AUS/NZ

vtech.com.au/support/product_manuals

© 2025 VTech. All rights reserved. **Printed in China.**


91-004718-027 AUS

INCLUDED IN THIS PACKAGE


Toy Driver




Bonnet

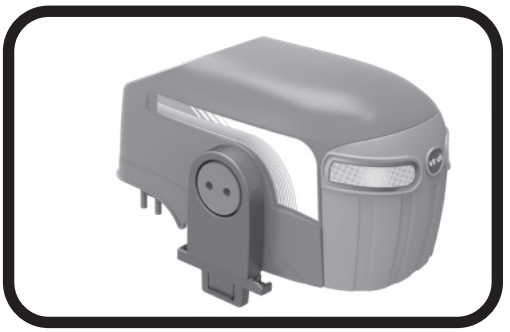


Seat with Mower Handle

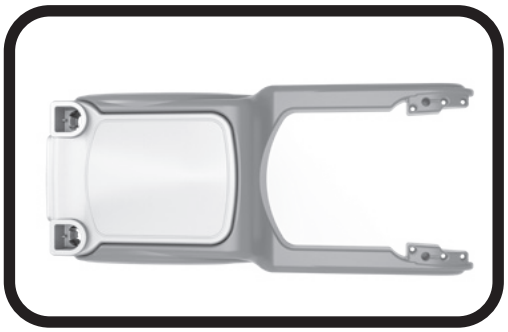


Front Wheel Bracket

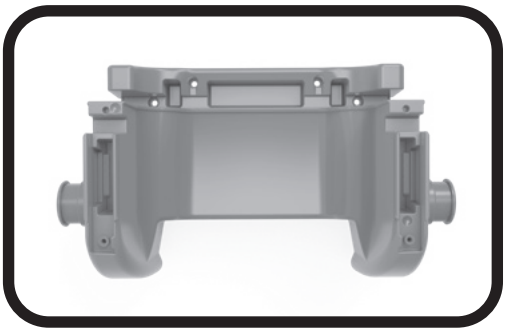


Tractor Base

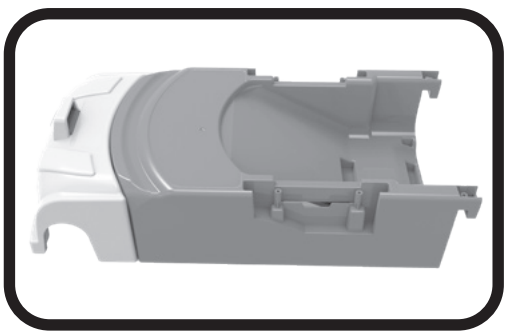

Engine

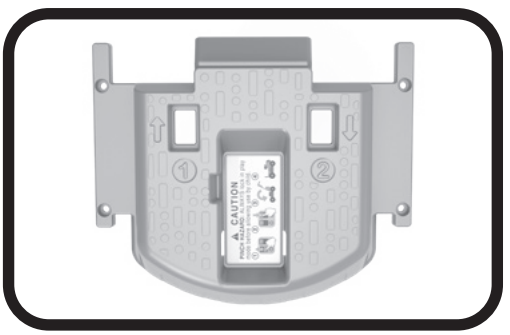


Rear Wheel Bracket

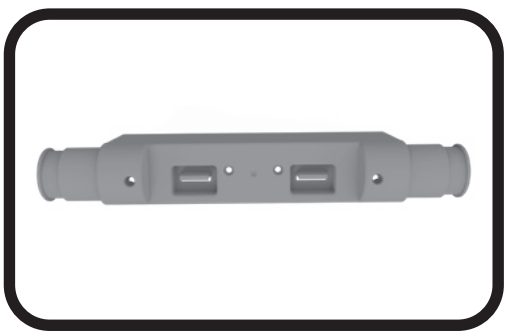


Backrest




Left/Right Foot Rest

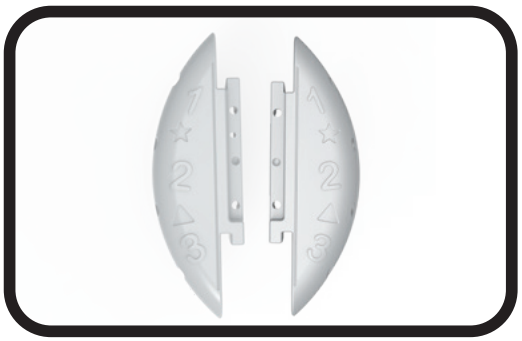

Engine Support

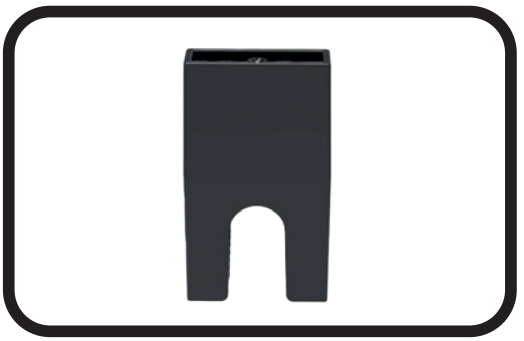


Exhaust Pipe

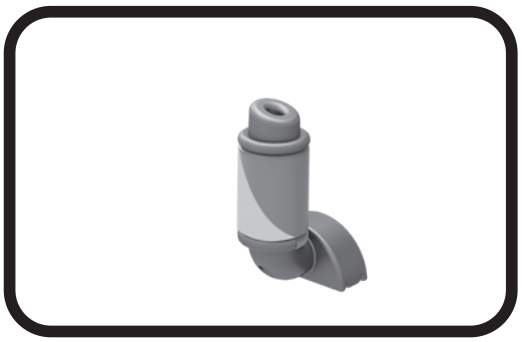


2 Small Front Wheels




20 Screws

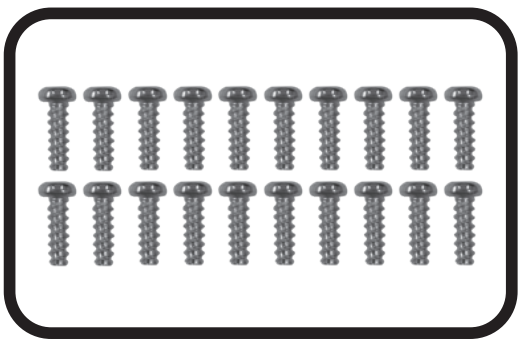


2 Large Rear Wheels

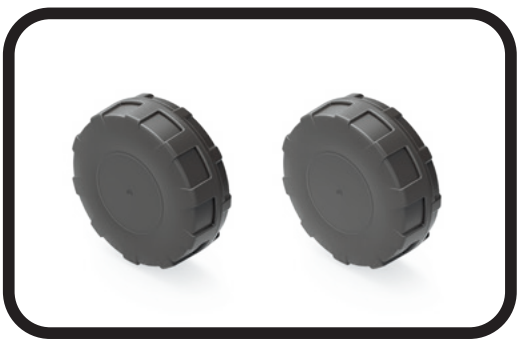

2 Screws (For Stabiliser)

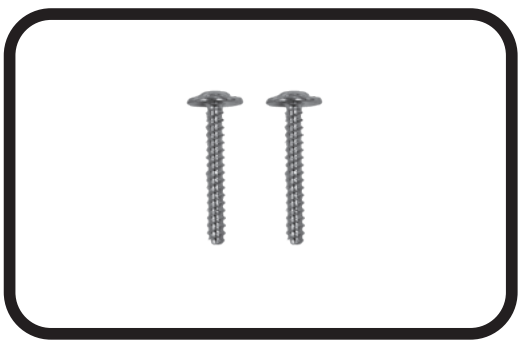

Stabiliser

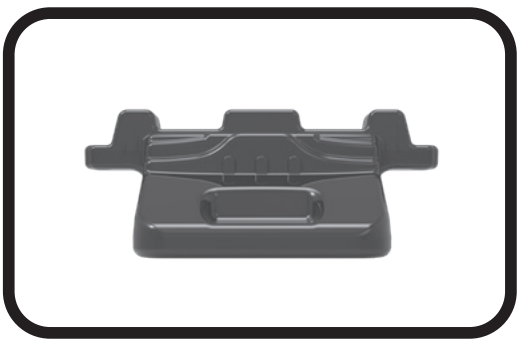

1 Label Sheet



Quick Start Guide



WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this Quick Start Guide as it contains important information.

⚠ CAUTION:

Adult assembly required. This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.

⚠ CAUTION

PINCH HAZARD:

- ALWAYS lock in play mode before allowing use by child.

⚠ WARNING: FALL HAZARD

For your child's safety, please make sure they only ride in the seated position shown on the box. Please do not ride sitting backwards or in any other way.

IMPORTANT:

- The maximum weight limit is 20 kg. Not intended for children older than 36 months.
- Use with adult supervision and KEEP CHILD AWAY from real tractors and lawnmowers.
- Always inspect before use and STOP USING if signs of excessive wear or breakage.

⚠ WARNING:

1. Use this toy on a flat surface only. Do not use on steps or inclines where toy could roll away.
2. Please make sure child wears shoes while using the tractor.
3. This is a toy; do not use as a stroller.


NOTE:

- No modifications other than those in accordance with the instructions for use shall be made.
- Self-locking nuts and other self-locking fixings can lose effectiveness after disassembly/reassembly.
- Regular inspection, screw tightening, and replacement of wheels, screws, and connecting parts will maintain toy safety.
- Perform inspection and maintenance once a month, or after heavy use.

⚠ WARNING:

- This toy should be used in a safe area e.g. indoors, in a private garden, on level flat surfaces and away from any hazards such as cars, stairs, water etc.
- Not for use on pavements or in traffic.
- Adult supervision of young children is recommended.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

Unlock the Packaging Locks:

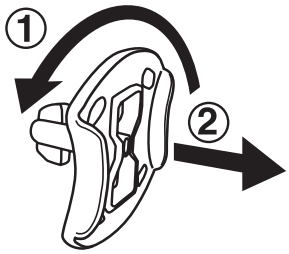

① Turn the packaging locks counterclockwise several times.

② Pull out and discard the packaging locks.


INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

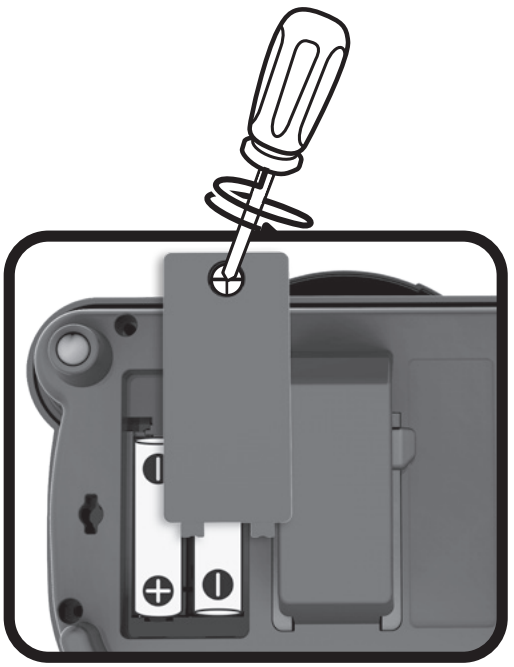

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 1.5V AA/LR6 batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle


www.vtech.com.au/sustainability


* Visit www.recyclenow.com to see a list of collection points near you.


ACTIVATING NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. Once the toy is assembled, attach the **Toy Driver** to the top of the unit. Turn the **Off/Low/High Volume Switch** to start, you will then hear three short “beeps”.



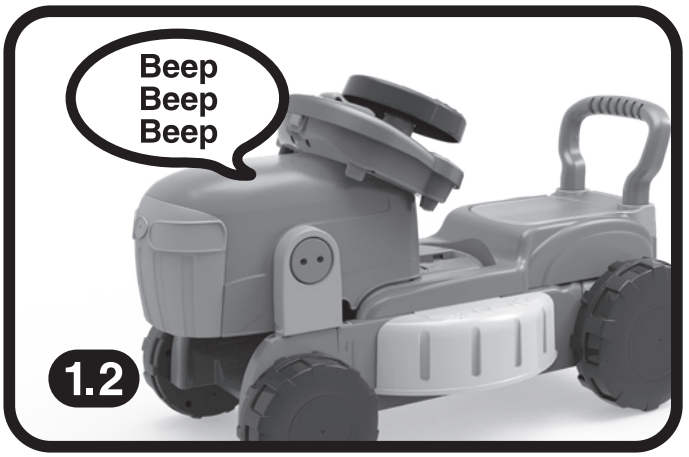

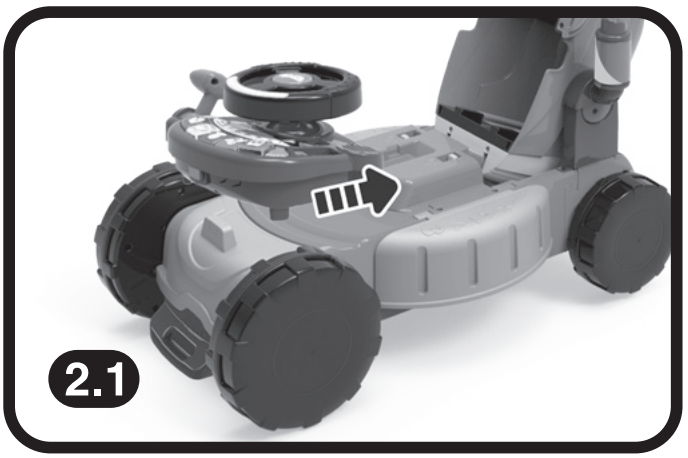

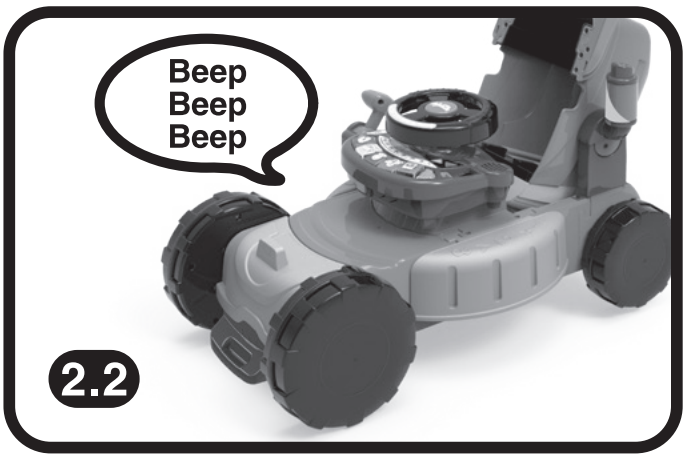


MODES

Driver
12-36 months



Tractor
12-36 months

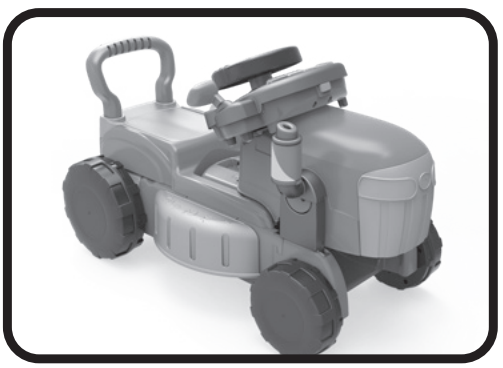


Mower
24-36 months




Mower mode is suitable for children aged 24 months and up.It is not intended for use as a walker.


TRACTOR ASSEMBLY INSTRUCTIONS

1. Insert the left and right foot rest into the **Tractor Base.**

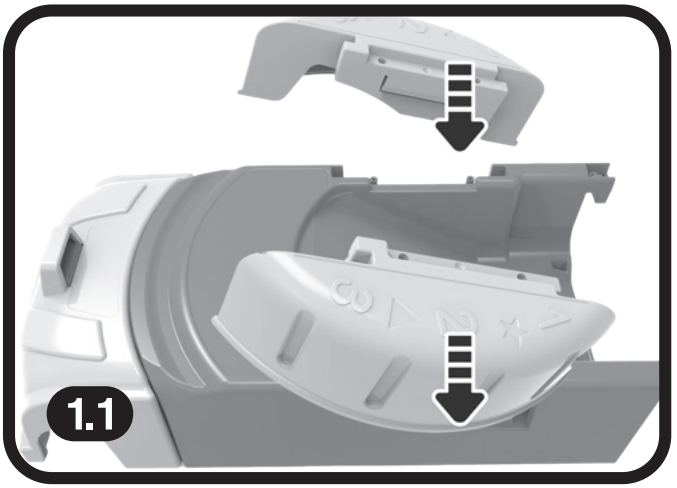


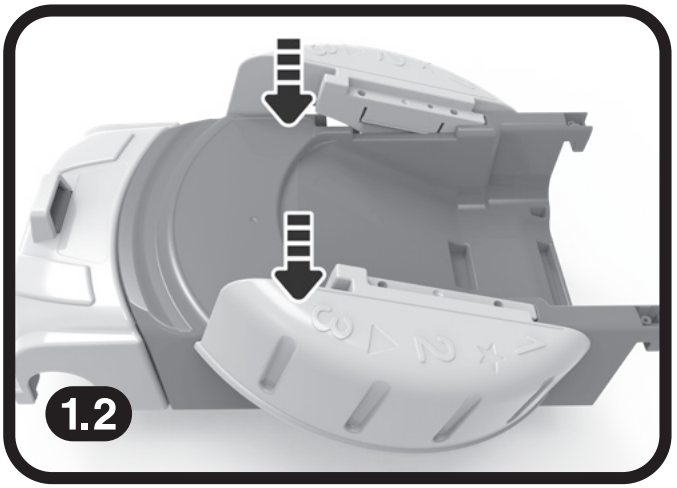


2. Insert the **Engine Support** into the slot in the **Tractor Base**.

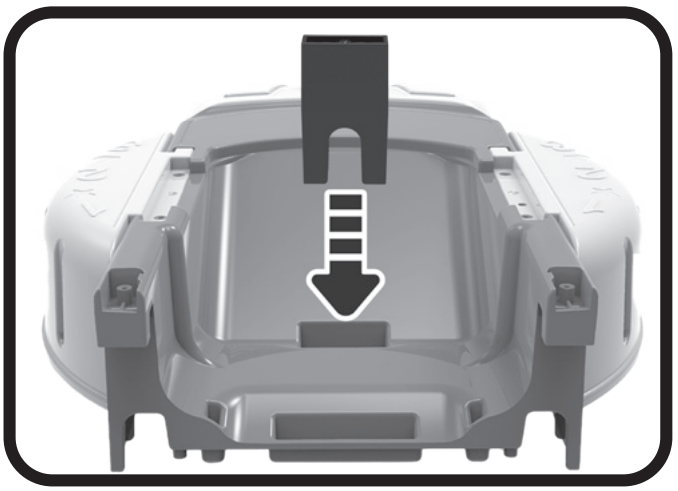

3. Place the **Engine** onto the **Engine Support**. Secure with **4 Screws**.

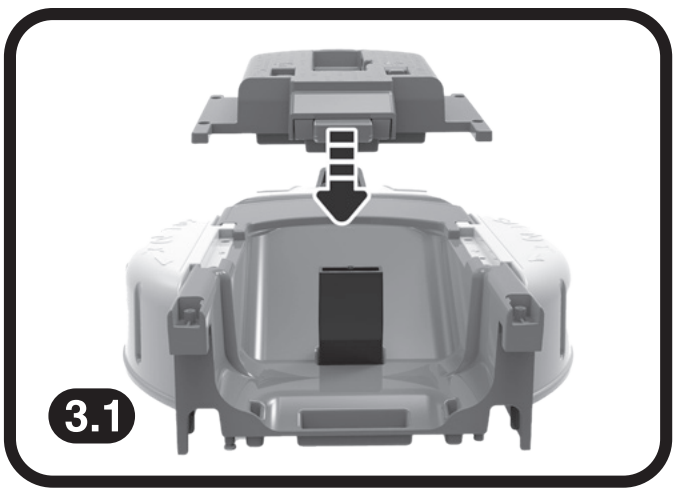

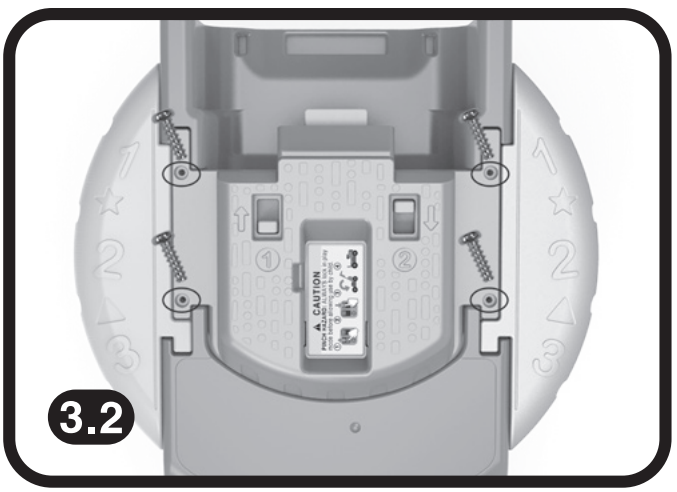





Back Wheels

4


5. Align the slots on the **Rear Wheel Bracket** and insert into the end of the **Tractor Base**.

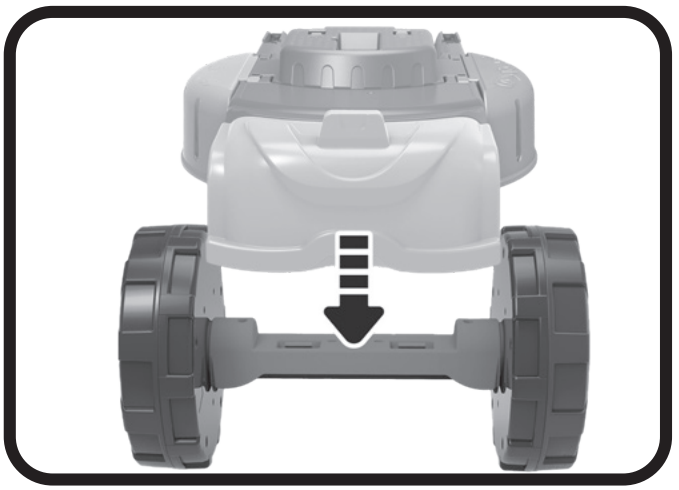


6. Place the **Tractor Base** onto the **Front Wheel Bracket**.

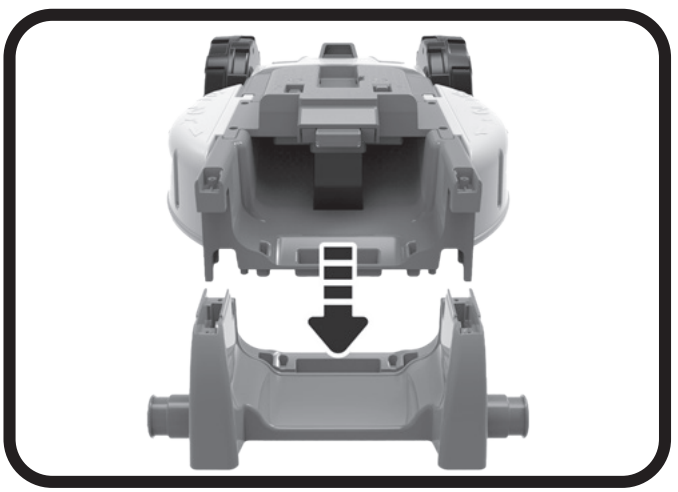



7. Turn the unit upside down and secure with **4 Screws**.

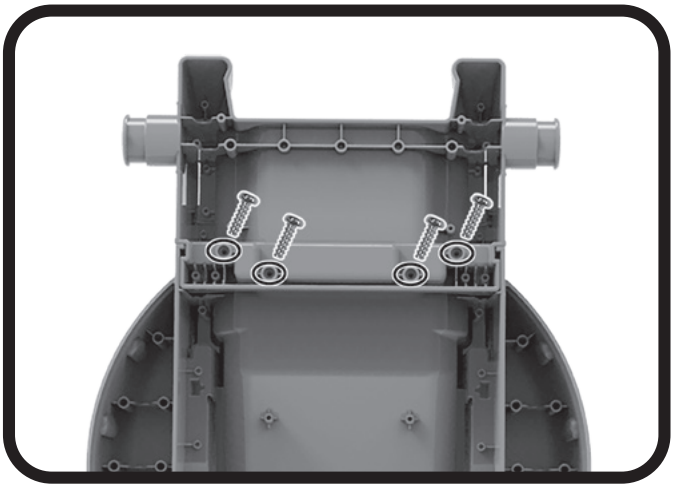

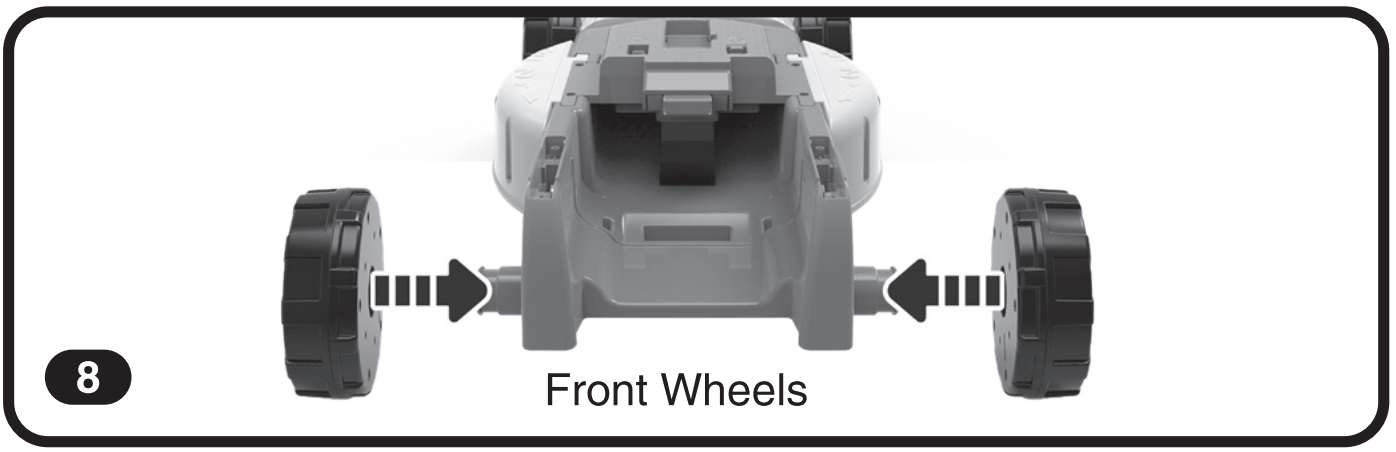



9. Insert the **Seat with Mower Handle** into both sides of the **Engine Hood**. Then flip the unit upside down and secure with **8 Screws**.

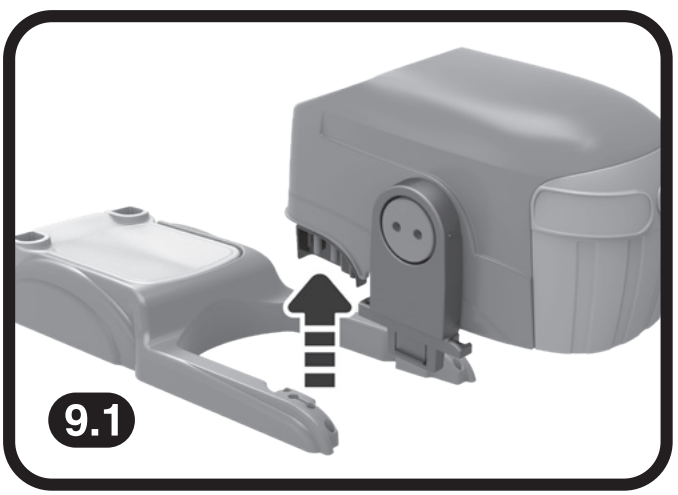

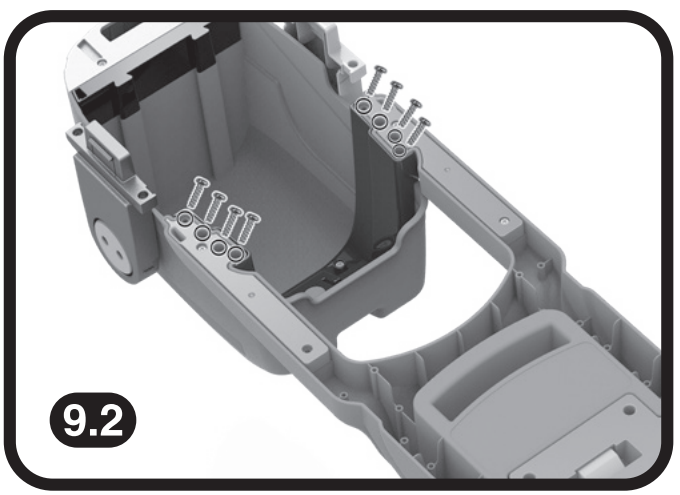


10. Place the **Bonnet** with the **Seat** onto the **Tractor Base.** Secure with **4 Screws.**

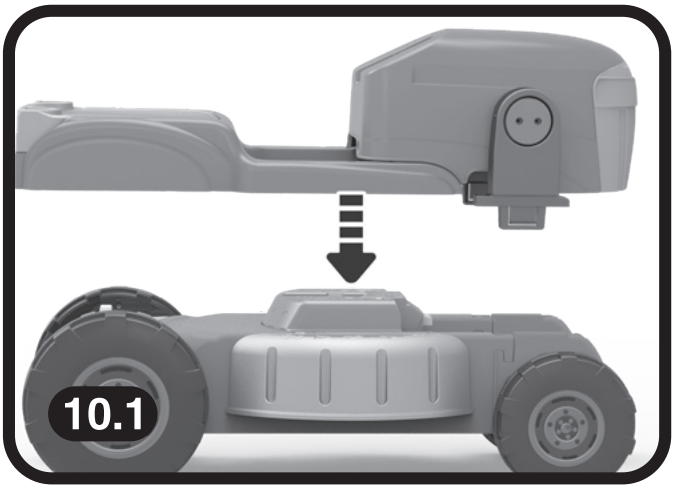

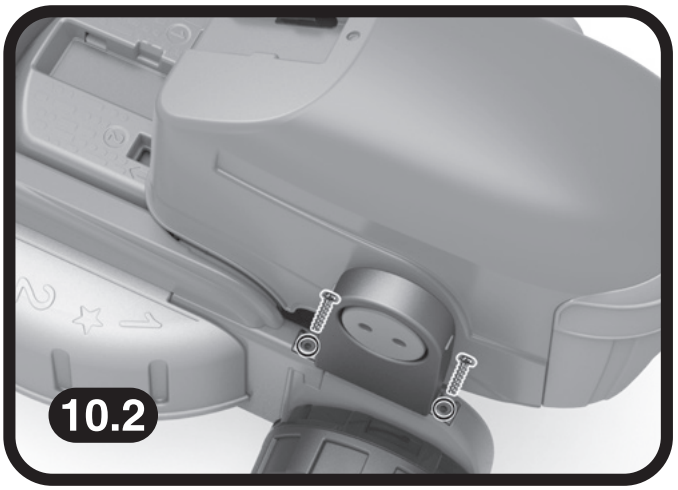





11. Turn the unit upside down and attach the **Stabiliser** to the bottom using two **screws**.

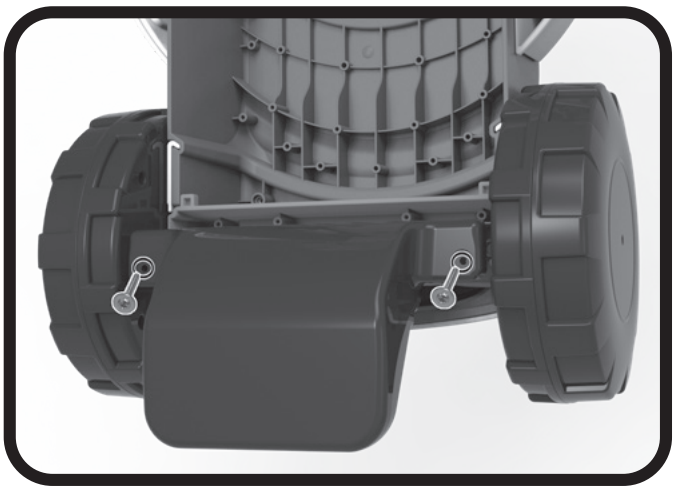


12. Insert the **Backrest** into the **Tractor Base** (it will click in place once fully inserted)**.**

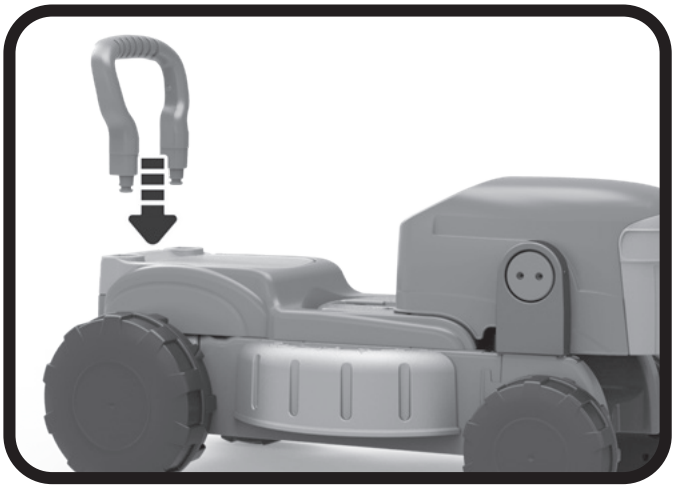

13. Insert the **Exhaust Pipe** onto the side of the **Bonnet.**

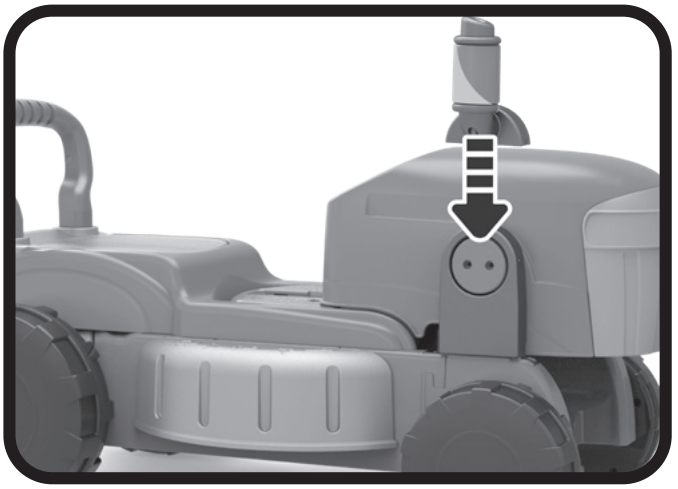



14. Slide the **Toy Driver** up onto the **Bonnet**.

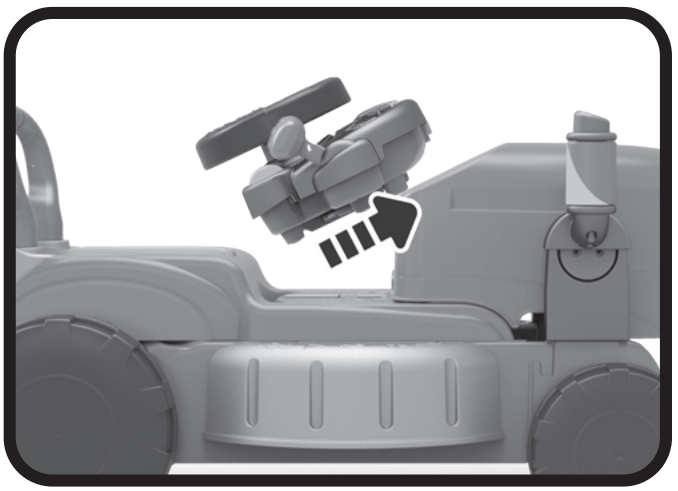



Transforming from Tractor to Mower


Press down the green button and slide the **Toy Driver** off.

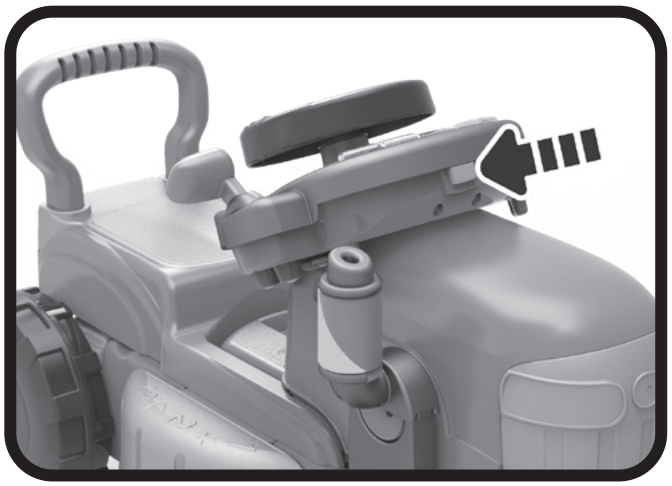

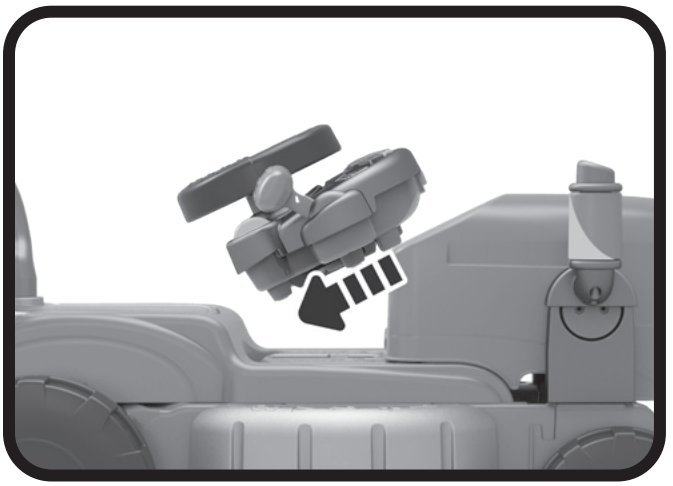

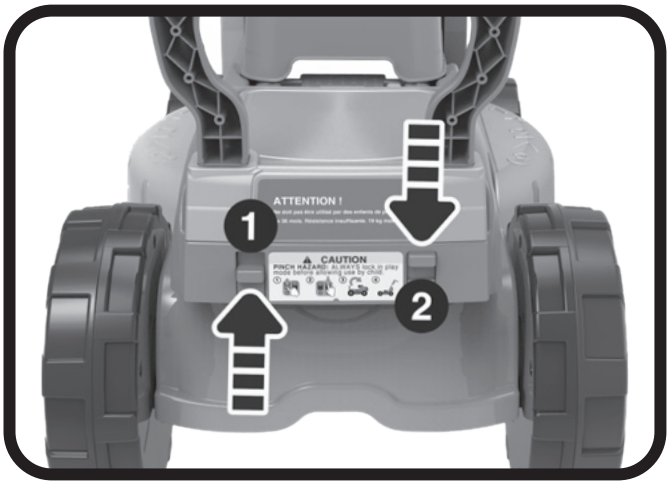

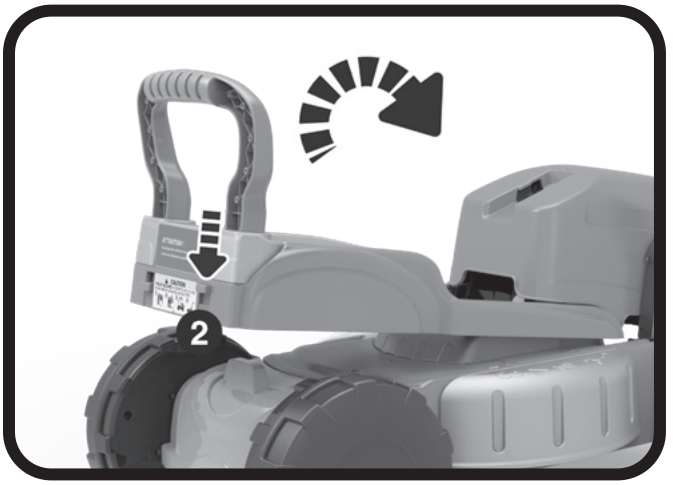


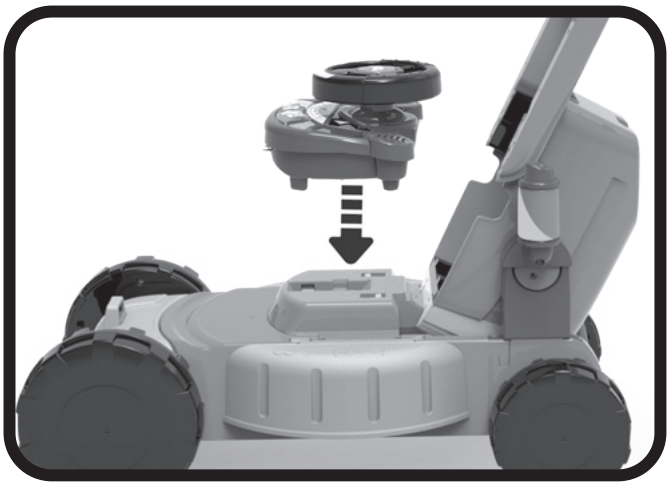





Transforming from Mower to Tractor

1. Press down the green button and lift the **Toy Driver** up.

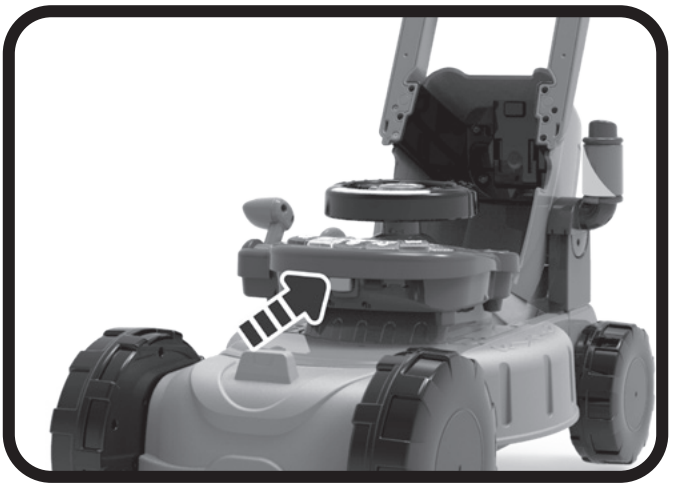

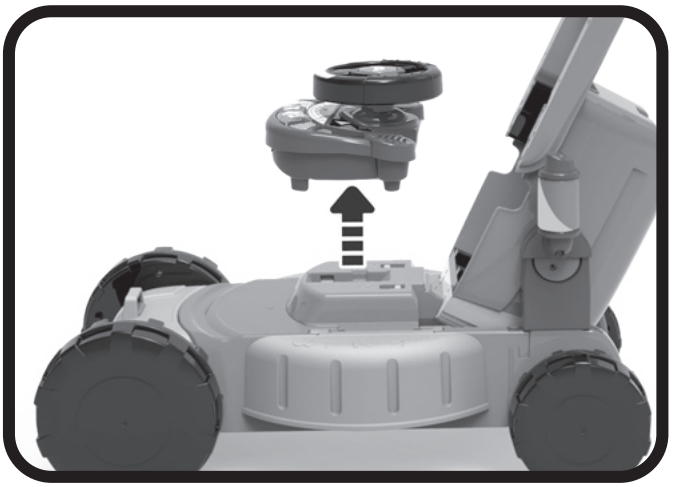



2. Slide the buttons as shown to release the handle. Lower the handle.

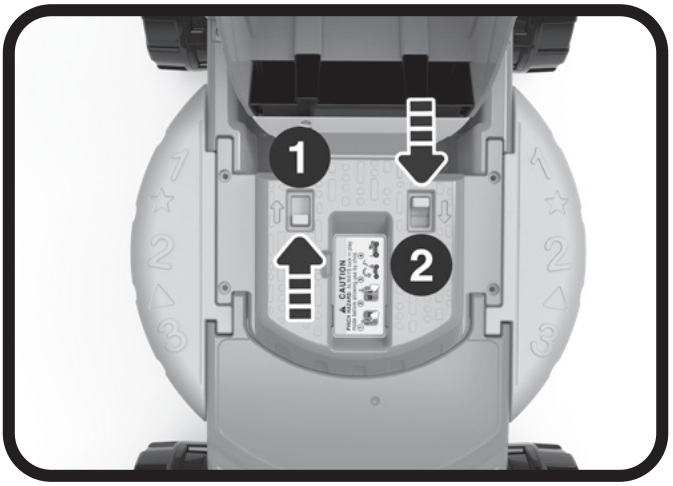




3. Slide the **Toy Driver** onto the **Bonnet**.

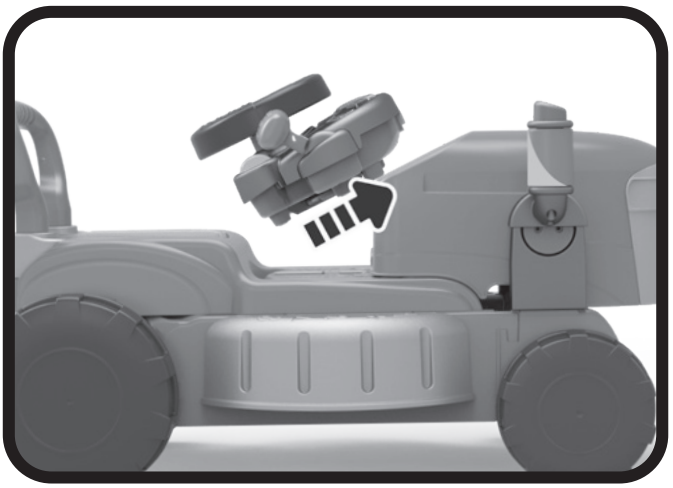


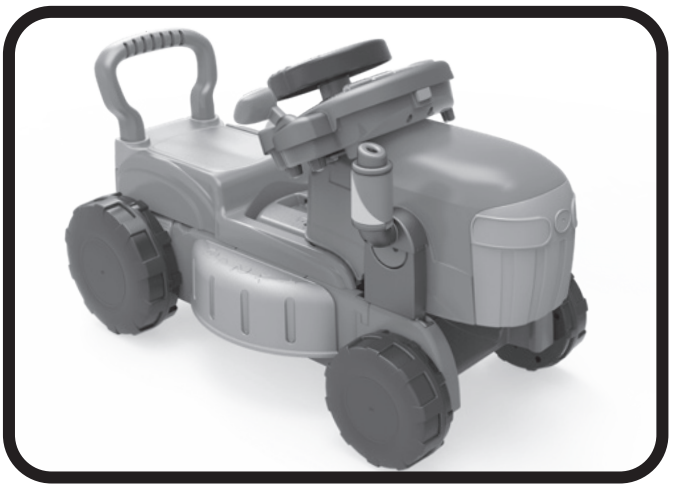


LABEL APPLICATION

Please secure labels onto the vehicle as shown below.

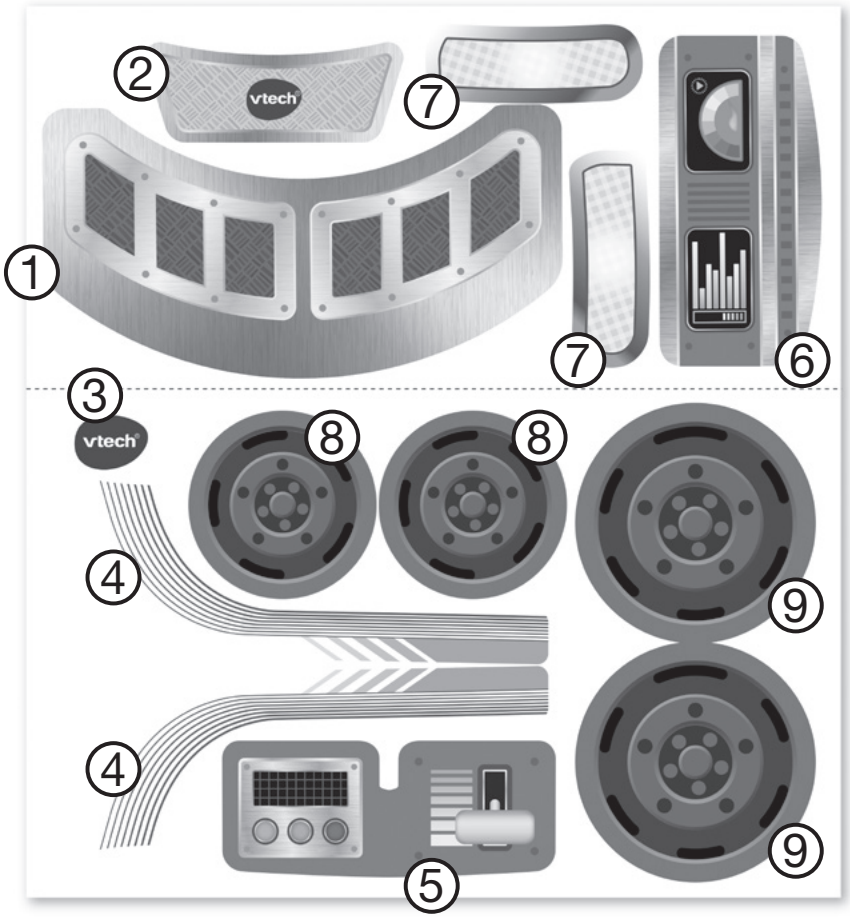

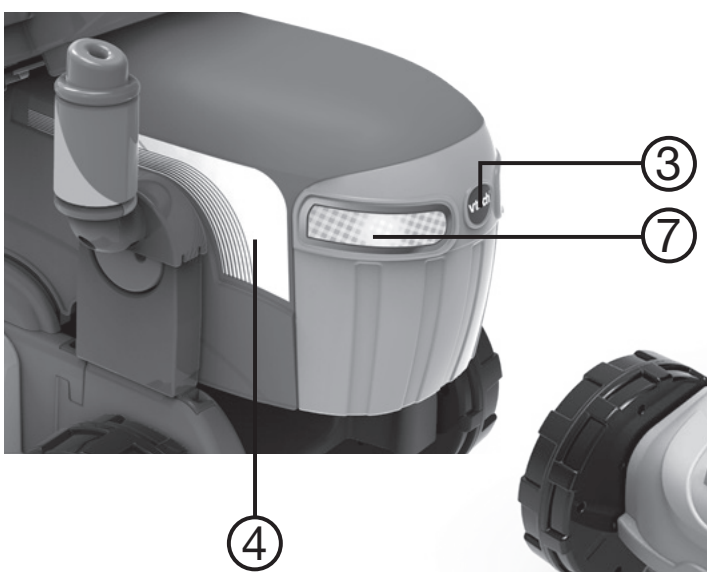

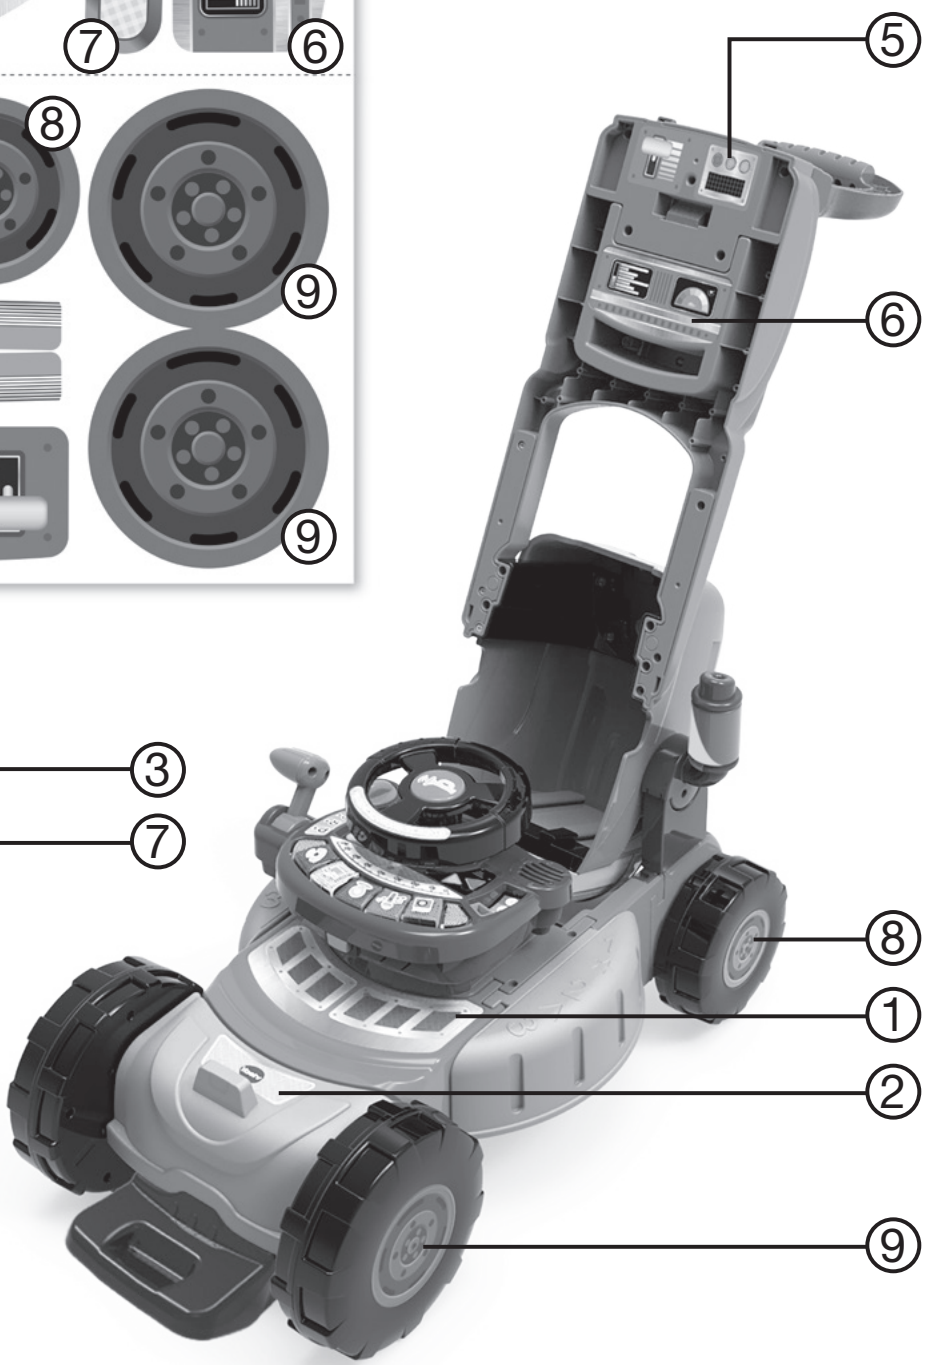

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

PRODUCT WARRANTY/

CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au