vtech®

Instruction Manual

Secret Safe My Style Box



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

Pre-School

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

4-10 years







To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Secret Safe My Style Box** by **VTech**®! This is the perfect safe place for all of your treasures and secrets! Unlock the dresser with your very own 4-digit passcode to keep your secrets safe inside. Features makeup lights, an alarm clock, and fun games. Enjoy the built-in songs and music, or connect ***Bluetooth***® to listen to your own tunes! Make your dresser even more unique by customising it!

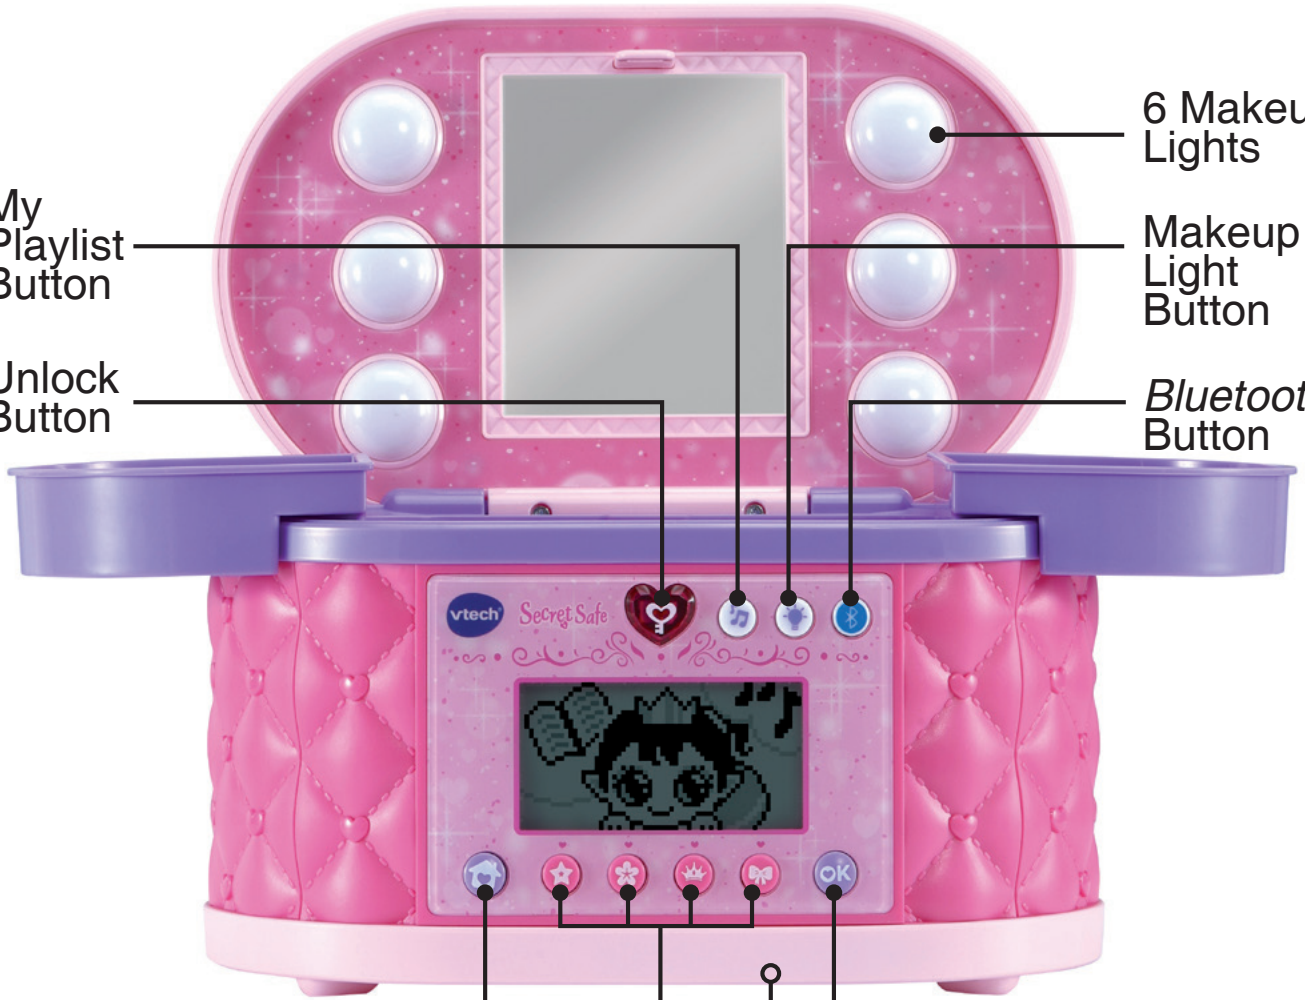

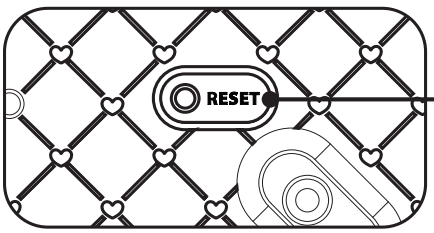

Reset Button
(At the bottom of the unit)

INCLUDED IN THIS PACKAGE

- One **Secret Safe My Style Box**
- Two Removable Trays
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks :

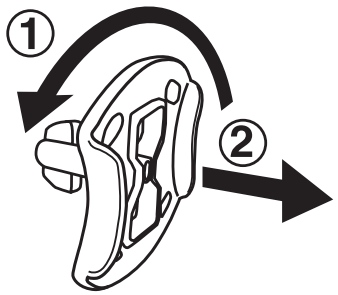

① Turn the packaging locks anticlockwise several times.
② Pull out the packaging locks and discard.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new AA (LR6/AM-3) batteries following the diagram inside the battery compartment. (For best performance, alkaline batteries are recommended. Rechargeable batteries are not guaranteed to work with this product).
5. Replace the battery cover and tighten the screw to secure.

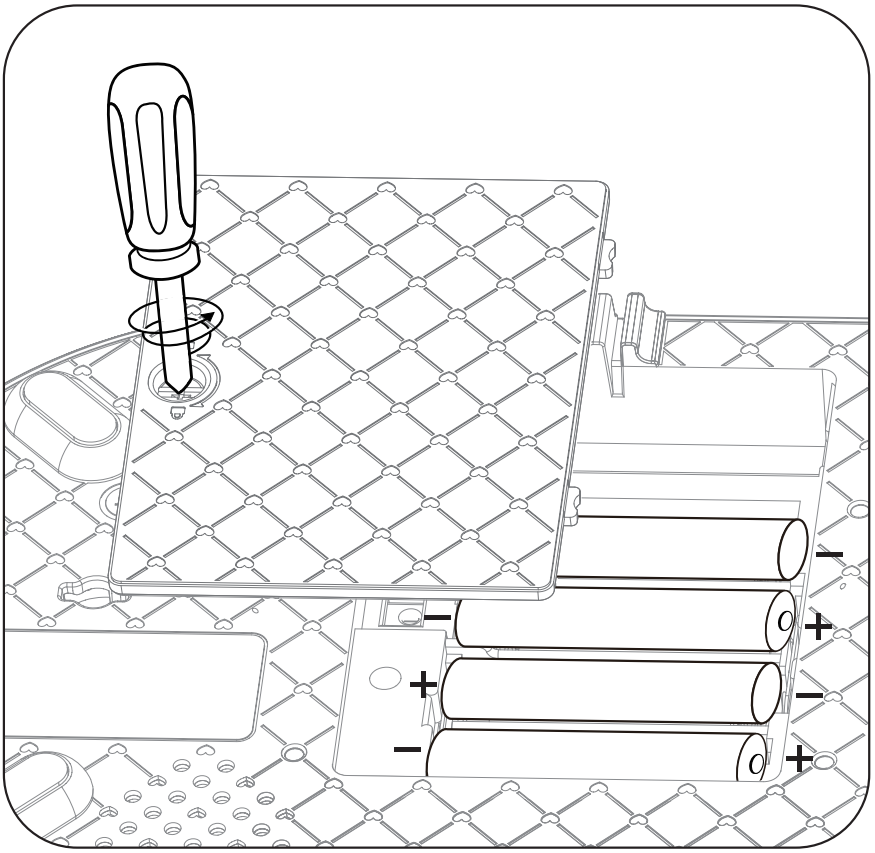

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Exit Try-Me Mode:

The product is in Try-Me mode in the packaging. To exit Try-Me mode, press and hold the **Reset Button** (located at the bottom of the unit with the word **`RESET`** above it) for several seconds, you will hear a “Di” sound. Once you have exited Try-Me mode you will be able to do the `First Set-Up`.

First Set-Up

When you first use the **Secret Safe My Style Box**, you will need to set the password and time first.

1. **Password Set-Up**
   Press the **Option Buttons** to create a 4-digit number or pattern password and then press the **OK Button** to confirm.
2. **Time Set-Up**
   Press the **Option Buttons** to select and input the time, press the **OK Button** to confirm.

Note: If there is a pairing problem with your ***Bluetooth***® device, please follow these steps:

1. On your ***Bluetooth***® enabled device, please go to ***Bluetooth***® settings. If “VTech 5818 Dresser” is found in your list of connected, paired or saved devices, please “forget” or “unpair” it.
2. Disable and enable ***Bluetooth***® or restart your device.
3. Turn the unit off and on and repeat the pairing process.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:
www.vtech.co.uk/recycle
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Unlock Button 

Press the **Unlock Button,** then type in your password to open your **Secret Safe My Style Box**.

2. Home/ Menu Button 

Press the **Home/ Menu Button** to enter the Main Menu. When on the Home Page, press the **Option Buttons** for the respective features:

Option button 1 - Clock 

Option button 2 - Icon 

Option button 3 - Wallpaper 

Option button 4 - Fairy 

3. Option Buttons 

Press the **Option Buttons** to select an activity or setting.

4. OK Button 

Press the **OK Button** to confirm your selection or setting.

5. Reset Button 

Press and hold the **Reset Button** for 3 seconds to reset your password or restore your **Secret Safe My Style Box** back to the original factory settings. The **Reset Button** is located at the bottom of the style box.

6. Makeup Light Button 

Keep pressing the **Makeup Light Button** to change between the different light colours.

7. My Playlist Button

Press the **My Playlist Button** to play the built-in sing-along songs and music. You can select between: play once, play all or play 15 minutes of the songs or music.

8. *Bluetooth*® Button

Press the ***Bluetooth***® **Button** to connect to an external device and play your favourite music.

9. FM-Antenna

The **FM-Antenna** is located inside the battery compartment. Pull out the antenna when select the Radio function. For best reception, pull out the antenna as long as possible. You can store the antenna back into the battery compartment when exit the Radio mode.

10. Automatic Shut-Off

To preserve battery life, the **Secret Safe My Style Box** will automatically power down after several seconds without input. The **Secret Safe My Style Box** can be turned on again by pressing any button. Please note that the style box will not automatically power down when connected to the radio.
The style box will also automatically turn off when the battery power is low. If you see the Low Battery icon appear on the screen, please insert a new set of batteries.
Note: If the style box repeatedly powers down while playing, please insert a new set of batteries.

ACTIVITIES

1. My Profile 

Customise the clock face, wallpaper and your own icon. Playing the Finding Treasure game and earning gems to unlock more items you can use to customise.

1.1 Clock Face



In **Clock Face** settings, press the **Option Buttons** for the respective features:

Option buttons 1 and 4 - Change the clock face.

Option buttons 2 and 3 - Change the font format.

The different clock faces will change the colour of the backlight and makeup lights.

1.2 Icon Maker



Create your own icon!

In **Icon Maker**, press the **Option Buttons** for the respective features:

Option buttons 1 and 4 - Change the detail.

Option buttons 2 and 3 - Show the hair style, makeup face, accessory, face shape and skin tone.

1.3 Wallpaper



Design the wallpaper by selecting a sticker, text and frame! In Wallpaper setting, press the **Option Buttons** for the respective features:

Option Buttons 1 and 4 - Change the frame.

Option Buttons 2 and 3 - Change the sticker and text.

1.4 Finding Treasure



To find the treasure, press or hold the **Option Buttons** for the respective features:

Option Buttons 1 and 4 - left and right.

Option Buttons 2 and 3 - up and down.

Press the **OK Button** to select the treasure box you want to open. Look inside and see if you have found some treasures. There are 3 different difficulty levels to try!

2. Challenge Game

There are 3 different difficulty levels in each of the games, you can select the level when entering the game.

2.1 Makeup Time



You will be shown a face on the screen, try to remember it. Press the **Option Buttons** to select which part needs to be changed to match the face. You will receive the corresponding gem amount depending on your score after 2 questions have been answered correctly. During the game, press the **Option Buttons** for the respective features:

Option Buttons 1 and 4 - Change the detail.

Option Buttons 2 and 3 - Show the part.

2.2 Fashion Show



Select one of the models and help them pose on the runway. Press the corresponding **Option Buttons** according to the arrow on the screen to help the model strike the correct pose. Press the **OK Button** when you see the camera.

2.3 Special Spell

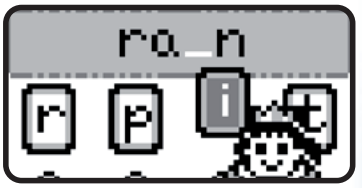

A word with missing letters will be shown on the screen. Press the correct **Option Buttons** to insert the correct letter into the correct position and then press the **OK Button** to complete the word.

2.4 Secret Code



There will be an addition, subtraction or multiplication formula shown. One part of the formula will be missing and you need to work out the missing number and press the **OK Button** when the correct number stays in the middle of the box.

2.5 Say Cheese



The Fairy will fly on the screen. Press the **OK Button** to take the picture when the Fairy face the front.

2.6 Let's Cheer

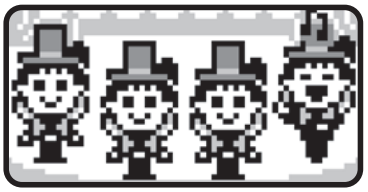

Four Fairies are singing on the stage! Remember the singing sequence and repeat the same order by pressing the **Option Buttons**.

3. Mystery Time



3.1 Lucky Colour

Select two magic potions, then press the **OK Button** to mix the magic cauldron to find out your lucky colour at this time!

3.2 Fairy's Adventure

Help the Fairy to select which activity she can join by picking the petals one by one.



3.3 Wonderful Wisdom

The Fairy will hide in one of the 4 clouds. Press the **Option Buttons** to find the Fairy. Then the Fairy will fly out and share the magical wisdom she holds!



3.4 Fortune Level

Choose 3 of the 12 magic cards to hear your love, charm, intelligence, luckiness, beauty, strength, caring, cuteness, coolness and friendship level. Press the **OK Button** when the card you want to select is on the screen.



4. Settings

4.1 Password

Press the **Option Buttons** to change your password.



4.2 Time and Alarm



- **Time**
  Press the **Option Buttons** to change the time setting (The am/pm setting is only applicable in the 12-hour time format). Then press the **OK Button** to confirm and save.
- **Alarm**
  Press the **Option Buttons** to turn the alarm on or off, set the

alarm time and select an alarm tune. Press the **OK Button** to confirm and save the current setting. When the alarm is on, press one of the **Option Buttons** to stop it. If no button is pressed, the alarm will stop after several seconds.

4.3 Makeup Light

Press the **Option Buttons** to choose a makeup light colour. The light options will scroll through one by one when you press the different **Option Buttons**. There are 7 light patterns to choose from as well as an option to turn the lights off. Use the **Option Buttons** for the respective features:

Option Buttons 1 and 4 - To choose a light colour or turn the lights off.

4.4 Screen



- **Screen Backlight**
  Press the **Option Buttons** to turn the backlight on or off, or change the backlight colour.
- **Screen Brightness**
  Press the **Option Buttons** to select the screen brightness.

4.5 Volume

Press the **Option Buttons** to change the volume level.

4.6 Radio

Select the Radio function and pull out the **FM-Antenna** which is located inside the battery compartment. Press the **Option Buttons** for the respective features:



Option Buttons 1 and 4 - Auto-search the stations.

Option Buttons 2 and 3 - Manually search for a station.

Note: The unit will not power down when connected to the radio. Press other function buttons to disconnect from Radio.

5. MY PLAYLIST

Press the **Playlist Button** to enter My Playlist page. Press the **Option Buttons** to select the songs or music styles.

Show Time - 8 Sing-Along Songs 

Sports Time - 10 Melodies 

Dress Up Time - 10 Melodies 

Relaxing Time - 10 Melodies 

When the music is playing, press the **Option Buttons** for the respective features:

Option Button 1 - Previous music.

Option Button 2 - Play and stop the music.

Option Button 3 - Next music.

Option Button 4 - Play the music once, play all or play for 15 minutes.

6. *BLUETOOTH*®

Press the ***Bluetooth***® **Button** to connect to your device .
6.1 The ***Bluetooth***® **Button** will light up and flash.
6.2 Enter the ***Bluetooth***® interface of your device and begin searching for ***Bluetooth***® device.
6.3 Select “VTech 5818 Dresser” when you see it displayed on your device.
6.4 Enter the 6-digit PIN code displayed on the **Secret Safe My Style Box**.
6.5 When connected, the ***Bluetooth***® **Button** light will remain on.
6.6 To exit ***Bluetooth***® mode, press the ***Bluetooth***® **Button** again.
Note: The style box will automatically search and connect to the last ***Bluetooth***® device that it was connected to before. You do not need to enter the PIN code again.

SONG LYRICS

SONG 1

Wherever I go, I’ll always know,
My Secret Safe is where my secrets go.
I hide my things in there to keep,
Tucked away safe before I sleep.

Secrets, secrets,
I’m gonna keep them safe.
Secrets, secrets,
Hidden away in my secret place.

No one can guess, what’s locked inside,
No one can get in, even if they tried.
My secret notes and shiny things,
This is where I keep my favourite things.

Secrets, secrets,
I’m gonna keep them safe.
Secrets, secrets,
Hidden away in my secret place,

Hidden away in my secret place!

SONG 2

I've got my favourite outfit on ooh yeah,
I'm gonna check it out in the mirror.
Maybe I'll put on a hat and some sunglasses too.

Dressing up is fun it's true,
I wanna dress up, dress up!
Try something new,
I wanna change it up and feed brand new.
I wanna dress up, dress up!
It's so fun, what should I try on next?
Come on let's dress up!

I'm gonna try a new dress on oh yeah,
I'm gonna check it out in the mirror.
Maybe I'll put on a wig, in a different colour.
Dressing up is fun, it's true,
I wanna dress up, dress up!
Try something new, I wanna change it up and feel brand new.
I wanna dress up, dress up!
It's so fun, what should I try on next?

Come on let's dress up!

Dress up, dress up,
Try something new.
I wanna change it up and feed brand new.
i wanna dress up, dress up!
It's so fun, what should I try on next?
Come on let's dress up!

SONG 3

I wake up feeling so bright,
I choose my outfit, it feels so right.
I'm so happy being me,
I'm amazing, can't you see.

I am who I am, I'm happy being me!
Nobody can tell me who I should be.

I'll wear what I like, because it's my style,
I love who I am it makes me smile!
It makes me smile, it makes me smile!

I'm one of a kind, there's no one like me,
I'm amazing just who I'm meant to be.
Sometimes I'm silly, sometimes I'm strong,
But I'm always myself and that's never wrong.

I am who I am, I'm happy being me!
Nobody can tell me who I should be.
I'll wear what I like, because it's my style,
I love who I am it makes me smile!
It makes me smile, it makes me smile!

SONG 4

What's your favourite colour, let's wear it today?
How about red, or even grey?
Bright or dark, what will it be?
You'll look amazing, just wait and see.

Whatever you wear, you'll feel great,
In every colour, there's something to celebrate!
From head to toe, you're shining bright,
In every colour it feels so right!

Orange, black, pink and blue,
So many colours for us to choose.
Green, purple, yellow,
All the colours of the rainbow.

Whatever you wear, you'll feel great,
In every colour, there's something to celebrate!
From head to toe, you're shining bright,
In every colour, it feels so right!

SONG 5

Look in the mirror, it's plain to see.
Look within you, and you will agree.
Don't care what people say,
Don't care what people think.

Be you!
Be free!
Be whoever you wanna be!
Be brave, okay!
Never feel afraid!
You can stand, in the crowd.
Or you can stand, on the stage.
But no matter what people say,
Just be you!

Now is your time, now is the day.
Know who you are, and feel okay!
Don't listen to the noise,
Don't listen to the buzz.

Be you!
Be free!
Be whoever you wanna be!
Be brave, okay!
Never feel afraid!
You can stand, in the crowd.
Or you can stand, on the stage.
No matter what people say,
Just be you!

SONG 6

You are a star, in the sky,
Be the one, that shines so bright!
Never give up, never give in,
Always know you've got the strength within.

Glimmer, glimmer, like a shooting star!
Shining brightly, wherever you are!
Sparkle, sparkle, anywhere you go!
Everyone will see how much you glow!

Zooming so fast, soaring so high!
You are the brightest star in the sky!
Never give up, never give in,
Always know you've got the strength within.

Glimmer, glimmer, like a shooting star!
Shining brightly, wherever you are!
Sparkle, sparkle, anywhere you go!
Everyone will see how much you glow!

SONG 7

Every single morning, the sun will rise.
When the darkness turns to light, things will be alright.
It's a new day, a new chance, to start again.
There's no need to worry at all, my friend.

When those grey clouds cover your blue skies,
Don't forget each morning the sun will rise.
When the day is at its end, and the sun has set.
Look forward to tomorrow, it's not written yet.

A new page in your book, a new chapter begins.
Let's make it a better day, for happiness to win.
It's a new day, a new chance, to start again.
There's no need to worry at all, my friend.

When those grey clouds cover your blue skies,
Don't forget each morning the sun will rise.
When the day is at its end, and the sun has set.
Look forward to tomorrow, it's not written yet.

SONG 8

Red, orange and yellow,
Green, blue, indigo and violet.
These are the colours of the rainbow.
Magical lights, shining bright.
They're gonna dance, dance, dance, dance all through the night.
Magical lights, shining bright.
They're gonna dance, dance, dance, dance all through the night.

Red, orange and yellow,
Green, blue, indigo and violet.
These are the colours of the rainbow.
Magical lights, shining bright.
They're gonna dance, dance, dance, dance all through the night.

Magical lights, shining bright.
They're gonna dance, dance, dance, dance all through the night.

Bluetooth® Statement

The ***Bluetooth***® word mark and logos are registered trademarks owned by the ***Bluetooth***® SIG, Inc. and any use of such marks by **VTech**® is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5818 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz
Maximum RF power: 0.003W (4.77dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5818 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:
www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz
Maximum RF power: 0.003W (4.77dBm)

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a new battery.

TROUBLESHOOTING

If for some reason your **Secret Safe My Style Box** stop working or loses connection, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to use again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**® products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk
www.vtech.com.au

© 2025 VTech.
All rights reserved.
IM-581800-000
Version:0