Instruction Manual

Ice Cream Adventure Play Set



BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Bluey Ice Cream Adventure Play Set**.

The Bluey Ice Cream Adventure Play Set includes fun activities that encourage hands-on and visual play. Push the handle to load a big ice cream into the back of Bluey's ice cream truck. Let's get ready to deliver some delicious treats to Bluey's friends!



INCLUDED IN THIS PACKAGE



One **SmartPoint**™ Bluey Ice Cream Truck



Two Ice Cream Cones

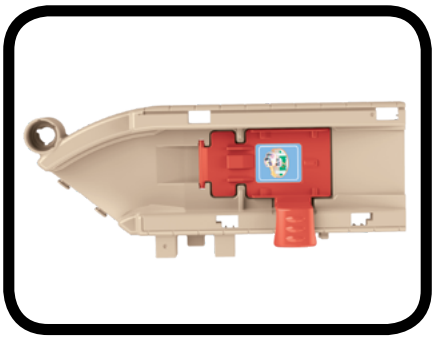

One Launcher Track



One Short Curved Track



Two Pillars

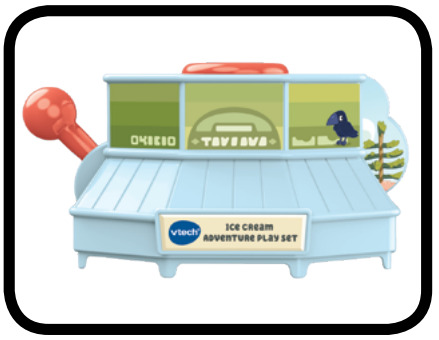

One Ice Cream Shop (Ice Cream Refill Point)

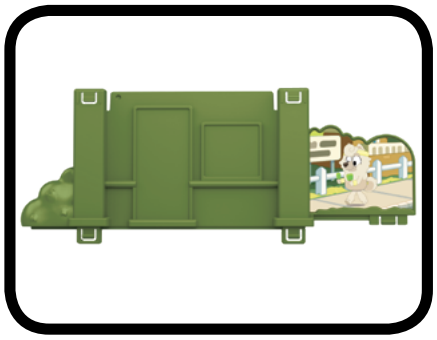

One Green Ice Cream Shop Wall



One Gift Shop



One Green Scenery



One Pink Walkway Arbour



One Blue Stone Wall



One Pink Tree

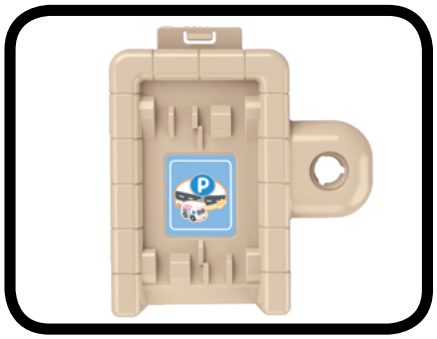

One Rectangular Track



One Road Sign



One Road Gate

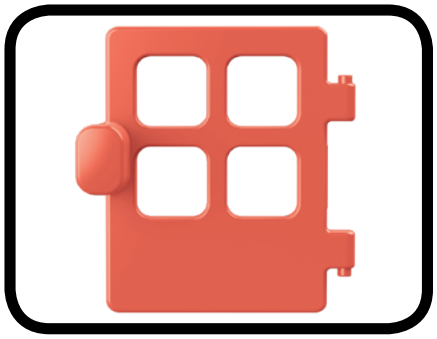

One Door



One Hanging Piece

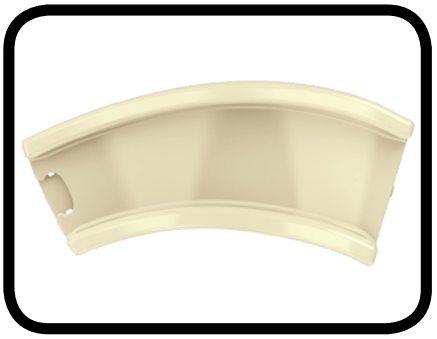

One Long Slide Track

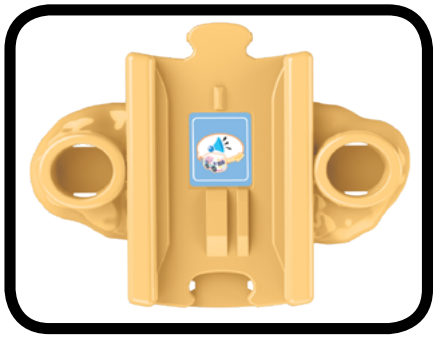

One Yellow Short Track



One Pair Of Green Palm Trees

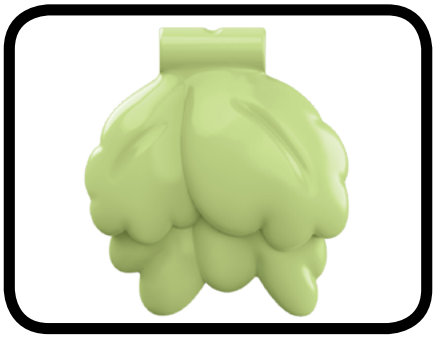

One Palm Leaf

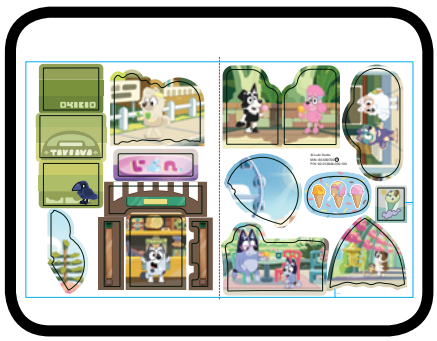

Sticker Sheet

- One Quick Start Guide

WARNING:
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:
Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

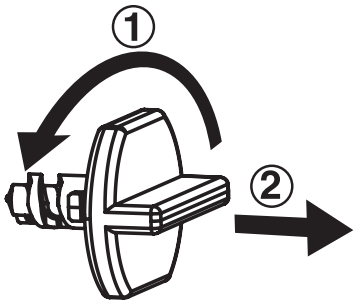

① Turn the packaging locks anticlockwise several times.

② Pull out and discard the packaging locks.

GETTING STARTED

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Find the battery cover located on the bottom of the Bluey Ice Cream Truck. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.

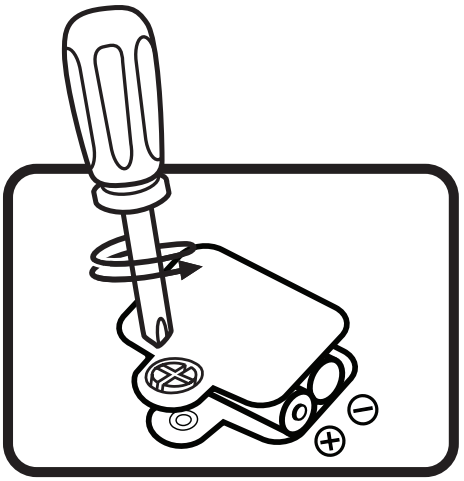

4. Install 2 new 1.5V AAA (AM-4/LR03) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

Note:

If the unit repeatedly powers down while playing or the lights fade out, we suggest changing the batteries.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:
www.vtech.co.uk/recycle
www.vtech.com.au/sustainability
* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION

Please securely stick the labels to the play set as indicated below:



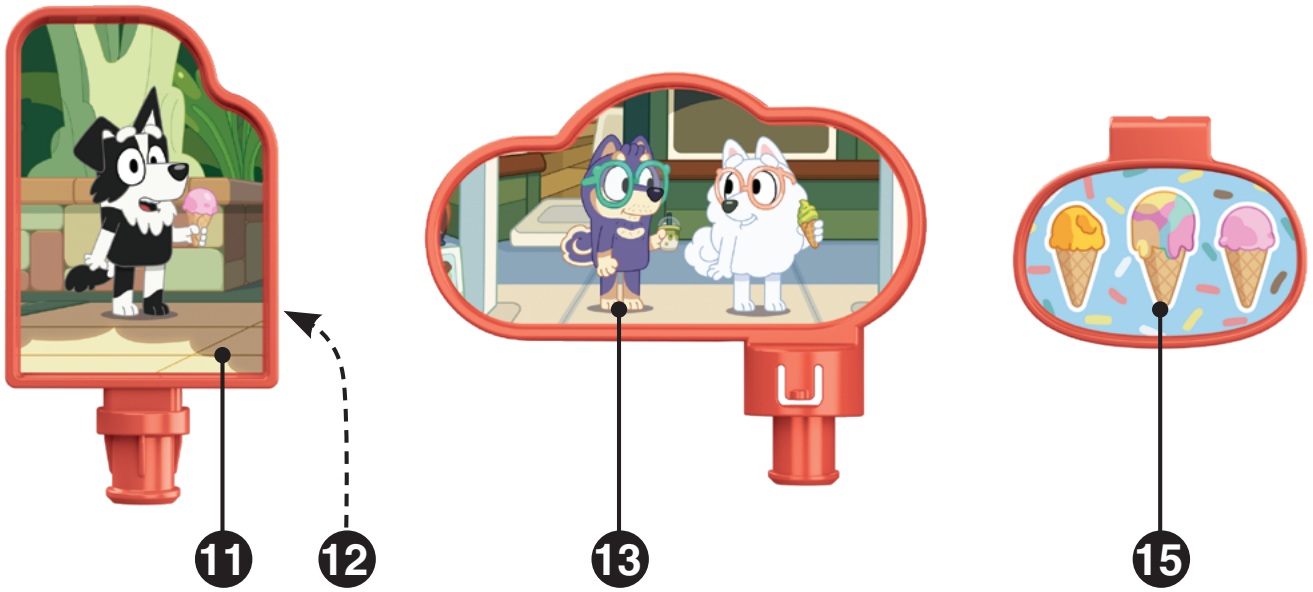

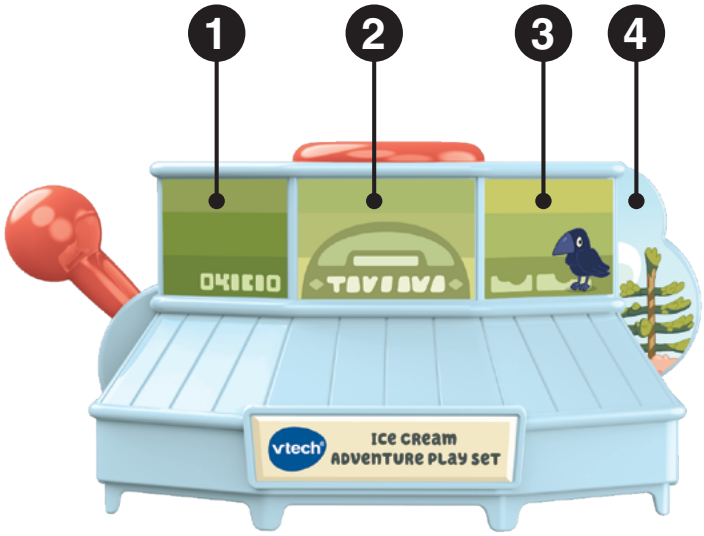
1
2
3
4
vtech
Ice Cream
Adventure Play Set

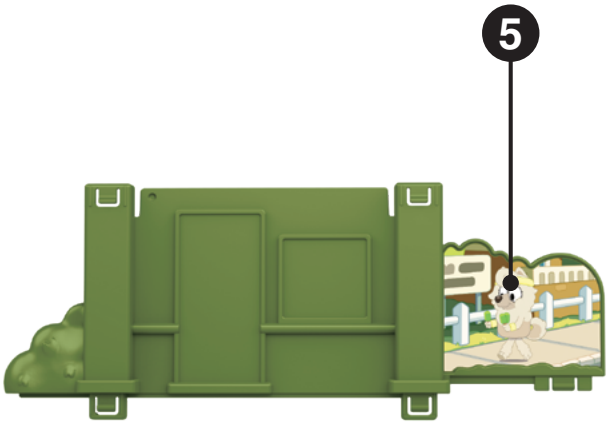
5


6
7
8
9
10

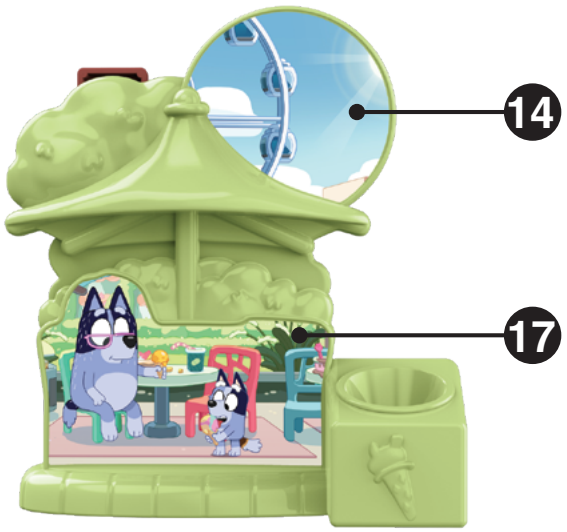
14
17

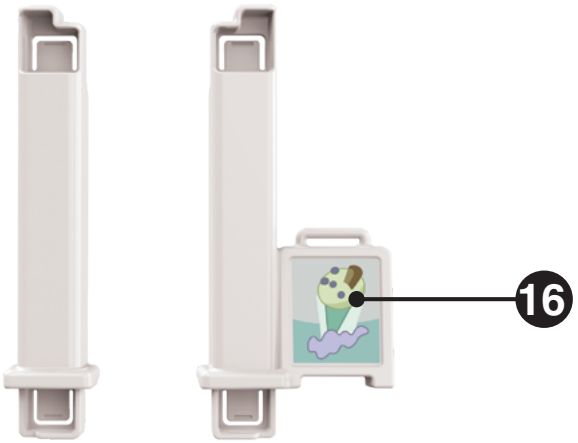
16


18

INSTRUCTIONS

With the **Bluey Ice Cream Adventure Play Set**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Connect the **Launcher Track** and the **Short Curved Track** together.

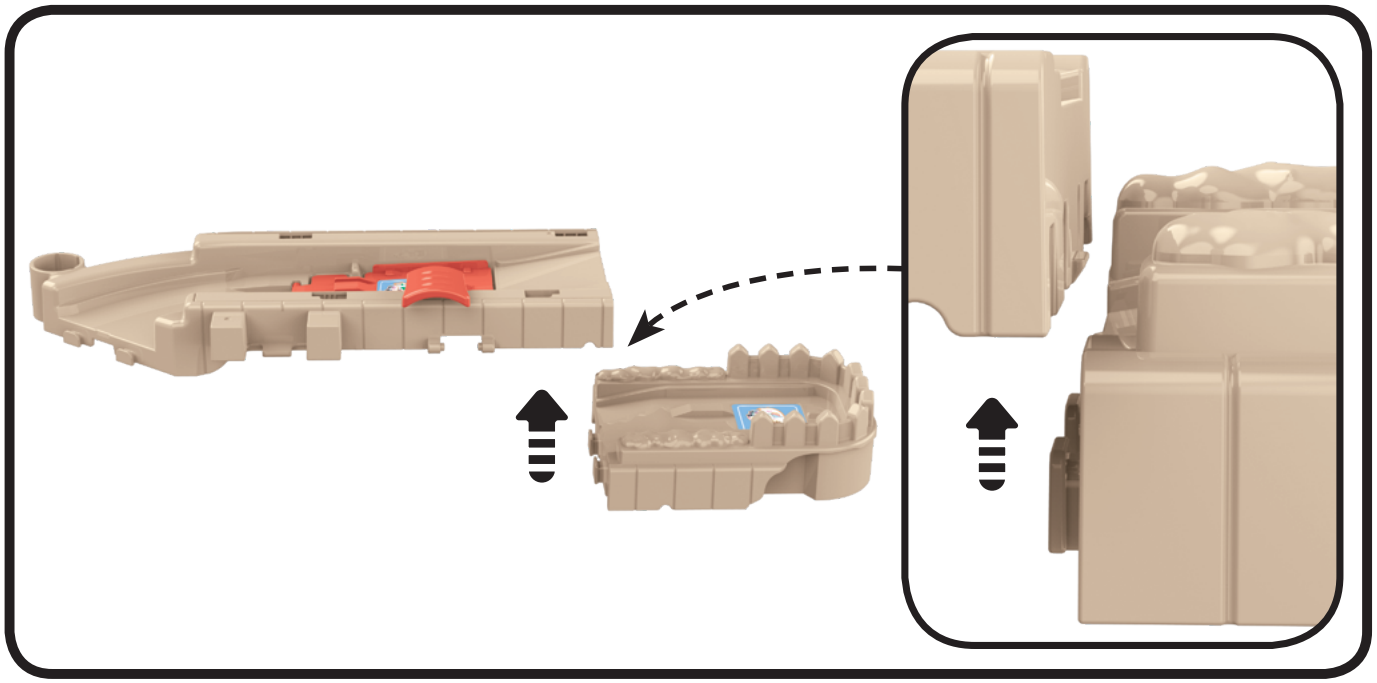

2. Insert the **Two Pillars** under the **Ice Cream Shop (Ice Cream Refill Point)**.

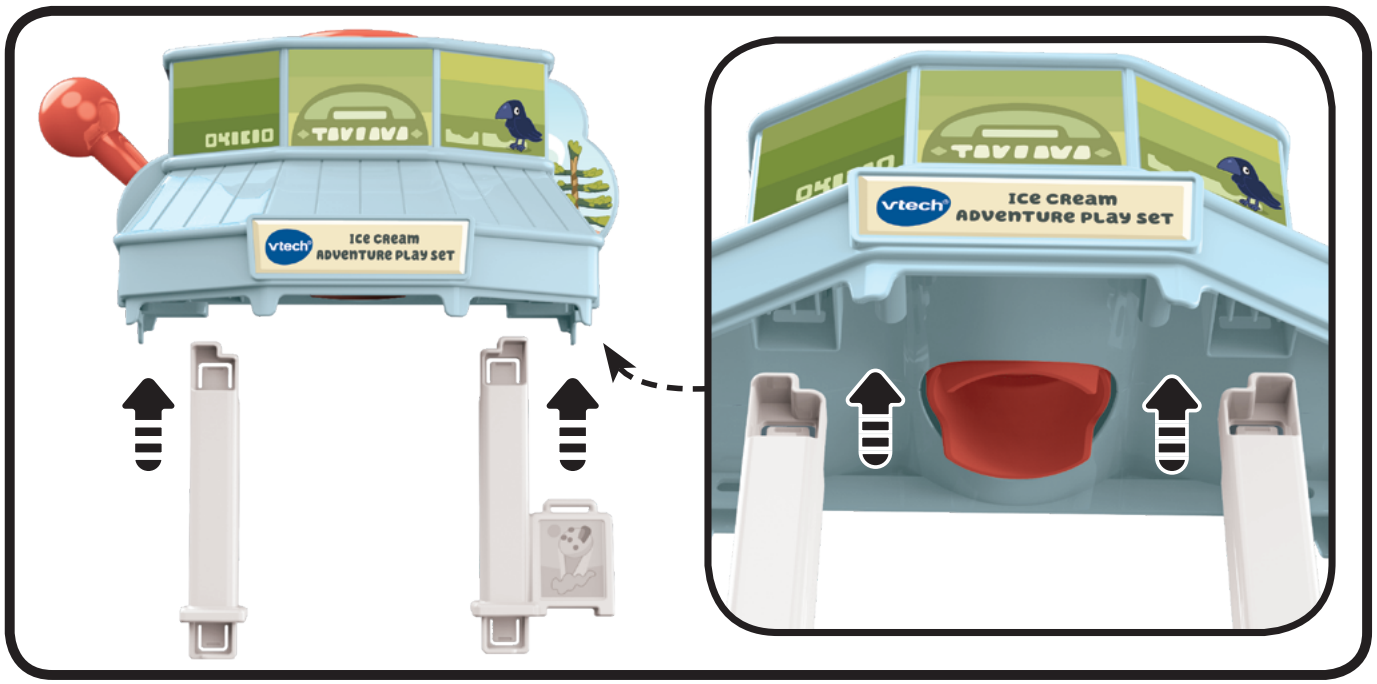

3. Insert the **Green Ice Cream Shop Wall** under the **Ice Cream Shop (Ice Cream Refill Point)**.

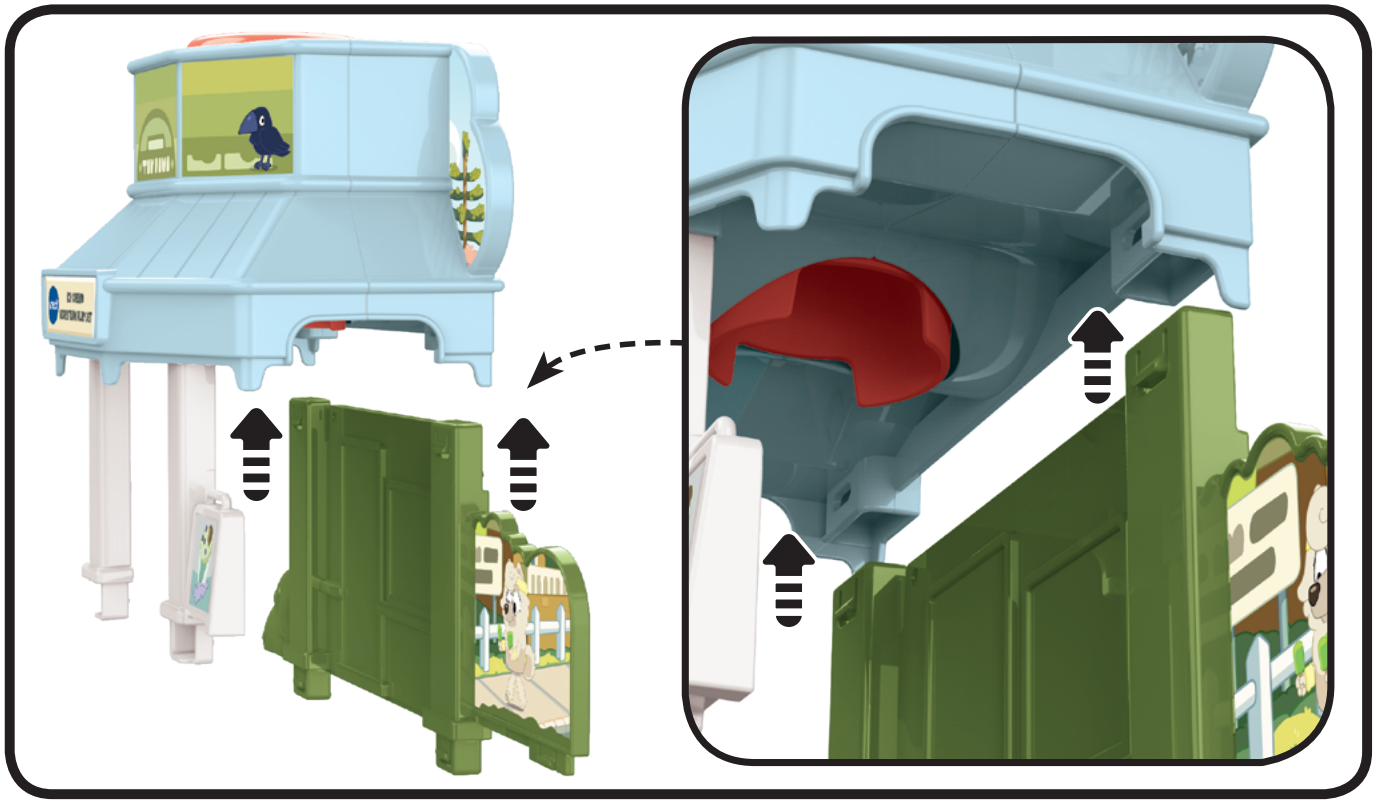

4. Assemble the **Parts Of The Ice Cream Shop (Ice Cream Refill Point)** onto the **Connected Track**.

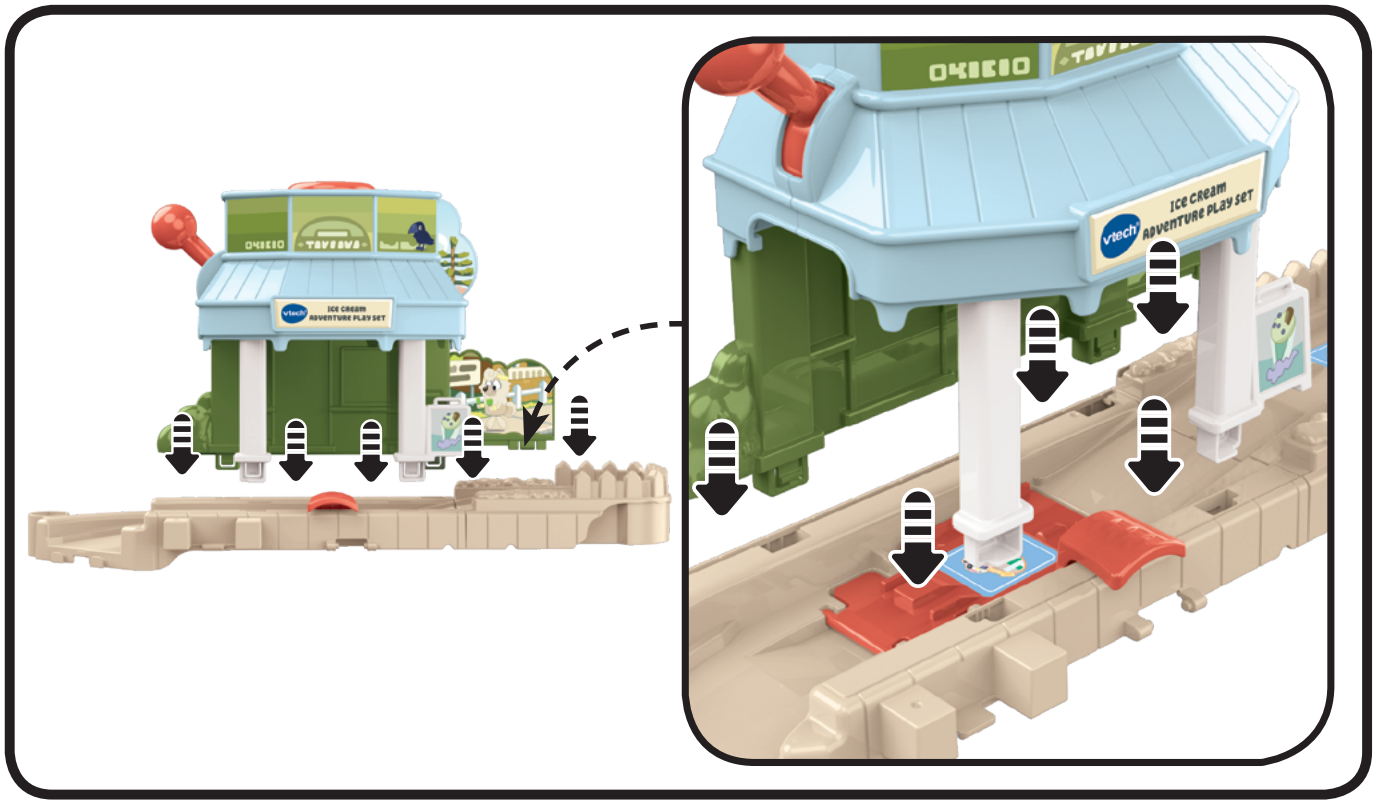

5. Insert the **Gift Shop** onto the front side of the **Connected Track**.

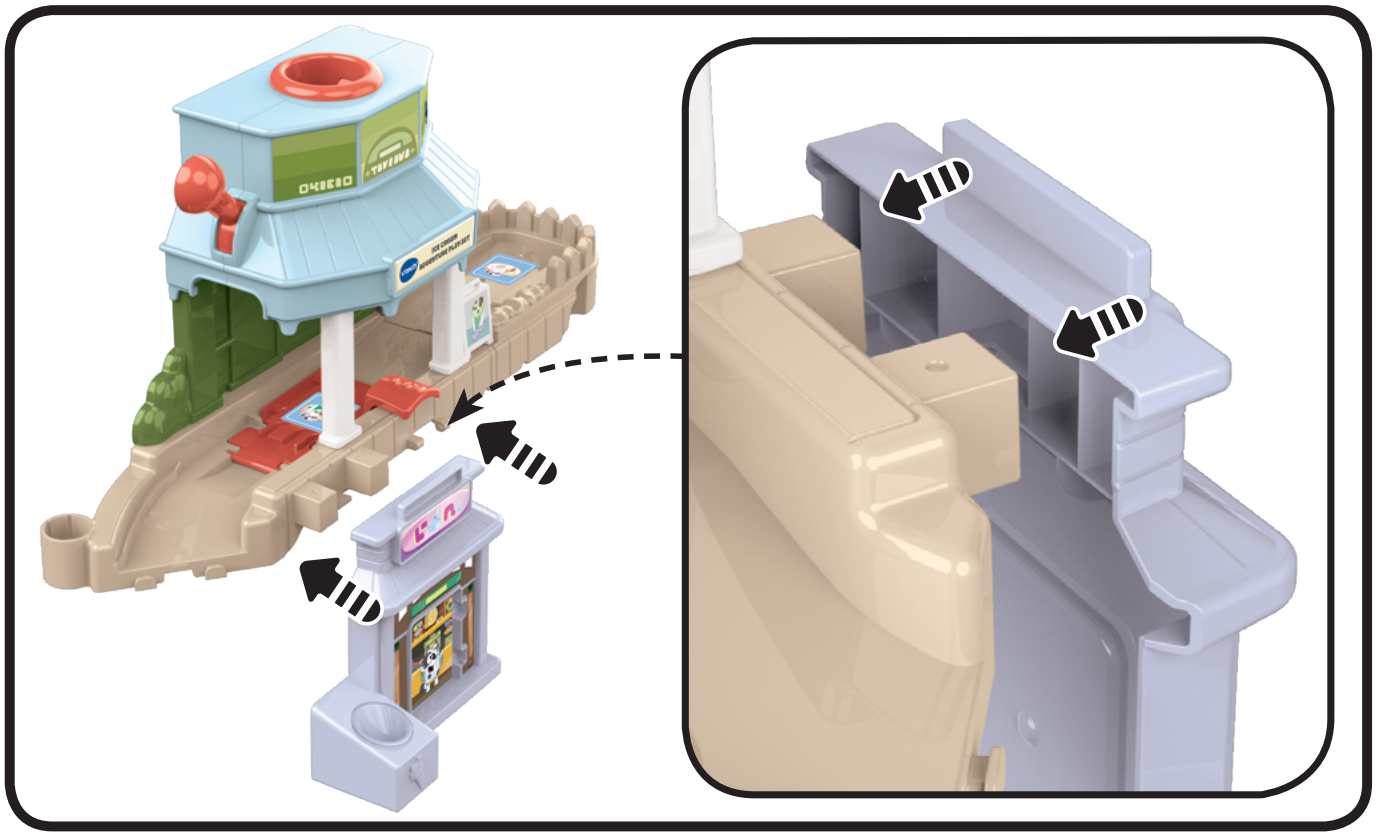

6. Insert the **Green Scenery** under the **Connected Track**.

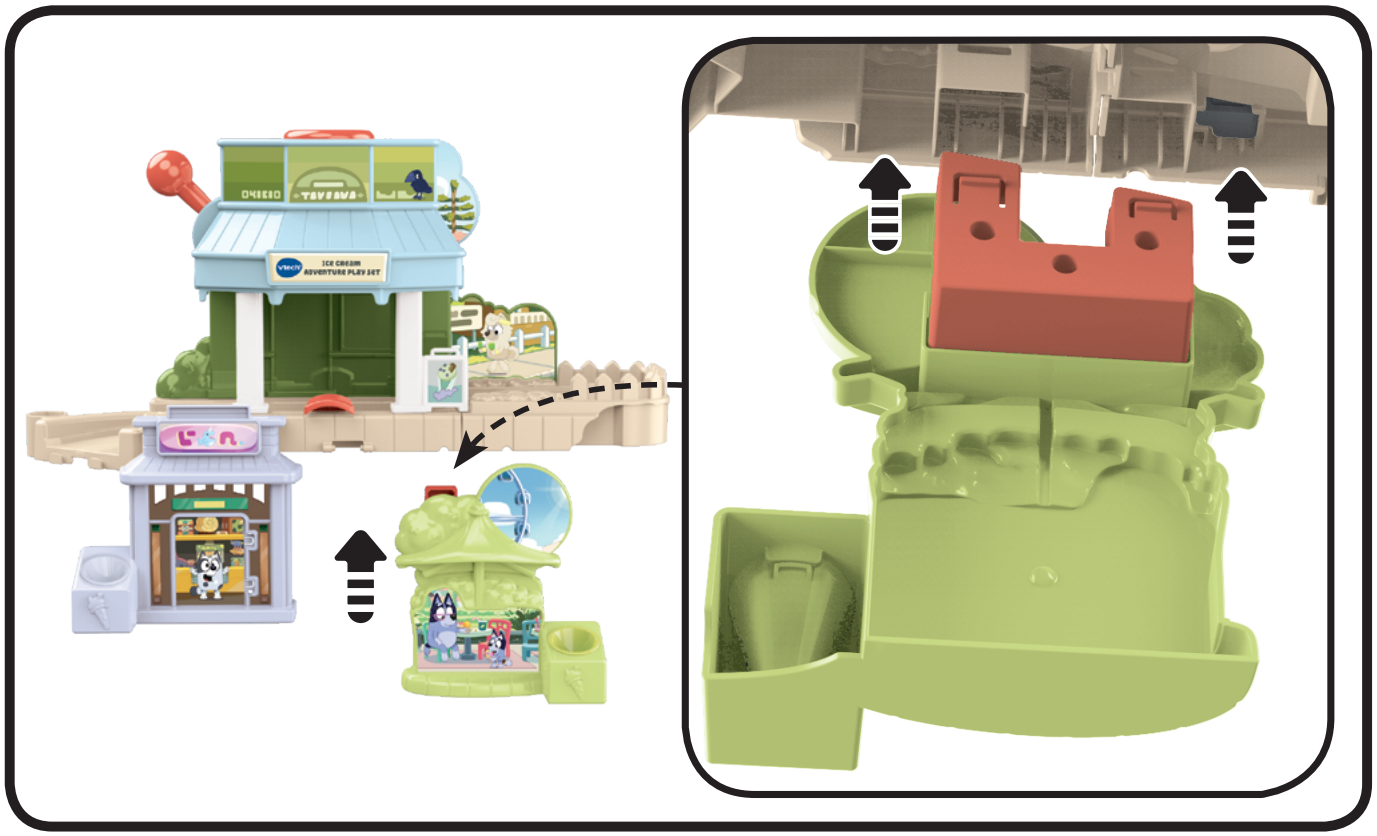

7. Insert the **Pink Walkway Arbour** under the **Connected Track**.

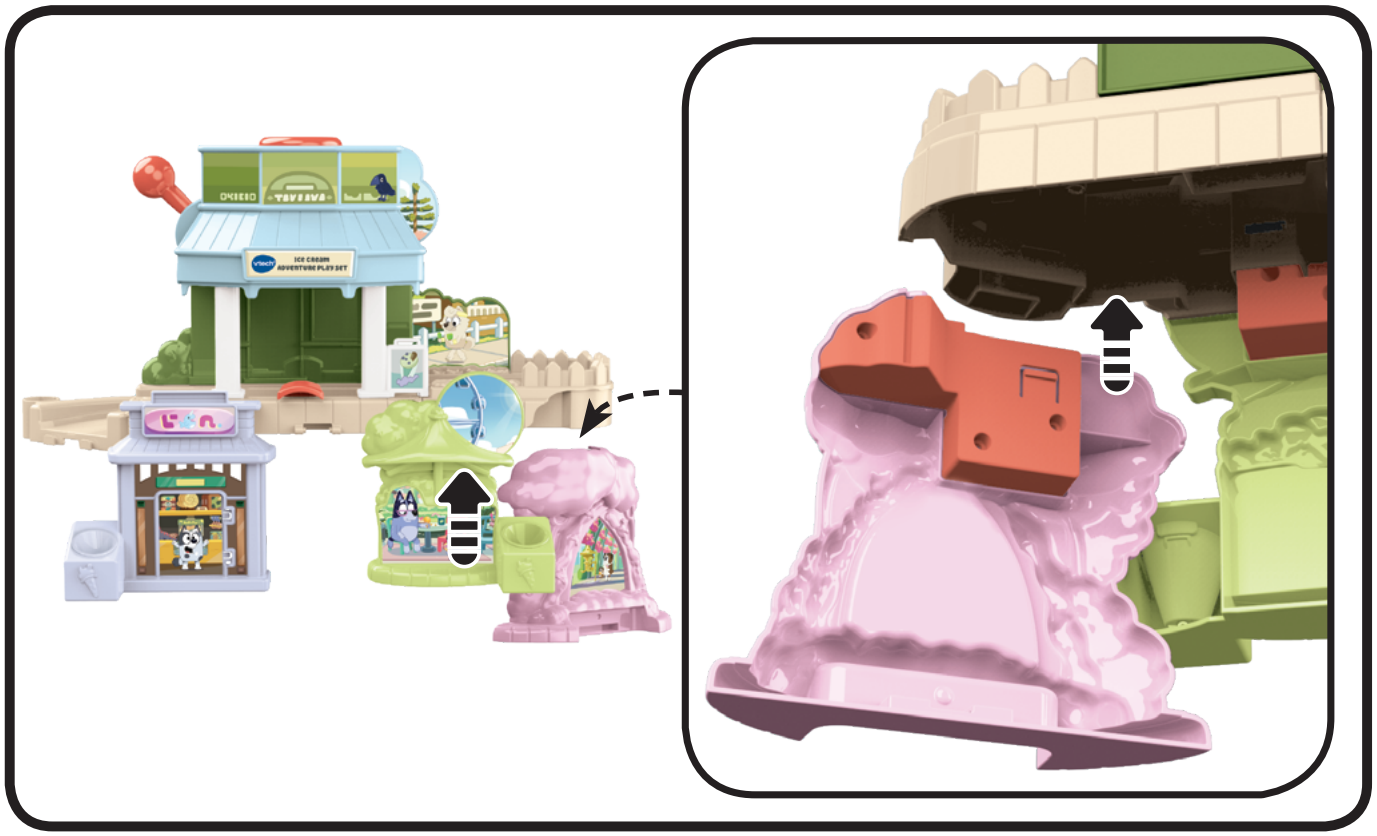

8. Insert the **Blue Stone Wall** onto the other side of the **Connected Track**.

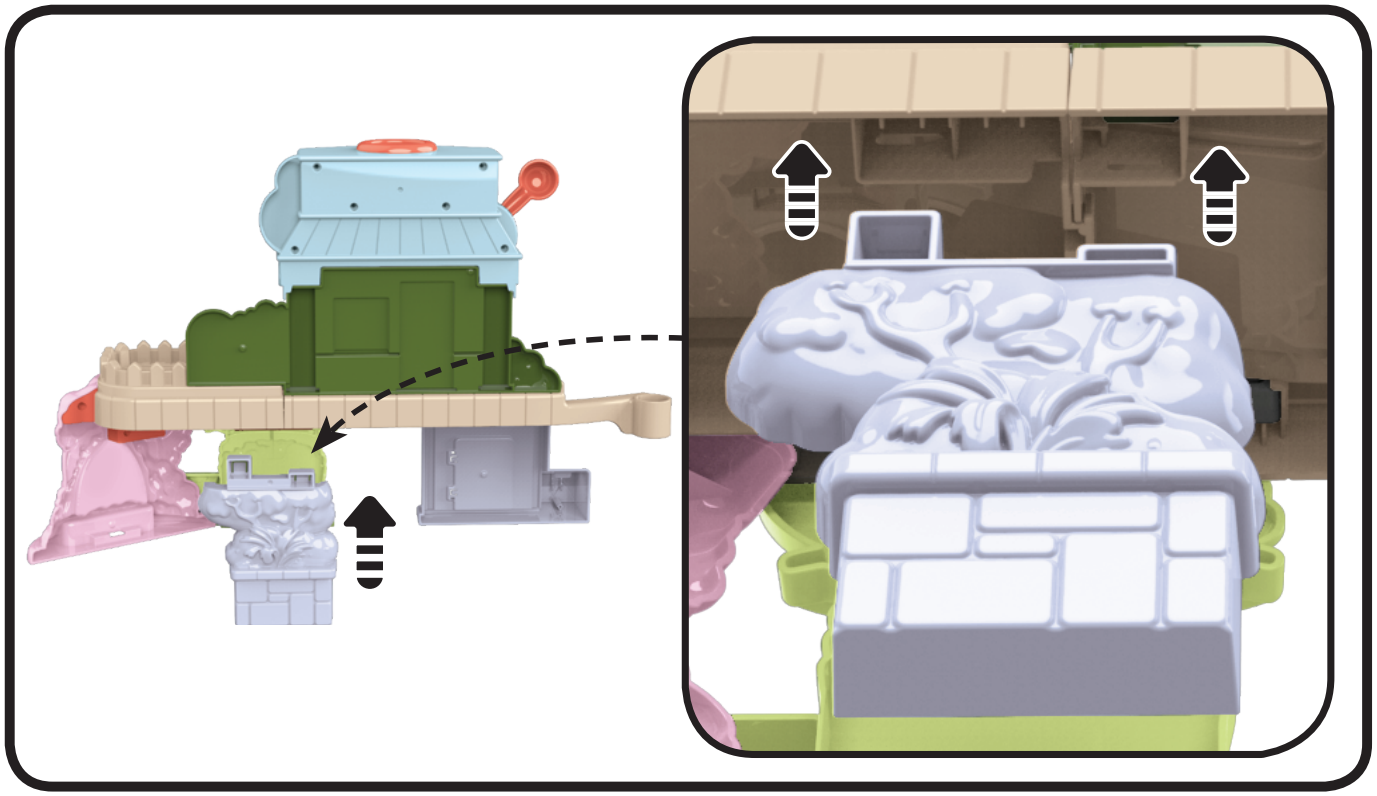

9. Insert the **Pink Tree** onto the other side of the **Connected Track**.

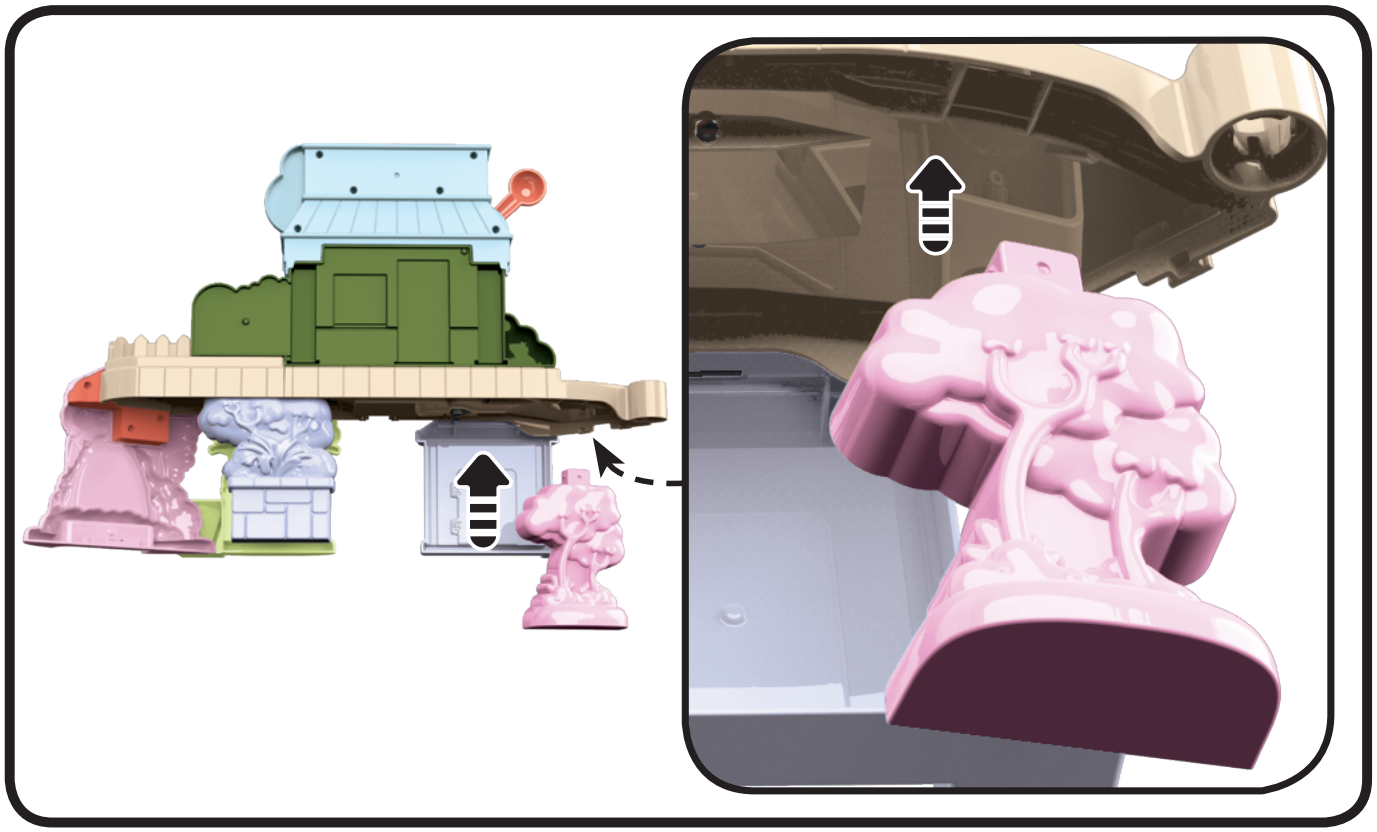

10. Assemble the **Rectangular Track** onto the **Pink Walkway Arbour**.

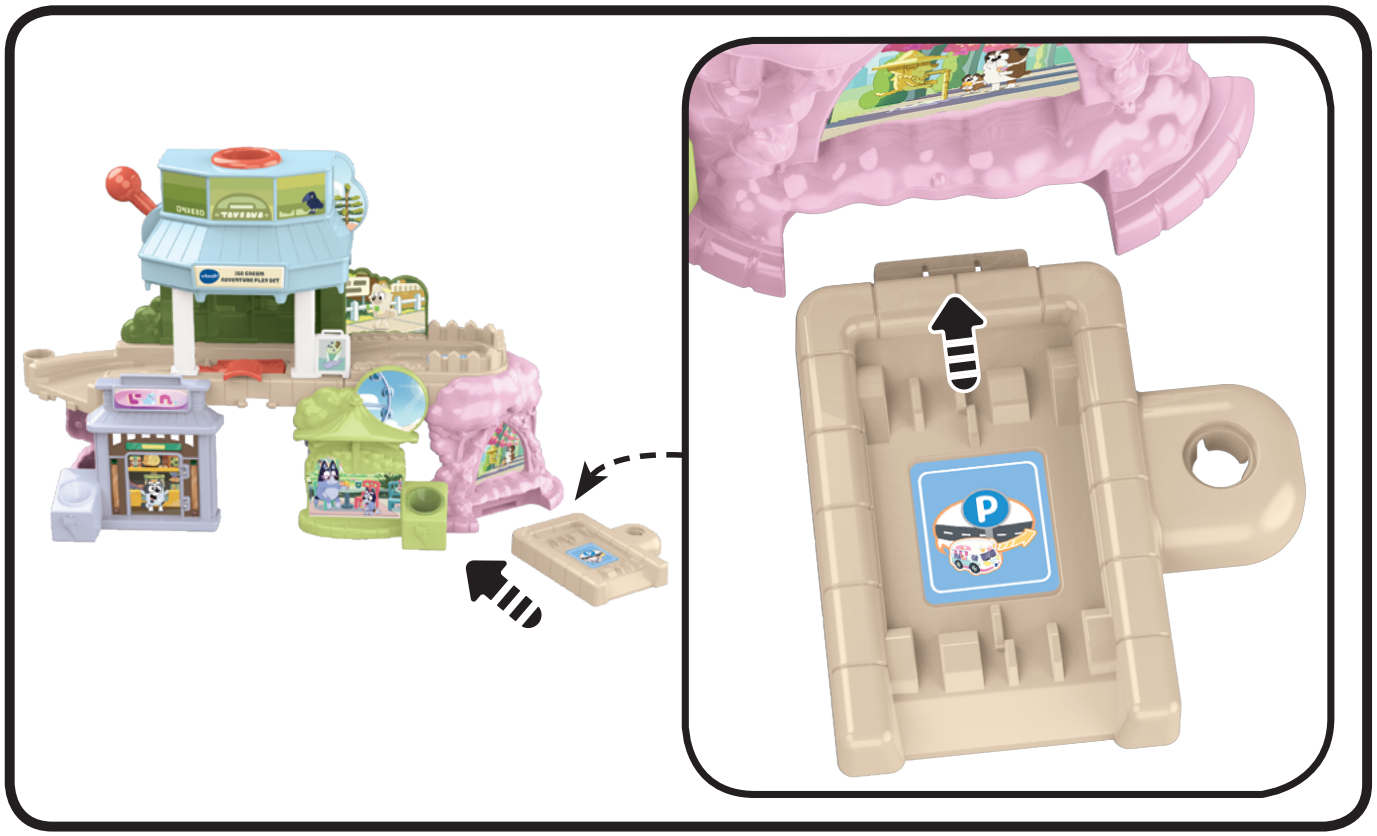

11. Insert the **Road Sign** into the **Rectangular Track**.

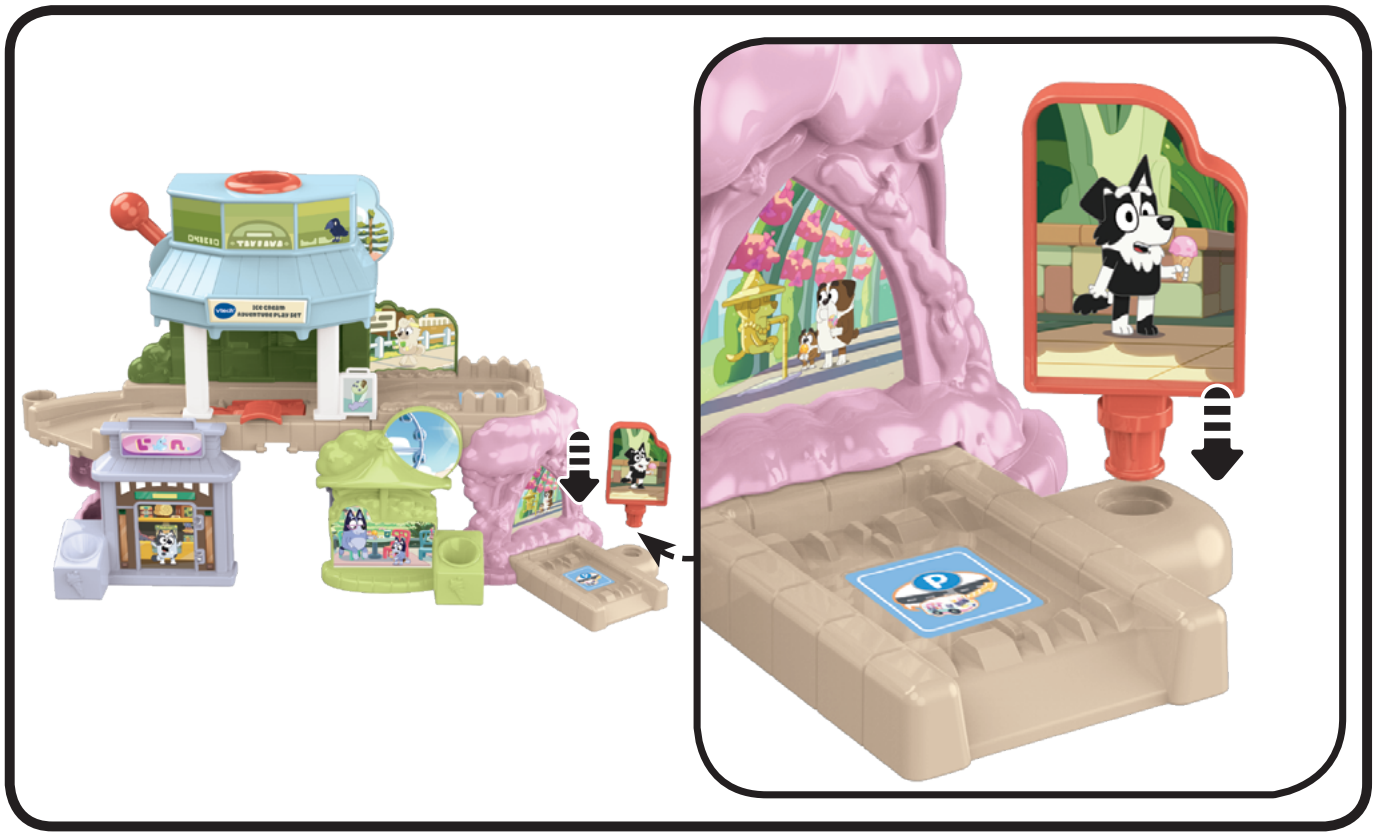

12. Insert the **Road Gate** into the **Launcher Track**.

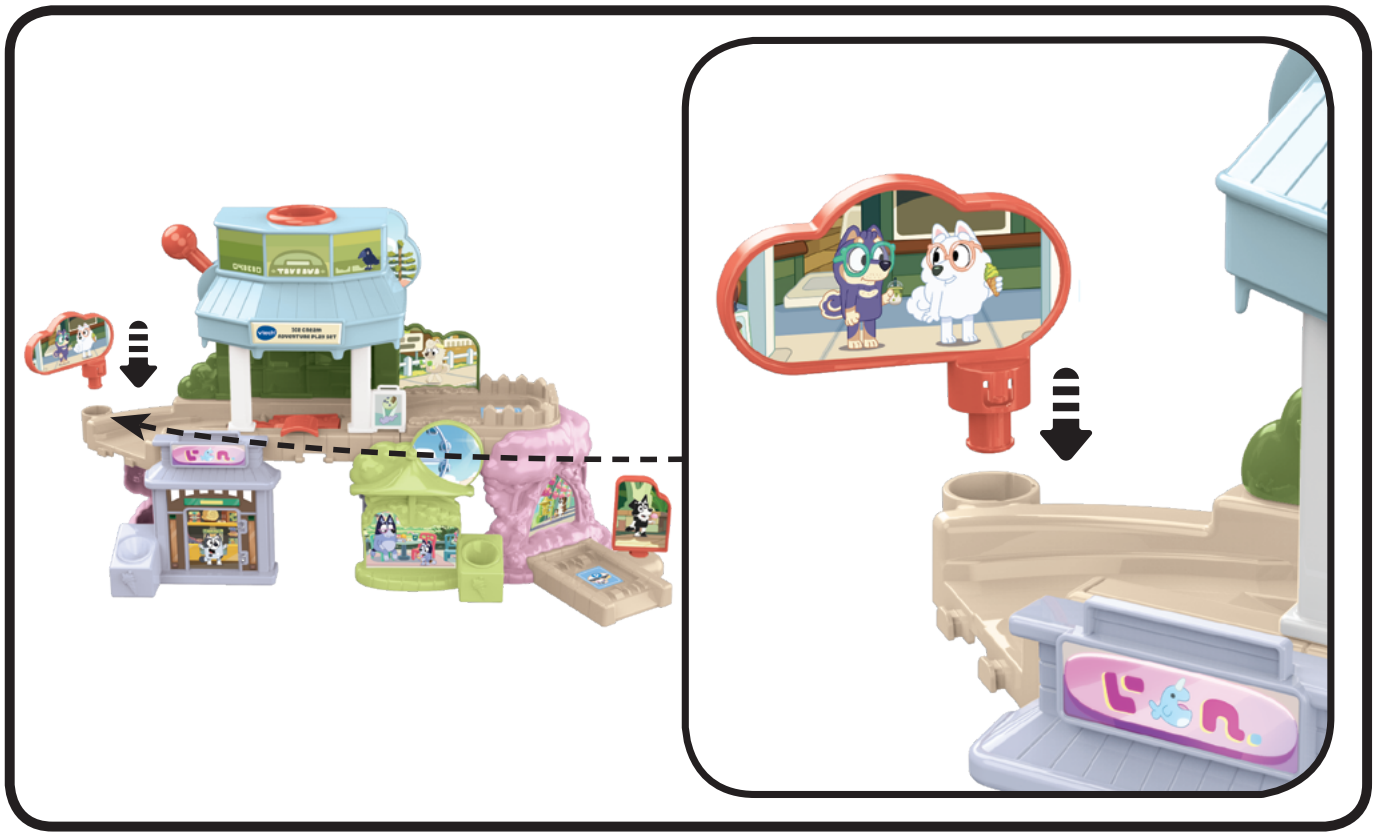

13. Insert the **Door** into the **Gift Shop**.

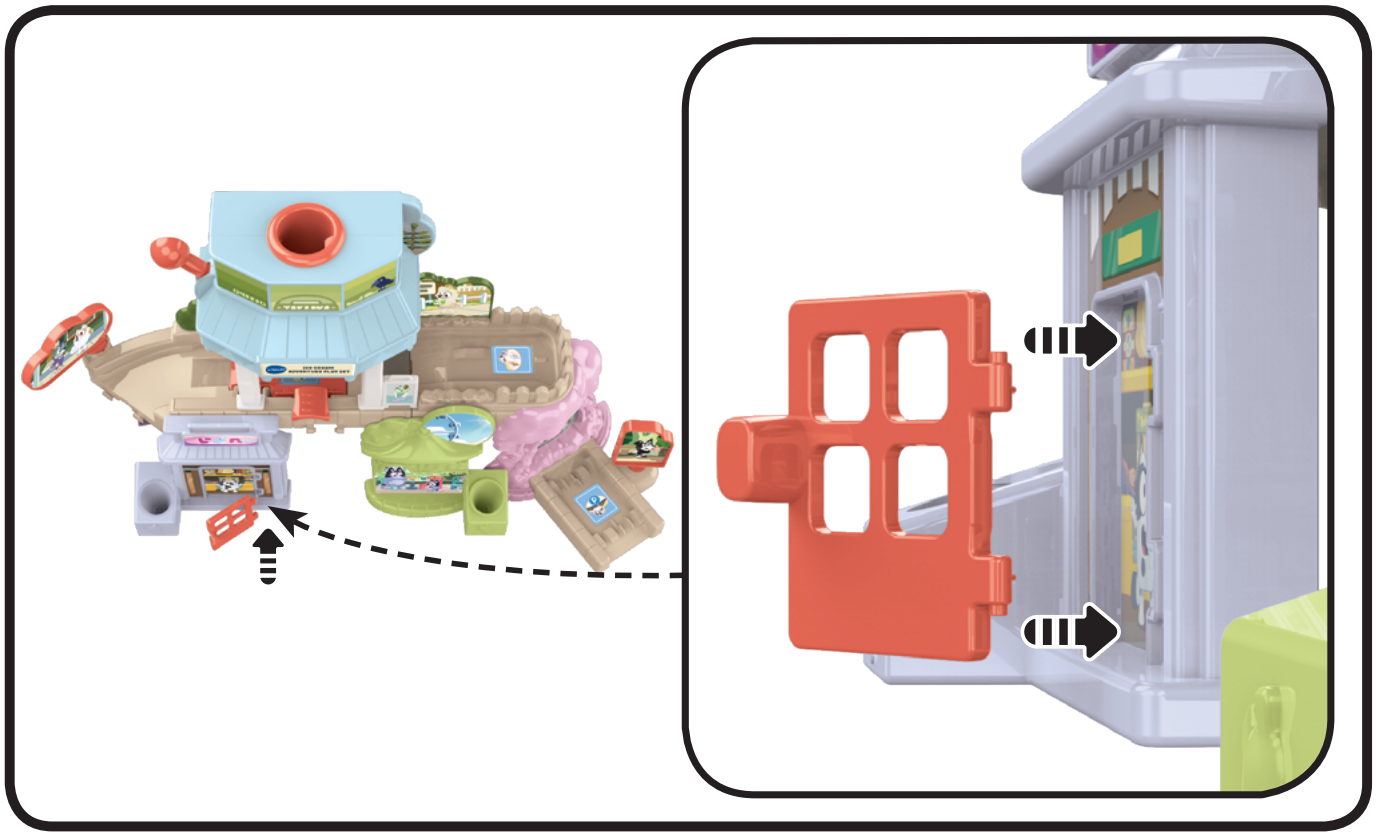

14. Insert the **Hanging Piece** into the one side of the **Launcher Track**.



15. Insert the **Long Slide Track** into the **Launcher Track**.

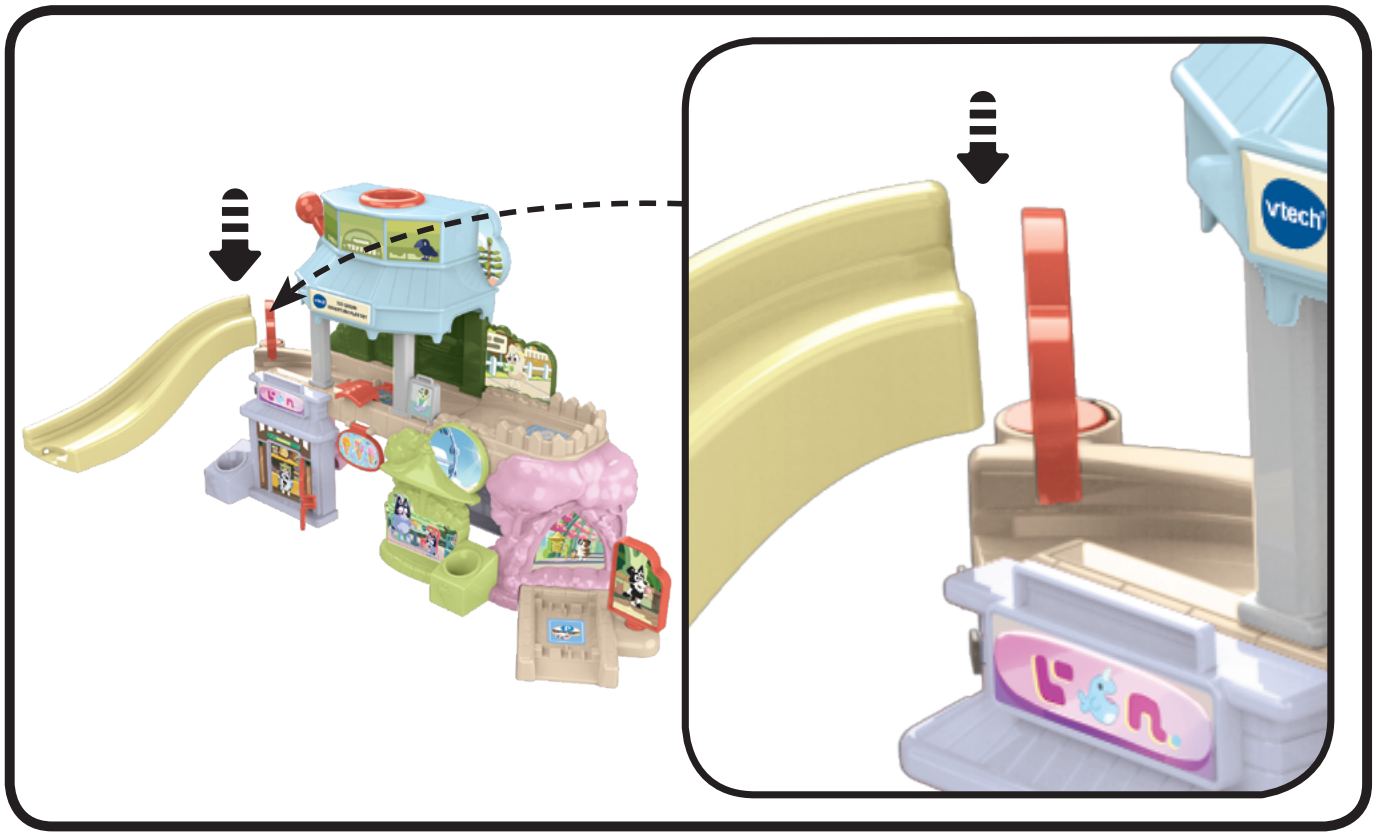

16. Insert the **Yellow Short Track** into the **Long Slide Track**.

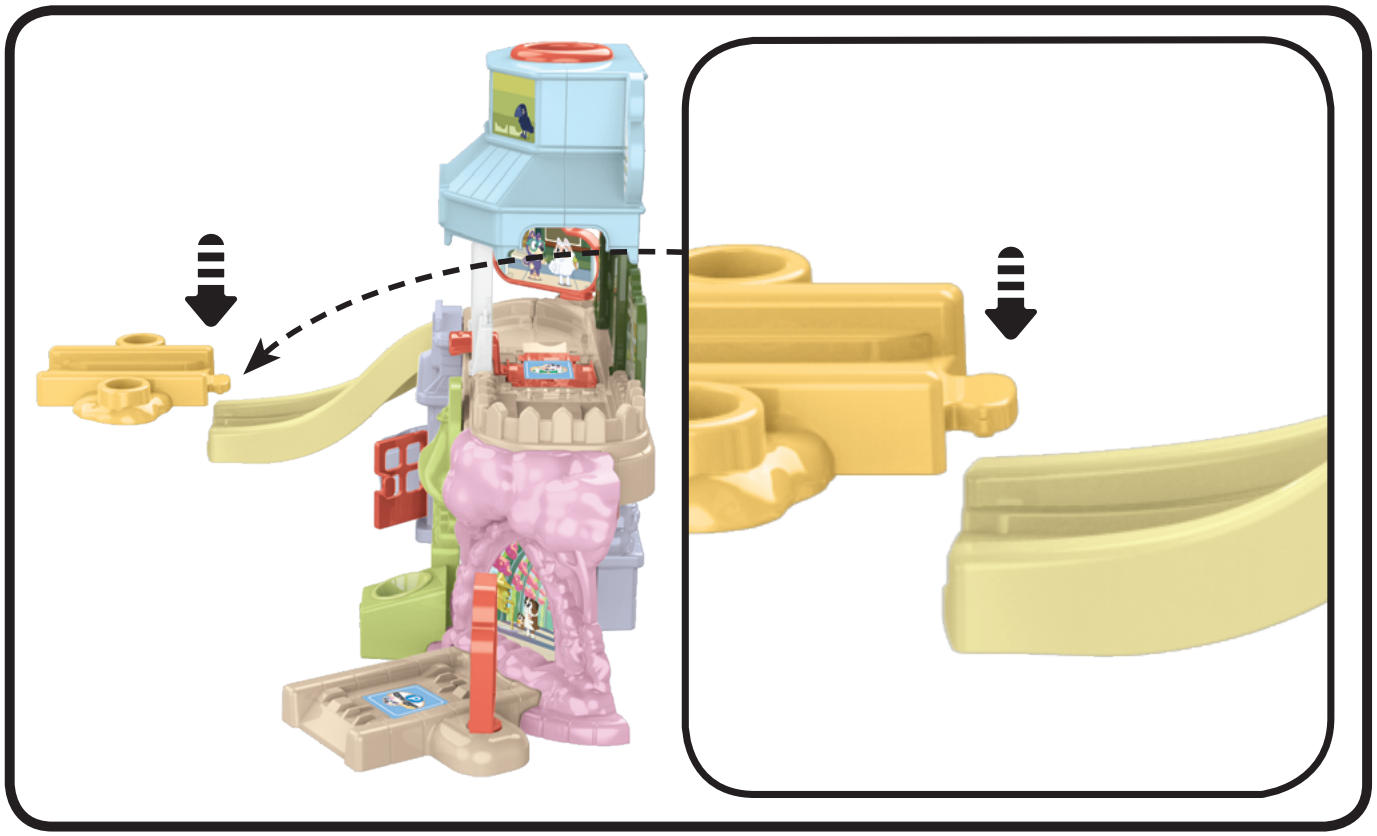

17. Insert the **Pair Of Green Palm Trees** into the **Yellow Short Track**.

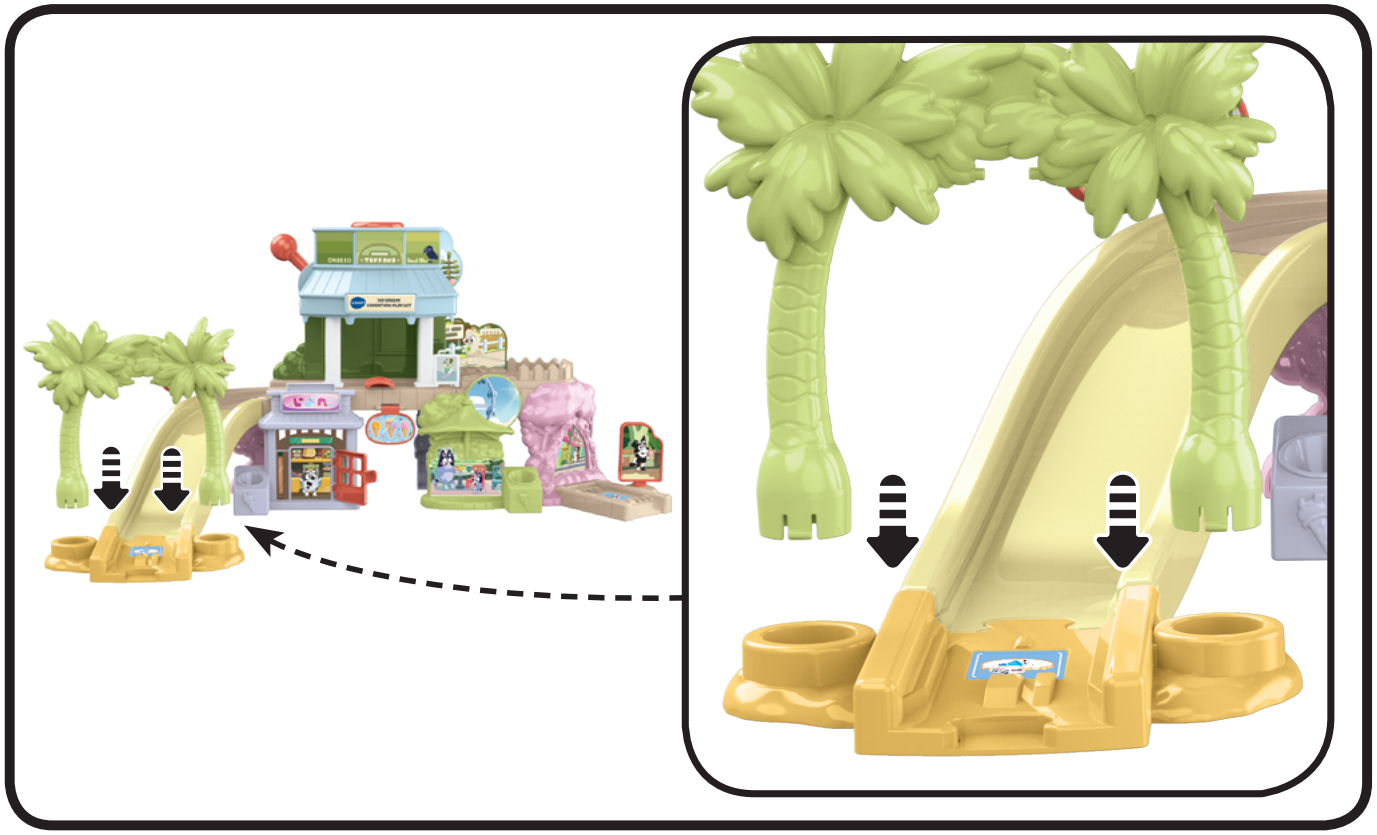

18. Insert the **Palm Leaf** among the **Pair Of Green Palm Trees**.

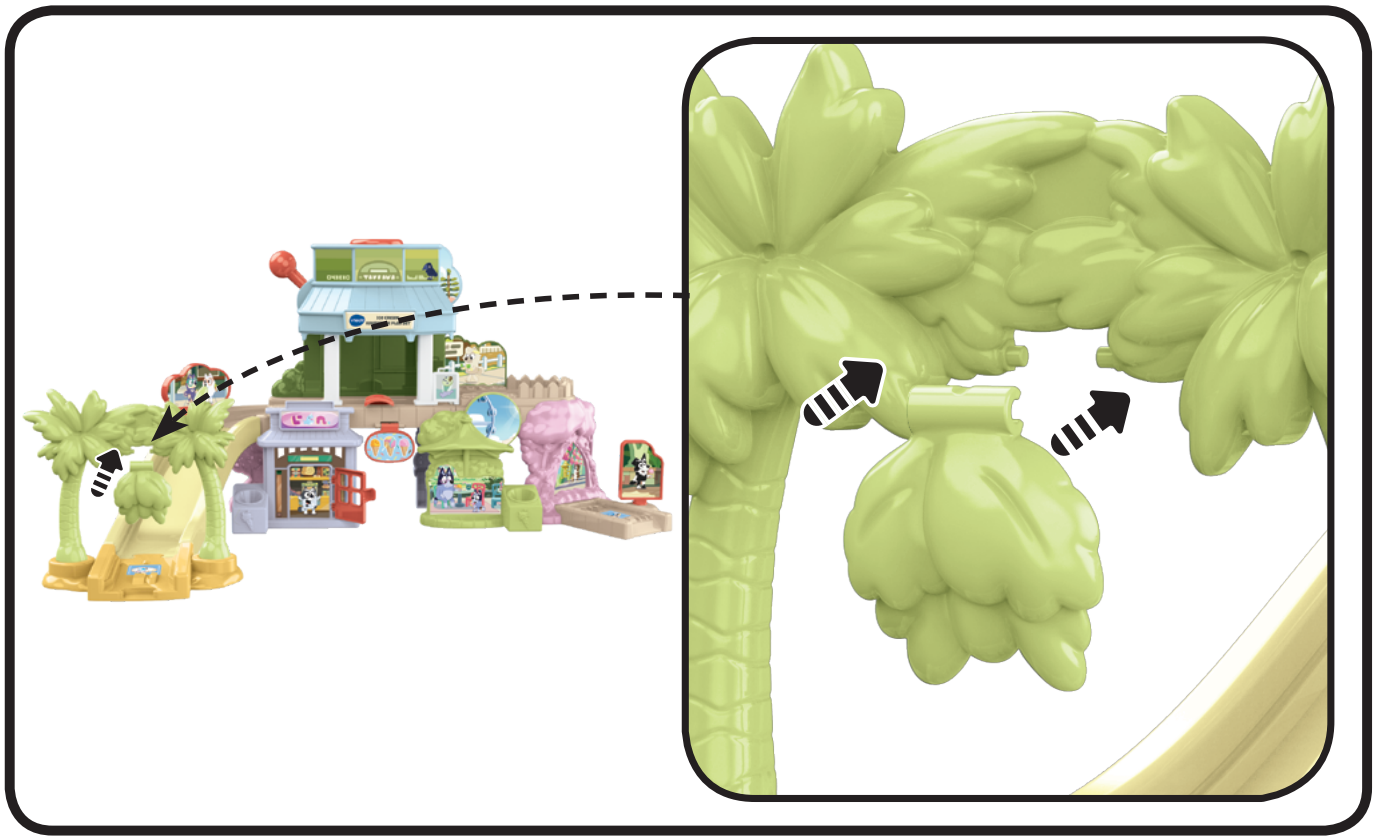

Once you've completed the above steps, you are ready to play! You can connect these pieces to other tracks (each sold separately).



PRODUCT FEATURES

Bluey Ice Cream Truck

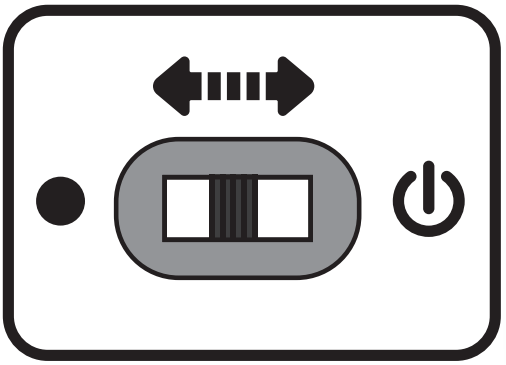

1. On/Off Switch

To turn the unit On, slide the **On/Off Switch** to the **On** ⏻ position. To turn the unit Off, slide the **On/Off Switch** to the **Off** ● position.

2. Automatic Shut-Off

To preserve battery life, the **Bluey Ice Cream Truck** will automatically power down after approximately 60 seconds without input. The unit can be turned On again by pressing the Bluey Character Button, pushing the **Bluey Ice Cream Truck** quickly or triggering a **SmartPoint**™ location.

NOTE: This vehicle is in Try-Me mode in the packaging. To turn off Try-Me mode, open the package then turn the **Bluey Ice Cream Truck** Off and On again to proceed with normal play. If the unit repeatedly powers down while playing, we suggest changing the batteries.

MODES

Bluey Ice Cream Truck

1. Slide the **On/Off Switch** to the On position. You will hear music, fun phrases and sounds. The lights will flash with the sounds.

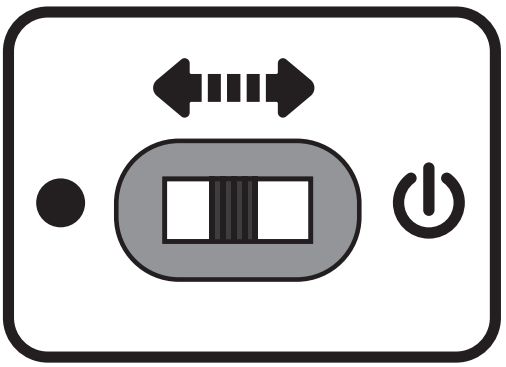

2. Press the **Bluey Character Button** to hear fun sounds, music and phrases. The lights will flash with the sounds.



3. Push the **Bluey Ice Cream Truck** quickly to hear fun sounds. While a melody is playing, continue pushing the **Bluey Ice Cream Truck** to add fun sounds on top of the melody. The lights will flash with sounds.



4. For added fun, the **Bluey Ice Cream Truck** interacts with the **Bluey Ice Cream Adventure Play Set**. Simply put the **Bluey Ice Cream Truck** on one of the play set's four **SmartPoint**™ locations to see the **Bluey Ice Cream Truck's** lights flash and hear fun sounds, short tunes and phrases. The **Bluey Ice Cream Truck** even interacts with other tracks (each sold separately).



Ice Cream Adventure Play Set

1. Place the **Bluey Ice Cream Truck** or any **SmartPoint**™ vehicle (each sold separately) on any of the play set's four **SmartPoint**™ locations to trigger fun sounds, music or phrases.



2. Put the **Ice Cream Cones** in the hole on the **Ice Cream Shop (Ice Cream Refill Point)**. Then put the **Bluey Ice Cream Truck** on the **SmartPoint**™ **Launcher Track**, and then pull the handle to let the ice cream cone fall into the **Bluey Ice Cream Truck**.



3. Put the **Bluey Ice Cream Truck** on the **SmartPoint**™ **Launcher**, then raise the launcher to let the **Bluey Ice Cream Truck** slide down along the track.



4. Move the **Road Gate** side to side to stop or let the **Bluey Ice Cream Truck** pass through.

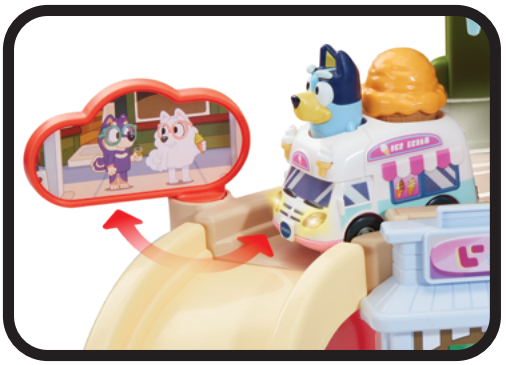

MELODY LIST

1. Duck Cake
2. Favourite Thing
3. Baby Race
4. Ice Cream 1
5. Ragdoll
6. Ice Cream 2

SONGS

Song 1

Lay an egg
Lay an egg,
Lay a chickenrat egg
For our breakfast,
For our breakfast.
Make a chickenrat egg
For our breakfast!

Song 2

Two little men in a flying saucer
Flew around the world one day,
They looked left and right
But they didn't like the sight,
And then they flew away

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**® products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk
www.vtech.com.au

© 2026 VTech.
All rights reserved.
IM-589700-001
Version:0